

GY-HM150U Firmware Update Procedure:

V1.01 improves the LCD monitor screen condition when the DC plug or battery is connected while the camcorder power switch was set to ON.

1. Unzip firmware folder. Copy the entire PRIVATE folder to a blank SD/SDHC Card.
2. Eject SD/SDHC card from Slot A, if present.
3. Unplug USB cable, if present.
4. Connect AC adapter to the DC terminal and attach the battery. Both power supplies must be present to access update mode.
5. Flip the LCD monitor so it is facing out to facilitate pressing of buttons.
6. While pressing OIS and MENU buttons together, set the STANDBY/ON OFF SW to ON condition. LCD screen displays "Update Ready".



7. Insert SD/SDHC card with firmware to Slot B. Screen displays "Please Wait" and then updating starts.
8. Do not interrupt power while updating is going on.
9. After approximately 3 minutes, "COMPLETE" is indicated on the screen.
10. Eject firmware card.
11. Unplug AC adapter and remove battery.
12. Reconnect power source and power up the camera.