

# 4K Ultra HD LCD Display

PS-840UD

ProVerité

 
Professional series




## Front View



- 1 Power indicator
- 2 IR Receiver



## Rear View

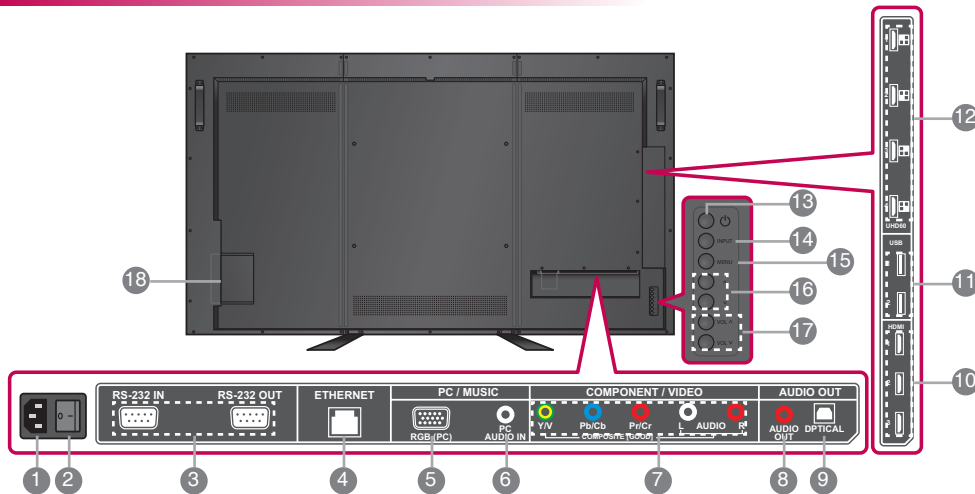


- |                            |                               |                    |
|----------------------------|-------------------------------|--------------------|
| 1 AC Power Input connector | 7 Component/Video Input ports | 13 Power button    |
| 2 AC switch                | 8 Stereo Audio Line out       | 14 Input button    |
| 3 RS-232C Serial ports     | 9 Optical Audio out           | 15 Menu button     |
| 4 RJ-45 port               | 10 HDMI ports                 | 16 Up/Down button  |
| 5 RGB port                 | 11 USB ports                  | 17 Volume button   |
| 6 PC Audio Input port      | 12 HDMI-UHD60 ports           | 18 OPS Module Slot |

## Making Connections

### Connect to Power




### Connect to Computer/Laptop

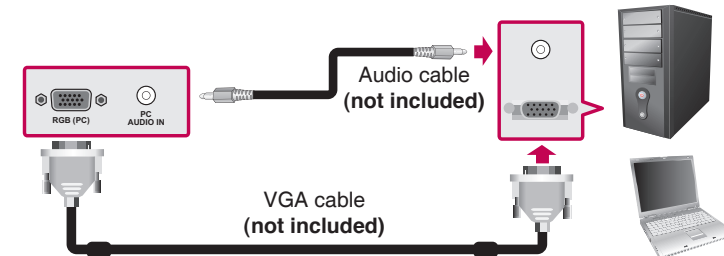


### Connect to HD/UHD Devices (DVD/Blu-ray Player, Game Console, Set-top Box)

 
#### HDMI connection



#### Component/Video connection

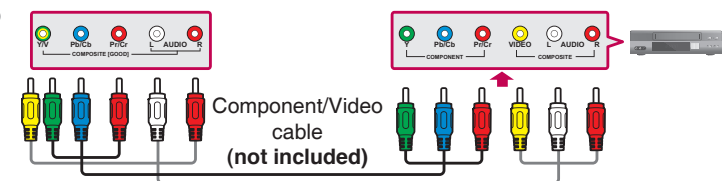

### Connect to Audio Systems/Headphones

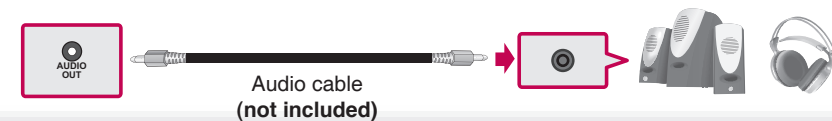

# 4K Ultra HD LCD Display

PS-840UD

ProVerité


Professional series

## Daisy Chain Connection


Connect the RS-232C cable as shown in the illustration.

\* The RS-232C protocol is used for communication between the PC and display. You can turn the display on/off or adjust the OSD menu from your PC.


RS-232C cable  
(not included)

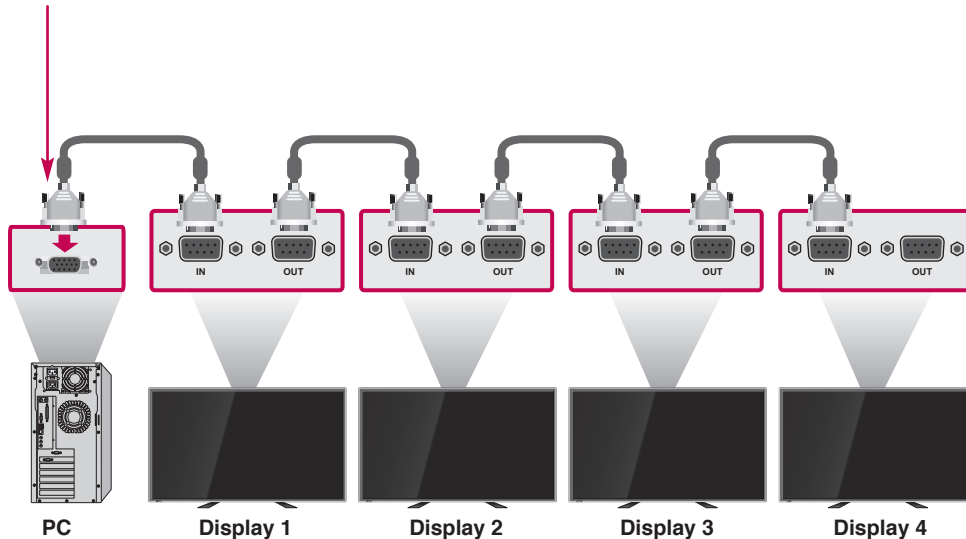

## Stand Installation

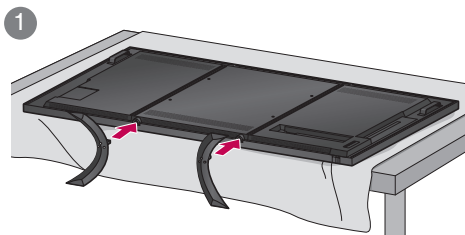

Place the display on a flat surface and attach the foot stand.

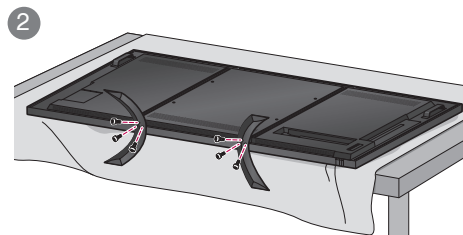

Secure the stand with the included screws.


## Using Remote Control

- OK**
  - Enter the submenu.
  - Confirm the selection.
- Multimedia**
  - Enter the multimedia mode.
- Input**
  - Switch the input source.
- Info**
  - Display the input information.
- Left**
  - Decrease the values.
  - Change the options.
- Back**
  - Return to the previous menu/screen.
- Down**
  - Move downward on the selection.
  - Change selected item.
- Numbers (0~9, -)**
  - Input the number.
- Power**
  - Turn the display on/off.
- Wide**
  - Change the display mode.
- Audio Only**
  - Only output audio from the display speaker.
- Up**
  - Move upward on the selection.
  - Change selected item.
- Menu**
  - Display OSD (on-screen display) menu.
- Exit**
  - Exit OSD menu.
- Right**
  - Increase the values.
  - Enter the submenu.
  - Change the options.
- Mute**
  - Mute the audio.


## OSD Menu

To change the settings on the OSD menu, use the buttons on the remote control or control panel.


### Input menu

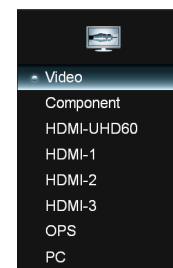


### Picture menu

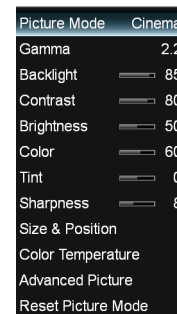

### Audio menu

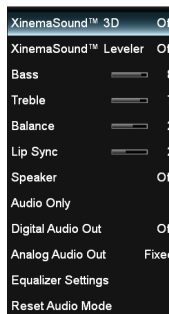


### Setup menu

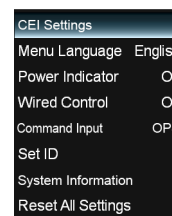

### Ethernet menu



### Wide menu

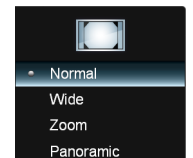

### Sleep Timer menu

