

# 4K Ultra HD LCD Display

RS-840UD

 
**REFERENCE SERIES**




## Front View



- ① Power indicator
- ② IR Receiver



## Rear View

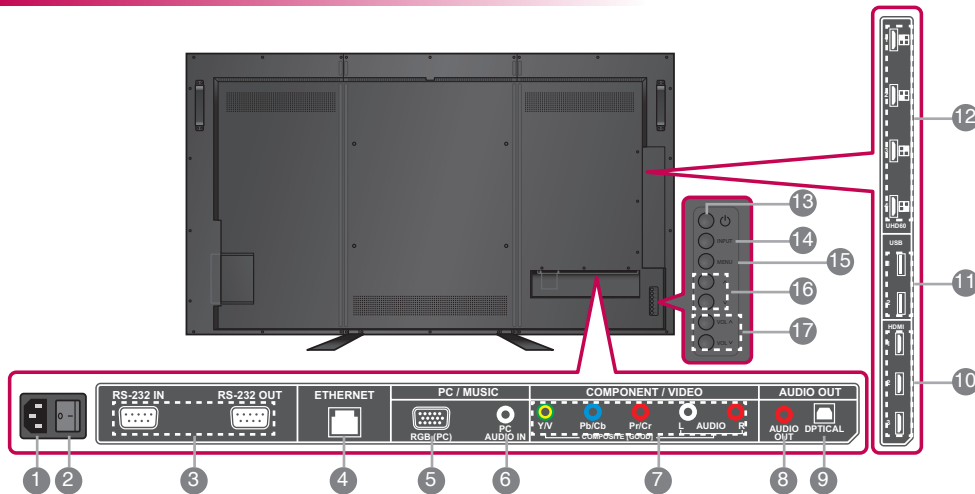


- |                            |                               |                  |
|----------------------------|-------------------------------|------------------|
| ① AC Power Input connector | ⑦ Component/Video Input ports | ⑬ Power button   |
| ② AC switch                | ⑧ Stereo Audio Line out       | ⑭ Input button   |
| ③ RS-232C Serial ports     | ⑨ Optical Audio out           | ⑮ Menu button    |
| ④ RJ-45 port               | ⑩ HDMI ports                  | ⑯ Up/Down button |
| ⑤ RGB port                 | ⑪ USB ports                   | ⑰ Volume button  |
| ⑥ PC Audio Input port      | ⑫ HDMI-UHD60 ports            |                  |

## Making Connections

### Connect to Power




### Connect to Computer/Laptop

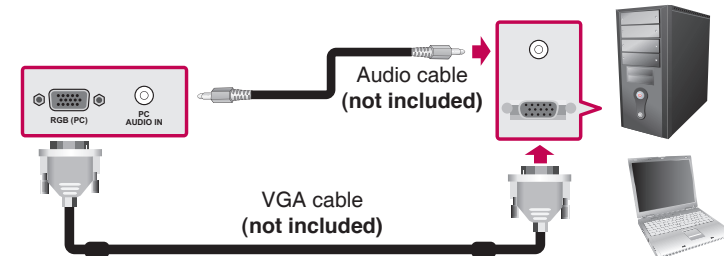


### Connect to HD/UHD Devices (DVD/Blu-ray Player, Game Console, Set-top Box)

 
HDMI connection



Component/Video connection

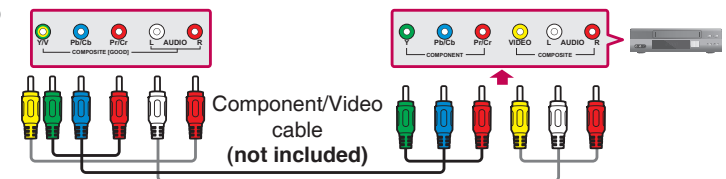

### Connect to Audio Systems/Headphones

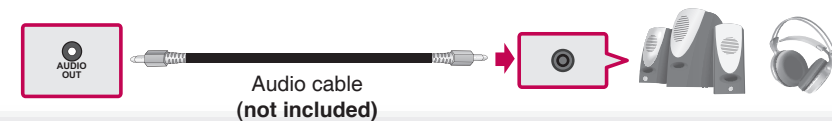

# 4K Ultra HD LCD Display

RS-840UD


REFERENCE SERIES

## Daisy Chain Connection


Connect the RS-232C cable as shown in the illustration.

\* The RS-232C protocol is used for communication between the PC and display. You can turn the display on/off or adjust the OSD menu from your PC.


RS-232C cable  
(not included)

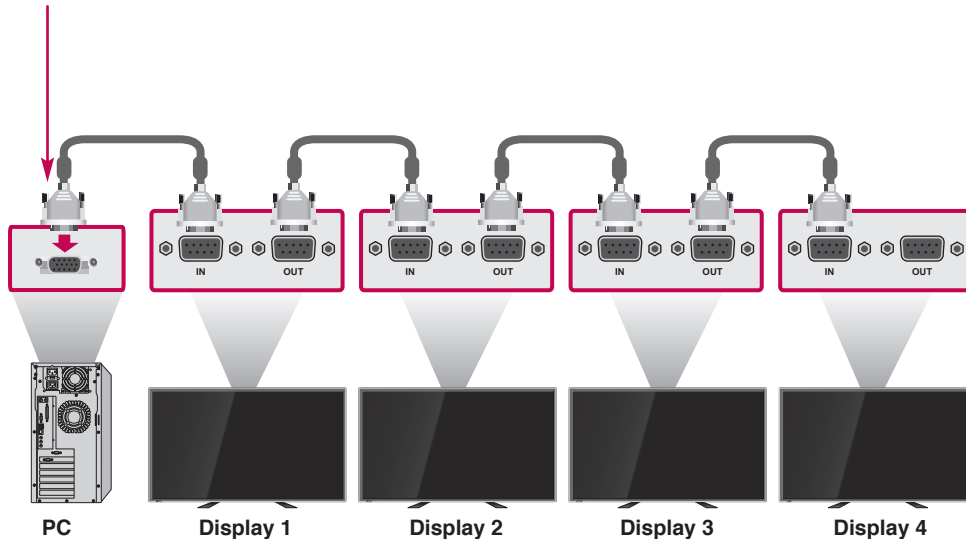

## Stand Installation

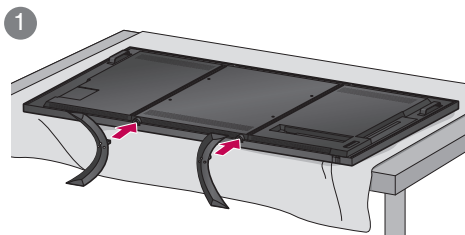

Place the display on a flat surface and attach the foot stand.

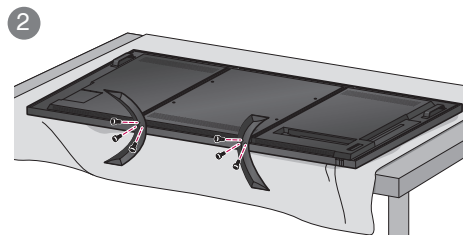

Secure the stand with the included screws.


## Using Remote Control

- OK**
  - Enter the submenu.
  - Confirm the selection.
- Multimedia**
  - Enter the multimedia mode.
- Input**
  - Switch the input source.
- Info**
  - Display the input information.
- Left**
  - Decrease the values.
  - Change the options.
- Back**
  - Return to the previous menu/screen.
- Down**
  - Move downward on the selection.
  - Change selected item.
- Numbers (0~9, -)**
  - Input the number.
- Power**
  - Turn the display on/off.
- Wide**
  - Change the display mode.
- Audio Only**
  - Only output audio from the display speaker.
- Up**
  - Move upward on the selection.
  - Change selected item.
- Menu**
  - Display OSD (on-screen display) menu.
- Exit**
  - Exit OSD menu.
- Right**
  - Increase the values.
  - Enter the submenu.
  - Change the options.
- Mute**
  - Mute the audio.

## OSD Menu

To change the settings on the OSD menu, use the buttons on the remote control or control panel.


### Input menu

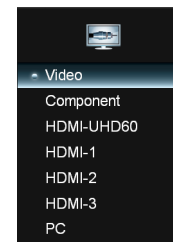


### Picture menu



### Audio menu

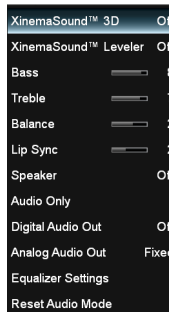


### Setup menu

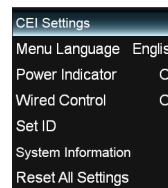

### Ethernet menu



### Wide menu

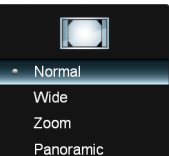

### Sleep Timer menu

