

2018 ILA-FPJ Remote Control Codes Table (V1.1)

09 October 2018

1. Maker code

73 H (Code:A) / 63 H (Code:B)

2. Operation code

Update	Code	Button	Remote Controller		Model			CONTENTS	Type
			MH-27G	Repeat	DLA-RS3000NX9 etc.	DLA-RS2000N07 etc.	DLA-RS1000NX5 etc.		
	01H	↑	✓	✓	✓	✓	✓	UP	Direct
	02H	↓	✓	✓	✓	✓	✓	DOWN	Direct
	03H	BACK	✓	✓	✓	✓	✓	Back/Undisplays message,adjustment gauge,menu	Direct
	05H	ON	✓	✓	✓	✓	✓	Powers on	Direct
	06H	STAND BY	✓	✓	✓	✓	✓	Stand By	Direct
	08H	INPUT	✓	✓	✓	✓	✓	Switches Input Port	Toggle
	10H	HIDE	✓	✓	✓	✓	✓	Switches Hide ON/OFF	Toggle
	20H	LENS.AP /	-	-	✓	✓	✓	Displays adjustment bar of Iris setting	Gauge
	23H	Anamorphic(A)	-	-	✓	✓	✓	Switches Anamorphic A	Direct
	24H	Anamorphic(Off)	-	-	✓	✓	✓	Switches Anamorphic off	Direct
	27H	Aspect(Zoom)	-	-	✓	✓	✓	Switches Aspect to Zoom	Direct
	2BH	Anamorphic(B)	-	-	✓	✓	✓	Switches Anamorphic B	Direct
	2EH	Menu	✓	✓	✓	✓	✓	Displays/undisplays menu	Direct
	2FH	OK	✓	✓	✓	✓	✓	OK	Direct
	30H	Lens	✓	✓	✓	✓	✓	Displays adjustment menu of Lens control/Switches setting of lens(focus/zoom/shift)	Menu
	33H	Anamorphic(C)	-	-	✓	✓	✓	Switches Anamorphic C	Direct
	34H	+	✓	✓	✓	✓	✓	Moves the cursor to right/+ in adjustment gauge	Direct
	36H	-	✓	✓	✓	✓	✓	Moves the cursor to left/- in adjustment gauge	Direct
	47H	Clear Motion Drive(Off)	-	-	✓	✓	✓	Switches Clear Motion Drive to Off	Direct
	48H	Clear Motion Drive(Low)	-	-	✓	✓	✓	Switches Clear Motion Drive to Low	Direct
	49H	Clear Motion Drive(High)	-	-	✓	✓	✓	Switches Clear Motion Drive to High	Direct
	4AH	Clear Motion Drive(I.T.)	-	-	✓	✓	✓	Switches Clear Motion Drive to Inverse Telecine	Direct
	68H	CINEMA	-	-	✓	✓	✓	Switches to "CINEMA" in Picture Mode	Direct
	69H	FILM	-	-	✓	✓	-	Switches to "FILM" in Picture Mode	Direct
	6AH	NATURAL	-	-	✓	✓	✓	Switches to "NATURAL" in Picture Mode	Direct
	6CH	USER1	-	-	✓	✓	✓	Switches to "USER1" in Picture Mode	Direct
	6DH	USER2	-	-	✓	✓	✓	Switches to "USER2" in Picture Mode	Direct
	6EH	USER3	-	-	✓	✓	✓	Switches to "USER3" in Picture Mode	Direct
	6FH	THX	-	-	✓	-	-	Switches to "THX" in Picture Mode	Direct
	70H	HDMI 1	-	-	✓	✓	✓	Switches to HDMI 1	Direct
	71H	HDMI 2	-	-	✓	✓	✓	Switches to HDMI 2	Direct
	72H	PIC.ADJ.	-	-	✓	✓	✓		Toggle
	73H	ADVANCED	✓	✓	✓	✓	✓	Displays Advanced page of menu	Menu
	74H	INFO	✓	✓	✓	✓	✓	Displays information page of menu	Menu
	75H	GAMMA	-	-	✓	✓	✓	Switches Gamma mode	Toggle
	76H	C.TEMP	-	-	✓	✓	✓	Switches Color Temp mode	Toggle
	88H	COLOR PROFILE	✓	✓	✓	✓	✓	Switches "Color Profile" in the OSD menu order It is different depending on the Picture Mode.	Toggle
	8AH	CLEAR MOTION DRIVE	✓	✓	✓	✓	✓	Change of "Clear Motion Drive" settings	Toggle
	AEH	Aspect(Auto)	-	-	✓	✓	✓	Switches Aspect to Auto	Direct
	AFH	Aspect(Native)	-	-	✓	✓	✓	Switches Aspect to Just	Direct
	CSH	Anamorphic	-	-	✓	✓	✓	Change of "Anamorphic mode"	Toggle
	CAH	USER4	-	-	✓	✓	✓	Switches to "USER4" in Picture Mode	Direct
	CBH	USER5	-	-	✓	✓	✓	Switches to "USER5" in Picture Mode	Direct
	CCH	USER6	-	-	✓	✓	✓	Switches to "USER6" in Picture Mode	Direct
	DOH	HIDE(On)	-	-	✓	✓	✓	Switches Hide to On	Direct
	D1H	HIDE(Off)	-	-	✓	✓	✓	Switches Hide to Off	Direct
	D2H	Solenoid(Normal)	-	-	✓	✓	-	Switches Solenoid to Normal (*1)	Direct
	D3H	Solenoid(Wide)	-	-	✓	✓	-	Switches Solenoid to Wide (*1)	Direct
	D4H	Setting Memory	✓	✓	✓	✓	✓	Open the list of "Setting Memory"	Direct
	D5H	3D Setting	-	-	✓	✓	✓	Open "3D Setting" OSD	Toggle
	D6H	3D Format	-	-	✓	✓	✓	Change of "3D format"	Toggle
	D7H	User	-	-	✓	✓	✓	Change of "User picture mode"	Toggle
	D8H	Installation MODE1	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	D9H	Installation MODE2	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	DAH	Installation MODE3	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	DBH	3D Format (Auto)	-	-	✓	✓	✓	Switches 3D format to Auto	Direct
	DCH	3D Format (Side by Side)	-	-	✓	✓	✓	Switches 3D format to Side by Side	Direct
	DDH	3D Format (Top and Bottom)	-	-	✓	✓	✓	Switches 3D format to Top and Bottom	Direct
	DEH	3D Format (OFF: 2D)	-	-	✓	✓	✓	Display by 2D format compulsorily	Direct
	E1H	HLG	-	-	✓	✓	✓	Switches to "HLG" in Picture Mode	Direct
	E5H	Installation MODE4	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	E6H	Installation MODE5	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	E7H	Installation MODE6	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	E8H	Installation MODE7	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	E9H	Installation MODE8	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	EAH	Installation MODE9	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	EBH	Installation MODE10	-	-	✓	✓	✓	Change of "Installation mode" or "lens memory" to mentioned number (*2)	Menu
	EDH	HDR10	-	-	✓	✓	✓	Switches to "HDR10" in Picture Mode	Direct
	FOH	MPC	✓	✓	✓	✓	✓	Displays "MPC Level Menu"	Direct
	F4H	Picture Mode	✓	✓	✓	✓	✓	Goes to "Picture Mode" Tab in User Menu	Direct
	F5H	Gamma Settings	✓	✓	✓	✓	✓	Goes to "Gamma" Tab in User Menu	Direct
	F7H	Name Edit	-	-	✓	✓	✓	Goes to "Name Edit" Tab in User Menu	Direct
	F8H	Low Latency	-	-	✓	✓	✓	Change of "Low Latency mode"	Toggle

(*1) This command is effective in the following cases.
 - No Input
 - Displaying test pattern.