



The BR-EN900 Quick Setup Guide

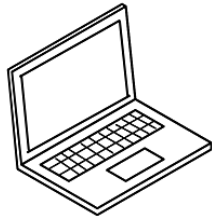

- Set PC IP address to 192.168.1.xxx
- Connect to the Ethernet 1 port
- Enter **192.168.1.3** in the browser
- Default password – *jvc1234*



192.168.1.3


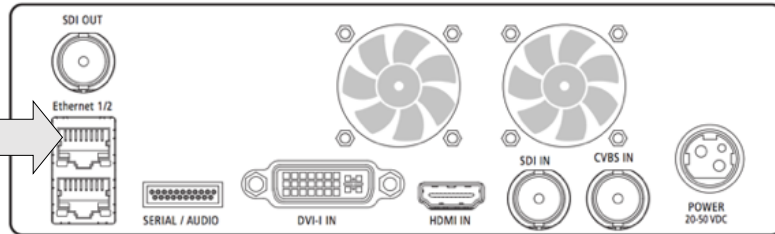


- Configure *IP address*, **Default Gateway** and *DNS servers*
- Confirm that **Use as Primary Default Gateway** is “checked” for the LAN port in use.
- Click *Apply* to save settings

Select Input
Configure channels

Save Configuration
Select *Auto Start*

The BR-EN900 features two encoding channels – HEVC and H.264, each with a separate IP destination. **Input** must be selected in the HEVC channel settings, the H.264 channel will follow HEVC selection. Both channels encode video from the same input but can stream to different destinations / IP addresses.

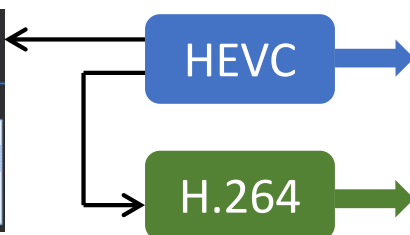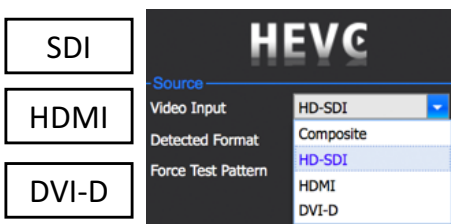

Protocols:

- UDP TS
- RTP TS
- Pro-MPEG (RTP+SMPTE2022 FEC)
- Zixi

- RTP ES (RTSP pull)
- UDP TS
- RTP TS
- Pro-MPEG (RTP+SMPTE2022 FEC)
- Zixi
- RTMP (CDN)

Remember to click **Apply** after any change.
Save existing configuration and select *Auto Start*
to apply all settings after power OFF/ON

