

* The VN-H237VPU camera is shown in the illustration.

Thank you for purchasing this product.
Before operating this unit, please read the instructions carefully
to ensure the best possible performance.

The standard camera installation procedure can be found on the back side of this page.

© 2012 JVC KENWOOD Corporation

LST1236-001D

Safety precautions

The power rating is AC 24 V, 50/60 Hz/PoE (VN-H257VPU) or PoE (VN-H237VPU). Use the correct voltage. Always use the AC 24 V power source that is insulated from the primary power supply. (VN-H257VPU)
A level of supplied power that exceeds the ratings may result in failures, smoke or fire. If the camera breaks down, turn off the power and contact our service center immediately.
If a level of power that exceeds the ratings is supplied, the internal components may be damaged even if no abnormalities are observed in the appearance and/or operation of the camera. Contact our service center immediately to arrange for an inspection (charged separately).

Attachments and accessories

Instructions	2	WRENCH	1
CD-ROM	1	SILICA GEL	1
WARRANTY CARD (For USA) (VN-H237VPU)... 1		TEMPLATE	1
FERRITE CORE (VN-H257VPU)	1		

Operating Precautions

Storage and Operating Environment

- Do not install the camera in the following environments.
Doing so may result in malfunctions or failure.
 - Hot or cold locations beyond the allowable operating temperature range (-10 °C to 50 °C).
 - Locations beyond the allowable operating humidity range (20 %RH to 90 %RH) (no condensation allowed).
 - Near equipment that emits strong magnetic fields, such as transformers or motors.
 - Near equipment that emits radio waves, such as transceivers and mobile phones.
 - Locations in which excessive dust or sand exist.
 - Locations that are subject to excessive vibration.
 - Special environment where a flammable atmosphere is present.
 - Locations that may contain steam or oil, such as kitchens.
 - Locations that are subject to radiation emissions, X-rays or corrosive gases.
 - Locations where chemicals are used, such as swimming pools.
- Use of this camera and cables connected to this camera at locations where strong electrical or magnetic waves are generated (e.g. near a radio, TV, transformer, monitor, etc.) may result in images being affected by noise interference or colors being changed.
- Do not install this camera at locations where cold air is circulated, such as near the air vent of an air conditioner. The drastic change in temperature may fog up the dome cover.
- Do not install this camera at a location that traps heat. This camera discharges heat from the surface of the main unit. Do not install it at locations that may trap heat, such as wall corners.
- This camera is IP66 compliant. However, we do not guarantee that water has no harmful effects in all environments.

Handling Precautions

- Do not block the vents.
Inadequate heat ventilation may cause this camera to malfunction. Be sure not to block the vents around the camera.

Copyright Protection

- With the exception of the user being the copyright holder or when permission such as for duplication has been granted by the copyright holder, permission is required in principle to duplicate, modify or transmit copyrighted material.
- Unauthorized duplication, modification or transmission of copyrighted material may constitute a copyright infringement, and the user may be liable to pay compensation for damages. When using copyrighted material, be sure to check the license agreement or the copyrighted material thoroughly.
- When rights or rights holders are involved with regard to the targeted subject of duplication, permission may be required for shooting or using (processing) it. Be sure to check the licensing conditions thoroughly.
- Use of recorded materials without first gaining the prior consent of the author is forbidden under copyright law except in cases of personal use.

Disclaimer

- The motion detection feature is not a feature to prevent theft or fire. Our company shall not be liable for any loss or damage resulting from the use of this feature.
- We shall not be responsible for any loss or damage caused in the event of privacy invasion as a result of camera footage created by this product.

SAFETY PRECAUTIONS

FOR USA

These are general IMPORTANT SAFEGUARDS and certain items may not apply to all appliances.

IMPORTANT SAFEGUARDS

1. Read all of these instructions.
2. Save these instructions for later use.
3. All warnings on the product and in the operating instructions should be adhered to.
4. Unplug this appliance system from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.
6. Do not use this appliance near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
7. Do not place this appliance on an unstable cart, stand, or table. The appliance may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart or stand recommended by the manufacturer, or sold with the appliance. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
8. Slots and openings in the cabinet and the back or bottom are provided for ventilation, and to insure reliable operation of the appliance and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the appliance on a bed, sofa, rug, or other similar surface. This appliance should never be placed near or over a radiator or heat register. This appliance should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
9. This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company. For appliance designed to operate from battery power, refer to the operating instructions.
10. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
11. Do not allow anything to rest on the power cord. Do not locate this appliance where the cord will be abused by persons walking on it.
12. Follow all warnings and instructions marked on the appliance.
13. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
14. Never push objects of any kind into this appliance through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.
15. Do not attempt to service this appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
16. Unplug this appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the appliance.
 - c. If the appliance has been exposed to rain or water.
 - d. If the appliance does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.
 - e. If the appliance has been dropped or the cabinet has been damaged.
 - f. When the appliance exhibits a distinct change in performance - this indicates a need for service.
17. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
18. Upon completion of any service or repairs to this appliance, ask the service technician to perform routine safety checks to determine that the appliance is in safe operating condition.



FOR USA AND CANADA

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Information for USA

This device complies with part 15 of the FCC Rules. Changes or modifications not approved by JVC could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION

CHANGES OR MODIFICATIONS NOT APPROVED BY JVC
COULD VOID USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION (FOR CANADA)

RENSEIGNEMENT (POUR CANADA)

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil num rique de la Class A est conforme à la norme NMB-003 du Canada.

Due to design modifications, data given in this instruction book are subject to possible change without prior notice.

FOR EUROPE

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Dear Customer

This apparatus is in conformance with the valid European directives and standards regarding electromagnetic compatibility and electrical safety.
European representative of JVC KENWOOD Corporation is:
JVC Technical Services Europe GmbH
Postfach 10 05 04
61145 Friedberg
Germany

Sehr geehrter Kunde, sehr geehrte Kundin, dieses Gerät stimmt mit den gültigen europäischen Richtlinien und Normen bezüglich elektromagnetischer Verträglichkeit und electrischer Sicherheit überein.
Die europäische Vertretung für die JVC KENWOOD Corporation ist:
JVC Technical Services Europe GmbH
Postfach 10 05 04
61145 Friedberg
Deutschland

Information for Users on Disposal of Old Equipment

[European Union]



This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.
By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Attention:
This symbol is only valid in the European Union.

(Business users)

If you wish to dispose of this product, please visit our web page <http://www.jvc.eu> to obtain information about the take-back of the product.


[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

- This installation should be made by a qualified service person and should conform to all local codes.
- This installation shall be in accordance with the National Electrical Code, ANSI/NFPA 70. The unit is to be powered by a Listed Class 2 power supply or using the PoE.
- The AC 24 V power supply should conform to the following: Class 2 only (For USA), Isolated power supply only (For Europe and other).
- Any Mention in this manual of Alarm inputs have not been evaluated by UL to be used for Burglar Alarm Functionality.
- Special technique is required when installing this product. Please refer to your dealer for installation.
- Rating label is pasted at the bottom or top of the camera unit.
- JVC is not liable for any compensation if you drop the camera due to insecure mounting by not following the installation description. Pay careful attention during installation.
- When mounting this product to a ceiling or wall, select a location strong enough to support the weight of this camera. If the location is not strong enough to support the weight, be sure to reinforce the ceiling or wall before installation.
- The camera may drop if the mounting screws are not tightened securely. Check that the screws are tightened appropriately and securely.
- Do not install the camera near lighting fixtures of high temperature, such as spot lights. It might result in failure or fires.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable program and in any literary, dramatic musical, or artistic work embodied therein.
- The latest version
Please visit V.NETWORKS web site to check the latest firmware at
<http://www3.jvckenwood.com/english/pro/vnetworks/index.html>

Removing the dome cover and the inner dome


Remove the dome cover and the inner dome.

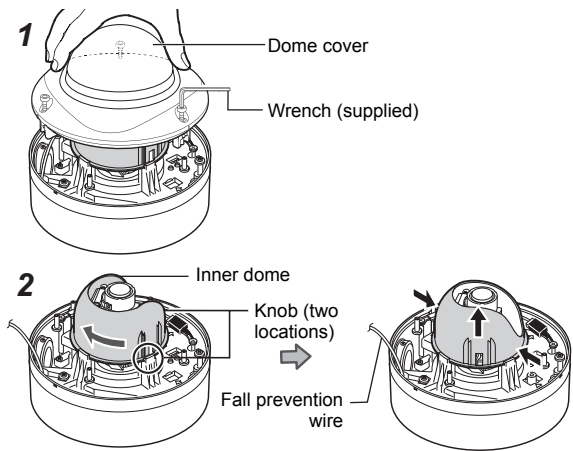


- Memo
- When you remove the dome cover, use the supplied wrench.
 - To remove the inner dome, turn it 45 degrees and grasp the inner dome near the catches (two locations). It will come off easily.

Using the duct hole on the side

Loosen the fastening screws (M3 x 6 mm) and remove the plug for the duct hole using a flat-blade screwdriver.

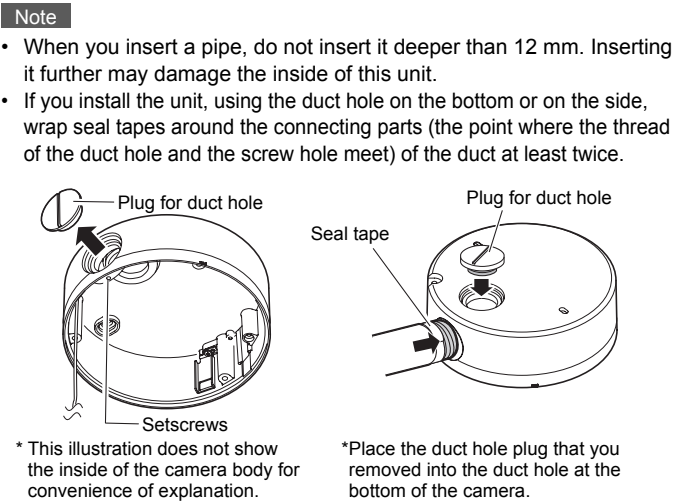

Cabling

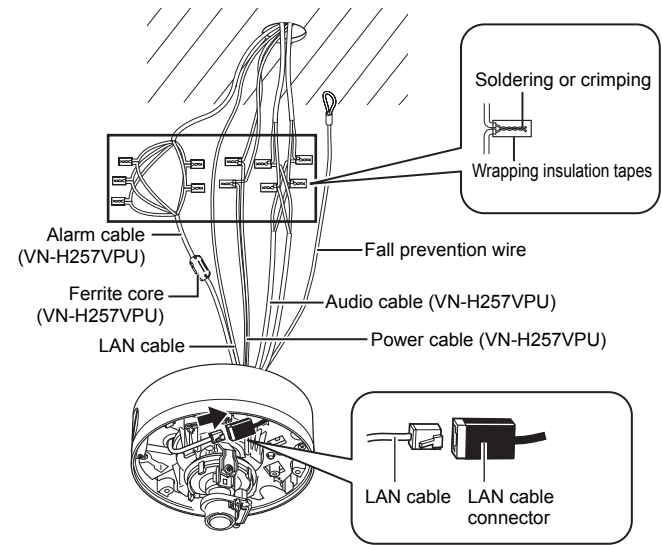


Connect the AC 24 V power cable, alarm cable, and audio cable to their respective connectors by crimping them or soldering them. Wrap unused connectors and the ends of unused cables with insulation tape and waterproof tape. Make sure the LAN cable is completely inserted into the connector. After confirming the connection, waterproof it by wrapping it with waterproof tape. Attach the supplied ferrite core only to the Alarm I/O cable. (VN-H257VPU) Securely attach the fall prevention wire to a section that is sufficiently strong (a slab or channel).

- Note
- Always use the AC 24 V power supply that is insulated from the primary power circuit. An autotransformer or similar single winding transformer may fail or damage the camera.
 - If you use both the AC 24 V power cable and the PoE-based LAN cable simultaneously, the camera may fail. Always supply power using either method.

- Memo
- Put the cables into the hole that you opened on the ceiling or wall after connecting.

Connecting the LAN cable


When using the duct hole at the bottom of the base or on the side, attach the LAN cable as follows.

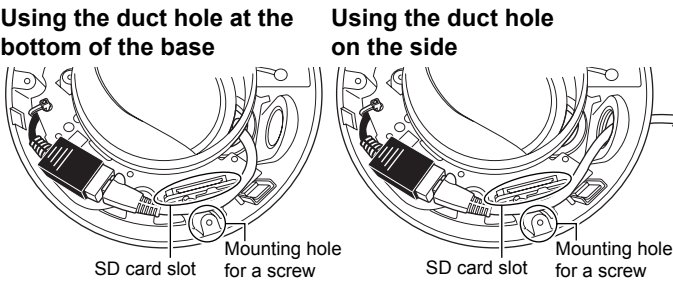


- Note
- Make sure that the LAN cable does not cover the SD card slot.
 - Writing data to and reading data from an SD card is not currently supported. Do not insert an SD card.
 - When connecting the LAN cable, keep it away from the mounting hole for a screw.

Waterproofing

Filling the dust hole and the mounting holes (two locations) with waterproof seal material (GE silicon).

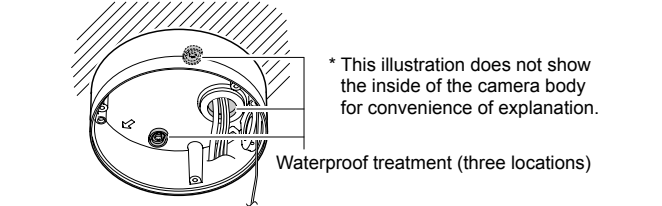

After adjusting images, place the silica gel in the location shown in the diagram below.

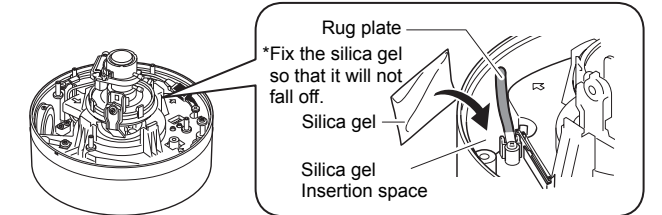

- Note
- Take silica gel out of the aluminum pack, place in the space for inserting silica gel inside the camera body, and fix it using the rug plate.
 - Completely plug the duct hole and the mounting holes. Water and moisture may get inside and fog the lens and dome cover.
 - If it is raining when you install the unit, exercise care to prevent any rain from entering.
 - Be sure to place silica gel. If you use a type of silica gel other than that supplied with this unit, the camera lens and the dome cover may become fogged.
 - When you open the dome cover for repair or maintenance, replace the silica gel.
 - Correctly waterproof all the cables using waterproof tape (adhesive).
 - If you do not adjust the field angle (☞ Page 3) immediately after installing the camera, place the silica gel when adjustment is finished. The effects of silica gel wear off if it is exposed to air for a long period of time.
 - Apply seal materials to or caulk the gap between the camera and the ceiling or wall.

Mounting the Camera

- Note
- Read before starting work.**
- Special skills are required to install this unit.
 - Install this unit on a location that is strong enough to hold it.
 - Use the appropriate attachment screws and tighten them securely.
 - Make sure you turn off the power supply to the device before starting work.
 - When you attach the camera body to the ceiling, be sure to wear safety goggles to protect your eyes from falling objects.


Opening a hole (approx. Φ 30 mm) on the ceiling or wall

Open a hole (approx. Φ 30 mm) in the ceiling or wall, and pull the cables out of the hole.

Attach the fall prevention wire


To attach the fall prevention wire, remove the attachment screws of the fall prevention wire on the bottom of the camera body (the fall prevention wire and cables are not provided).

- Note
- Attach the fall prevention wire to a sufficient strong location such as the ceiling or wall.
 - Mount the fall prevention wire using an attachment screw.
 - Take note of the length and strength of the fall prevention wire. Use wire made of insulated material. Make the wire length as short as possible.
 - Use the appropriate attachment screws and tighten them securely.
 - Use stainless steel attachment screws. If you use stainless steel screws, apply rust-proofing, for example, by painting them after installation. Tighten the screws securely so that the unit will not fall off.

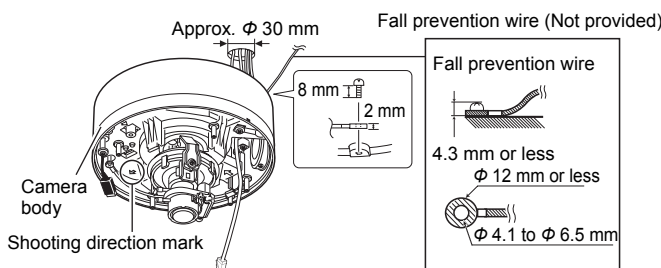

Secure the camera to the ceiling or wall

After connecting the cables, attach the camera to the ceiling (or on the wall). Use the attachment screw (approx. Φ 4 mm) to secure the camera body to the ceiling or wall. When you mount it, align the shooting direction mark with the range you want to shoot.

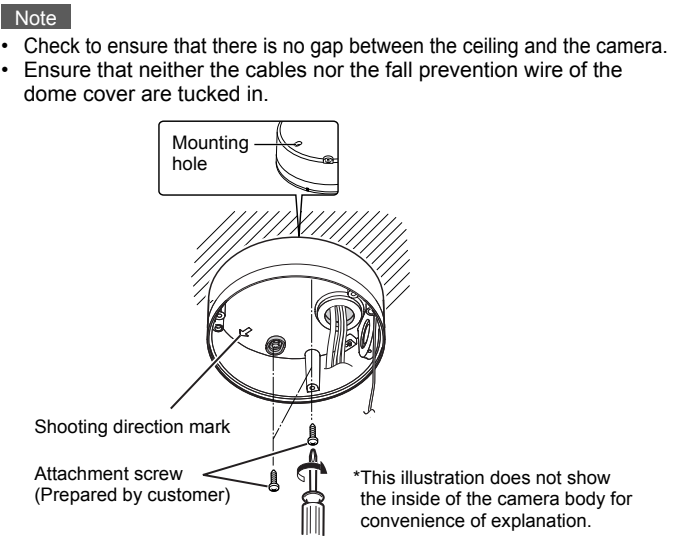

Turn on the power

After all connections and installations are completed, turn on the power of the unit. When the camera is booting, the [STATUS] indicator lights up orange. It lights up green after booting.


Image Adjustment

Adjust images by watching them on the monitor.
*The illustration of the camera directly mounted on the ceiling is used. The same procedures are performed when mounting the camera on the wall with the cables pulled out.

- Note
- Before touching the camera body, make sure you touch the metal surface of the [MONITOR] terminal first to discharge any static electricity from your body. Otherwise, static electricity may cause the camera to malfunction.

Adjust the shooting direction of the camera


- Connect a test monitor to the [MONITOR] terminal.
- After checking that the [MONITOR] selection switch is set to "NTSC", press the [FOCUS ASSIST] button.

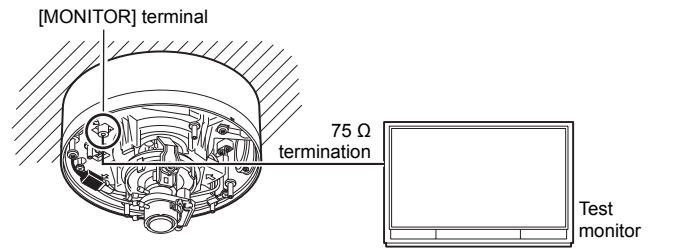


- Memo
- The camera has the 16:9 aspect ratio. If the test monitor has the 4:3 aspect ratio, the camera image is converted into the 4:3 ratio and displayed.
 - Set to "NTSC" when connecting to an NTSC monitor, or set to "PAL" when connecting to a PAL monitor, then hold down the [RESET] button for approximately three seconds to reboot. While the camera is rebooting, the [STATUS] indicator lights up orange.
 - If you keep pressing the [RESET] button for more than 5s, the camera enters the Service mode. Do not press this button for more than 5s.

- Adjust the shooting direction of the camera
- Before you start, remove the light-blue protection tape. Adjust the pan, tilt and rotation controls of the cameras to face the lens towards the subject.

- Note
- Moving the pan, tilt or rotation beyond the adjustment range may damage this unit.
 - As the tilt and rotation range of this unit is wide, part of this unit may be reflected in the shooting screen depending on the field angle and direction.
 - Do not hold the lens section when adjusting the direction of pan, tilt or rotation. The lens section may be damaged if you apply excessive force to it.

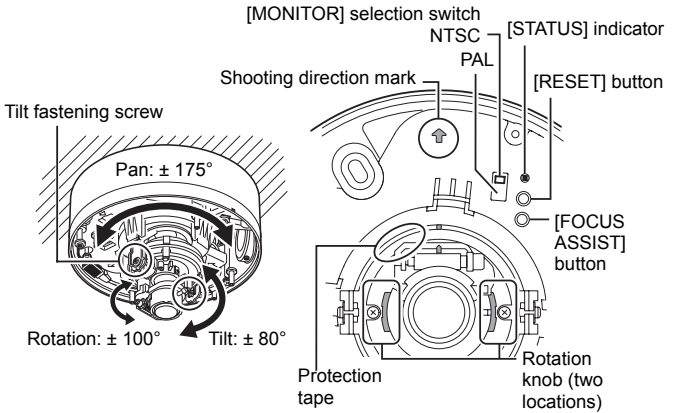

Memo

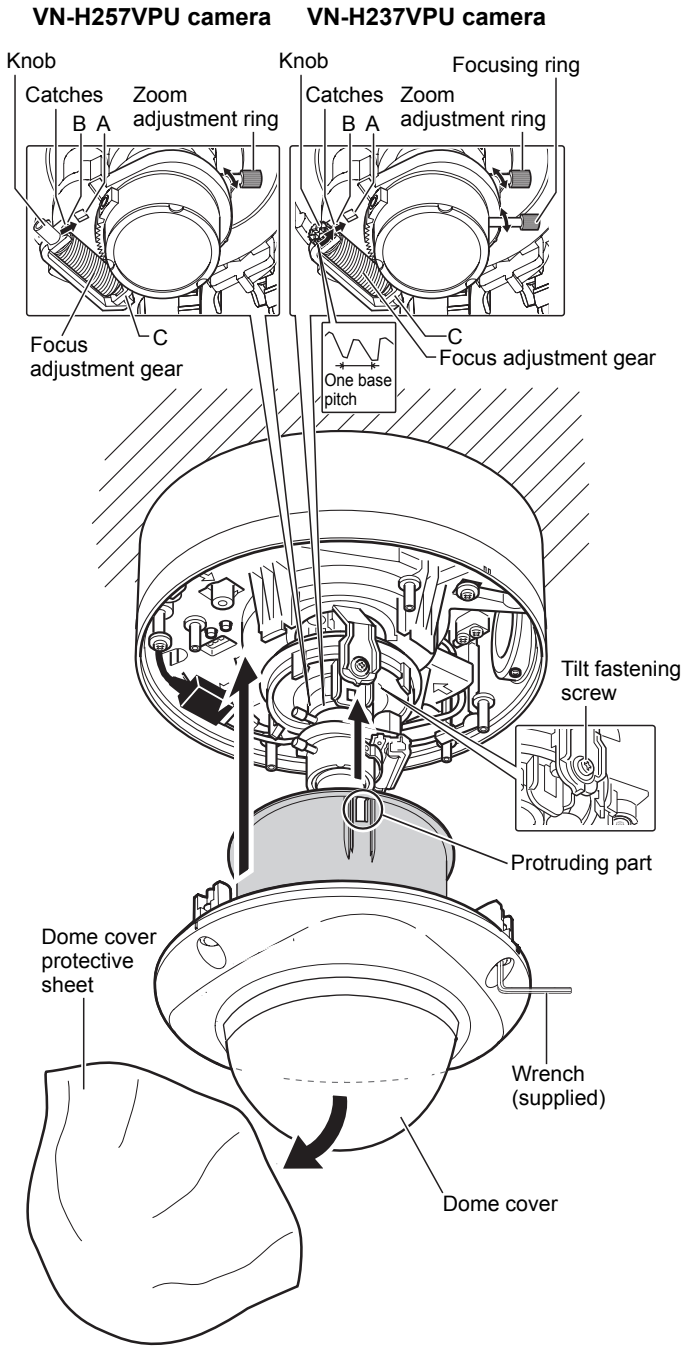

* The VN-H257VPU camera is shown in the illustration.

- Rotate the lens in the pan, rotation and tilt directions $\pm 175^\circ$, $\pm 100^\circ$ and $\pm 80^\circ$ respectively from the position aligned with the camera's shooting direction mark, pan center mark and rotation center mark. Be sure to hold the rotation control and adjust the rotation without holding the lens section.
- When you mount the camera body, align the shooting direction mark within the shooting direction.
- After adjusting the field angle, tighten the tilt fastening screw to secure the camera so that its field angle does not go out of alignment.

Adjust the field angle and focus

- Adjust the zoom ratio.
Loosen the fastening screw of the zoom adjustment ring, then move the ring to the right and left to adjust the zoom ratio. After completing the adjustment, tighten the setscrew.

Note

 - Applying force to the zoom adjustment ring while adjusting the image size may result in damage. Moving the zoom adjustment ring beyond its adjustable range may cause the performance of this camera to deteriorate.


- Roughly adjust the focus.

- Lift the focusing gear control, release the catch from position A and insert it into position B to disengage the gear.

Note

 - If you open the gear beyond position B, the gear shaft is released from the bearing (C in the figure on the left) to prevent it from being damaged. In this case, correctly re-insert the shaft into bearing A (the original position).

- VN-H257VPU camera**
- Rotate the lens section at the tip of the lens to roughly adjust the focus.

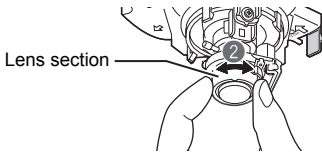

- Note
- Do not hold the lens section when adjusting the direction of the camera. The lens section may be damaged if you apply force to it. Also, exercise care not to leave your finger prints on the lens when you rotate the lens section.
- Return the catch of the focus adjustment gear to B position A shown in the diagram, and then return the focus adjustment gear to its original position.

- VN-H237VPU camera**
- Loosen the focusing ring setscrew and roughly focus the image by rotating the ring to the right or left.
 - Return the catch of the focus adjustment gear to B position A shown in the diagram, and then return the focus adjustment gear to its original position.

- Finely adjust the focus.

- VN-H257VPU camera**
- Connect the camera to a computer, and open the Built-in Viewer.
 - For details about computer settings and methods for connecting the camera to a computer, refer to "Instructions (IP Address Settings)".
 - Select "Day Focus Adjust" from the "Focus" page in "Advanced Settings".
 - The focus position is automatically adjusted.
 - For details on focus, refer to "Instructions (Setting)" on the supplied CD-ROM.
 - You can also adjust the focus after mounting the dome cover.

- VN-H237VPU camera**
- Press the [FOCUS ASSIST] button.
 - The camera enters Focus Assist mode, and [STATUS] indicator flashes green and orange alternately.
 - The image is sharpened with the opening of the aperture.
 - Finely adjust the camera focus by rotating the focus adjustment gear knob to the right or left.
 - Rotate the focus adjustment gear knob for approximately one base pitch in the direction of the arrow shown in the figure.
 - This is to correct the focus shift when mounting the dome cover.
 - Remove the protective sheet of the dome cover, and check the camera focus by holding the dome cover over the lens.
 - After checking, replace the protective sheet on the dome cover.
 - Tighten the setscrew of the focus adjustment ring and fix the focus.
 - Press the [FOCUS ASSIST] button.
 - The Focus Assist mode will be released.
 - [The STATUS] indicator lights up green.

- Note
- It may be difficult to acquire focus automatically when shooting the following places.
 - Too bright places.
 - Too dark places.
 - Places where brightness always changes. (e.g. a light is flickering; people are passing by in front of the camera.)
 - Places where there is little contrast of brightness.
 - Places where there are repeating patterns of vertical stripes.


- Memo
- The focus position can be manually adjusted by using the Built-in Viewer installed on your computer connected to the camera. (Refer to "Instructions (Setting)") Resort to this method if it is difficult to acquire focus automatically.

Mount the dome cover

When you mount the dome cover, make sure that no cables are connected to the [MONITOR] terminal.


Mount the inner dome

Engage the inner dome slot with the projection, and mount the dome by rotating it in the direction of the arrow. Press the inner dome in until you hear the click of the catch.

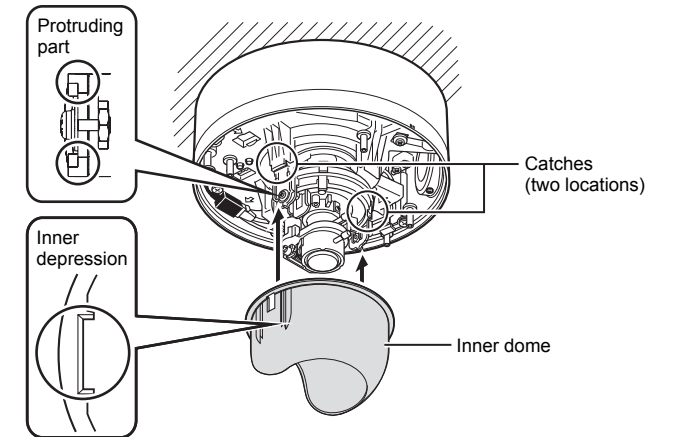


Mount the dome cover and remove the dome cover protective sheet

Align the position aligning marks (three locations) on the camera body and the dome cover, mount the dome cover and secure it using the supplied wrench.

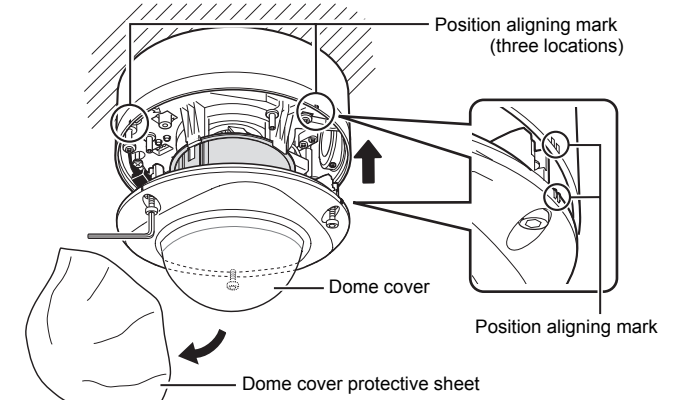

- Note
- Before installing the dome cover, make sure that silica gel (supplied) is placed inside.
 - Mount the dome cover firmly. If it is not fixed securely enough, the moisture inside the camera increases, fogging the inside of the cover or causing the cover to fall off.
 - If you remove the dome cover after installing it, the field angle may shift. If the field angle has shifted, adjust the focus and the field angle again.
 - Pay attention to the fall prevention wire so that it will not be caught between the dome cover and the camera. Otherwise, dust proofing and waterproofing may not work correctly.

Cables (VN-H257VPU)

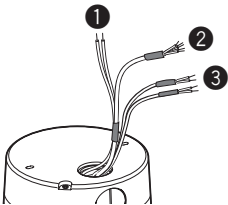

Cable type	Color	Signal name
① Power cable	Red	AC 24 V
	Black	AC 24 V
② Alarm I/O cable	Red	INPUT 1 (ALARM)
	Brown	INPUT 2 (ALARM)
	Orange	OUTPUT 1 (ALARM)
	Yellow	OUTPUT 2 (ALARM)
	Black	GND (ALARM)
③ Audio cable	White	MIC IN
	Yellow	GND (MIC IN)
	White	LINE OUT
	Yellow	GND (LINE OUT)

● Connecting the power cable to AC 24 V source

Conductor diameter (mm)	1.0 mm dia or more	1.6 mm dia or more	2.0 mm dia or more
Max cable distance (meters) (Reference value)	90	240	370

Note

- For safety reasons, turn on the power only after confirming that all the connections are completed.
- Be sure to turn off the camera before connecting cables.
- If you use both the AC 24 V power cable and the PoE-based LAN cable simultaneously, the camera may fail. Always supply power using either method.
- To use an AC 24 V power supply, remove the factory-installed tape from the power cable, connect to an AC 24 V power supply, and wrap the connector with new insulation tape and waterproof tape.

● LAN cable

- When connecting to a switching hub: Use a straight cable.
- When connecting to a computer: Use a crossing cable.
- A 100-meter or less length and Category-5 or higher grade STP (shielded) cable is recommended.

Note

- The crossing cable may not be used for some computer models. Check the LAN specifications of the computer when you directly connect this unit to the computer.
- Alarm I/O cable
 - A 50-meter or less length shielded cable is recommended.
 - Attach the supplied ferrite core to the cable.

Audio cable connection (VN-H257VPU)

Connect the audio cable for an audio device.

Audio cable (Brown and White) (MIC IN) : Connect to a condenser microphone that has a plug-in power system, etc.

Audio cable (Black and White) (LINE OUT) : Connect to a speaker with a built-in amp, etc.

Memo

- A shielded audio cable is recommended.

* For the location to connect the audio cable, refer to [Cabling] (☞ page 2).

Alarm I/O cable connection (VN-H257VPU)


Alarm input

Connect an infrared sensor, door sensor, metal sensor, a manual switch or other device.

- To avoid noise entering the internal circuit, enter the non-voltage contact signal in the Alarm IN terminal.
- Do not supply voltage.
- The alarm can be set to be activated during close contact (MAKE) or during open contact (BREAK) can be set from the menu.
- The alarm signal should last for at least 500 msec. If the alarm signal is short, it may not be recognized.

● Input conditions

- Connect non-voltage a contact or open collector output circuit (For details on how to set polarities, please refer to “Instructions (Setting)”.)
- Low level terminal current below 1 mA
- High level terminal current 3.3 V

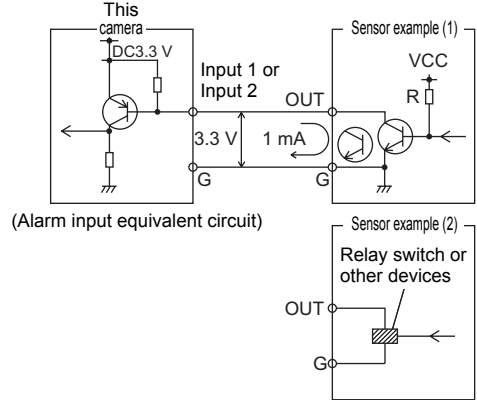


Alarm output

Connect an alarm device, indicator, lighting, buzzer or other device.

- An alarm output signal is an open collector output. You can configure the menu to set the alarm to sound when contacts short circuit (MAKE) or when the contacts are open (BREAK). (Pressure resistance lower than 16V, 30 mA)
- This terminal has different polarities. The output voltage at the positive terminal must always be higher than the output voltage at the negative terminal. Otherwise, the circuit may be damaged.

● Output conditions

- Equivalent to NPN open collector output (For details on how to set the output logic, please refer to “Instructions (Setting)”.)
- Safe excitation voltage: DC16 V or lower
- Allowable surge current: 30 mA
- Momentary (100 ms to 5000 ms) output (For details on how to set the time, please refer to “Instructions (Setting)”.)

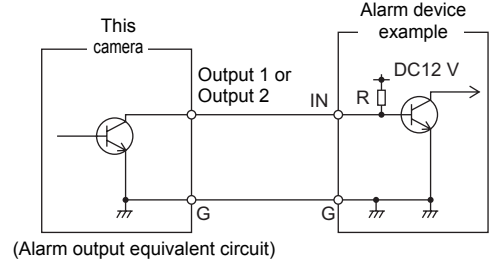

Note

- Connect the G terminal cable of this camera to the GND of the alarm device.

* For connecting the Alarm I/O cable, refer to [Cabling] (☞ page 2).

Troubleshooting

Symptom	Causes and Countermeasures
No monitor image is output.	The image output may be turned Off on Internet Explorer. Check the monitor output setting.
The external mic sound is not heard.	<ul style="list-style-type: none">Check the MIC connection.Is the audio setting turned off? (☞ “Instructions (Setting)”→ “Audio Page”)
Movement of network image is not smooth	<ul style="list-style-type: none">If the monitor image output is turned ON, a lower frame rate is set for network images.If you turned the monitor image output to OFF, set the frame rate again.(☞ “Instructions (Setting)” - “Internet Explorer Setting” - “Encoding Page”)
Lens is out of focus	Is the focus adjustment gear engaged? Check the location of the catch.

Specifications

* The specifications and appearance of this unit are subject to change for purposes of improvement without prior notice.

VN-H257VPU		VN-H237VPU	
Camera section	Image sensor	1/3-inch Square-Pixel Progressive Scan CMOS (elementary color filter)	
	Effective pixels	Approximately 2,120,000 pixels 1944 (H) x 1092 (V)	
	Minimum illuminance of subject	(50 %, AGC High, 1/30 s) Color : 0.3 lx (typ.) Black and White: 0.03 lx (typ.)	
Monitor output		75 Ω, 1.0 Vp-p NTSC or PAL (switch selectable)	
Audio input	Input	Can connect to a microphone that has a plug-in power system	—
	Reference voltage	DC2.47 V (typ.)	—
	Impedance	2.2 kΩ (typ.)	—
Audio output		Line OUT (200 Ω, Max 1.9 Vp-p)	—
Network output	Image compression format	JPEG, H.264 High Profile, H.264 Baseline Profile, MPEG-4	
	Frame size	1920 x 1080 1280 x 960 1280 x 720 640 x 480 640 x 360 320 x 240	
	Audio compression formats	μ-Law (64 kbps), AD/DA 16 bits, Fs = 8 kHz, monaural	—
	Network interface	RJ-45 100BASE-TX/10BASE-T/FULL/HALF/Auto-negotiation enabled	
	Alarm input	No-voltage a contact input, PNP open collector input, low level, latch/momentary (500 msec or longer) (1 mA circuit current at low level, and 3.3 VDC applied voltage at high level)	—
Alarm output		NPN open collector -output (16 VDC safe excitation voltage, and 30 mA allowable sink current)	—
Alarm record		16 MB	
Lens	Focal length	f = 3 mm to 9 mm	f = 2.8 to 10.5 mm
	Maximum aperture ratio	F 1.2 (f =3mm) to F 2.1 (f =9 mm)	F 1.2 (f = 2.8 mm) to F 2.6 (f = 10.5 mm)
	Aperture range	F 1.2 to F 360	F 1.2 to F 360
	Zoom ratio	3 x	3.75 x
LAN standards	Standards	Compliant with IEEE802.3, IEEE802.3u and IEEE802.3af	
	Communication protocol	TCP/IP, UDP/IP, FTP, ICMP, ARP, DHCP, SNTP, HTTP, SMTP, RTP, RTSP, IPv4, IPv6, DSCP, HTTPS, SNMP	
General	Power supply voltage	AC24 V 50 Hz/60 Hz, or PoE (DC-48 V)	PoE (DC-48 V)
	Current consumption	AC24 V 0.5 A, or PoE 150 mA (7.2 W)	120 mA
	Ambient temperature	-10 °C to 50 °C (Operation) 0 °C to 40 °C (Recommended)	
	Ambient humidity	20 %RH to 90 %RH (without condensation)	
	Mass	Approx. 1.3 kg	
Dustproof/Waterproof		IP66 compliant	

VN-H257VPU/VN-H237VPU
External dimensions (unit: mm)

