


GY-LS300 Camera Process Settings

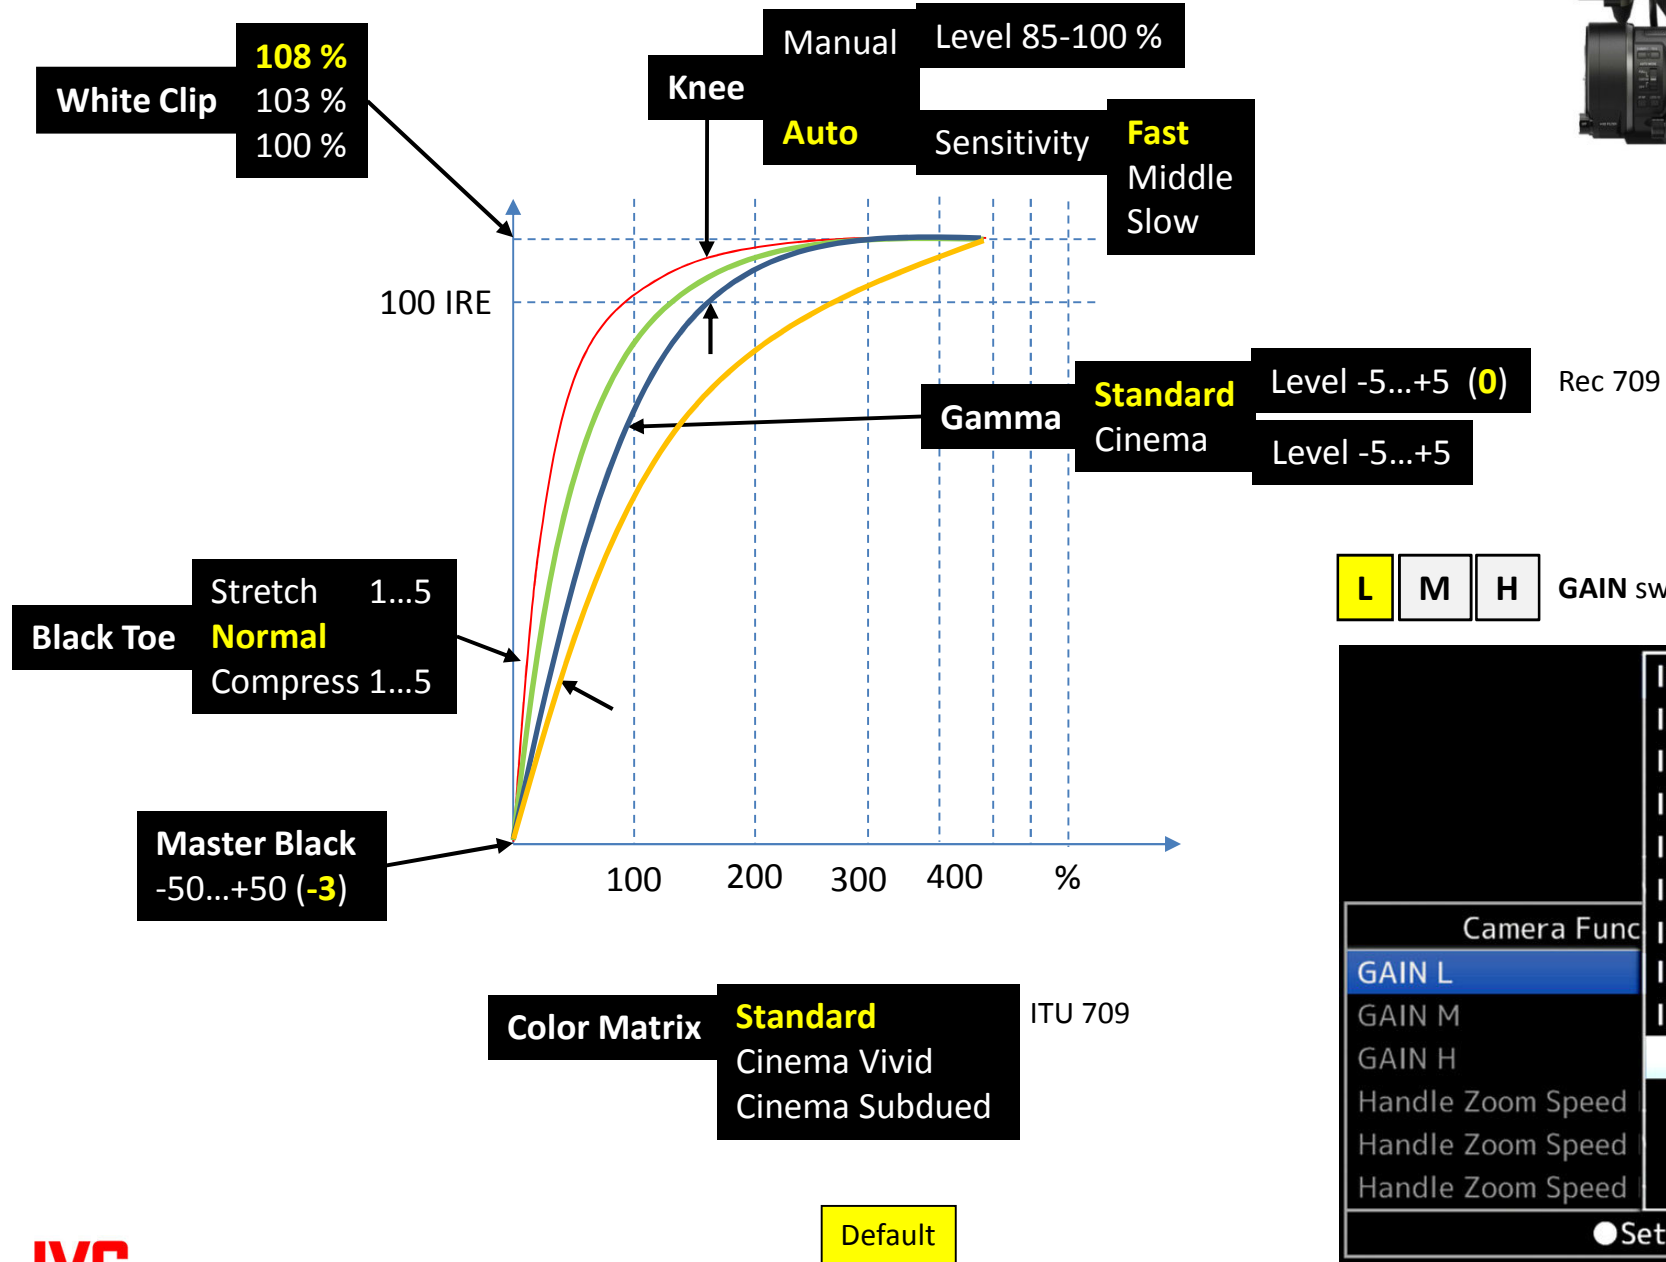

GY-LS300 Gain / ISO / Shutter settings

Gain in dB or ISO display can be selected via camera's menu:

Menu → LCD/VF → Display Settings → Gain


Settings	
Gain, dB	ISO
0	400
2	500
3	
4	640
6	800
8	1000
9	
10	1250
12	1600
14	2000
15	
16	2500
18	3200
20	4000
21	
22	5000
24	6400

Gain settings are available in 3 dB increments

ISO settings correspond to 2 dB steps

Shutter speed indication can be switched to **Degrees** in 24p and 25p modes only.

Menu → LCD/VF → Display Settings → Shutter

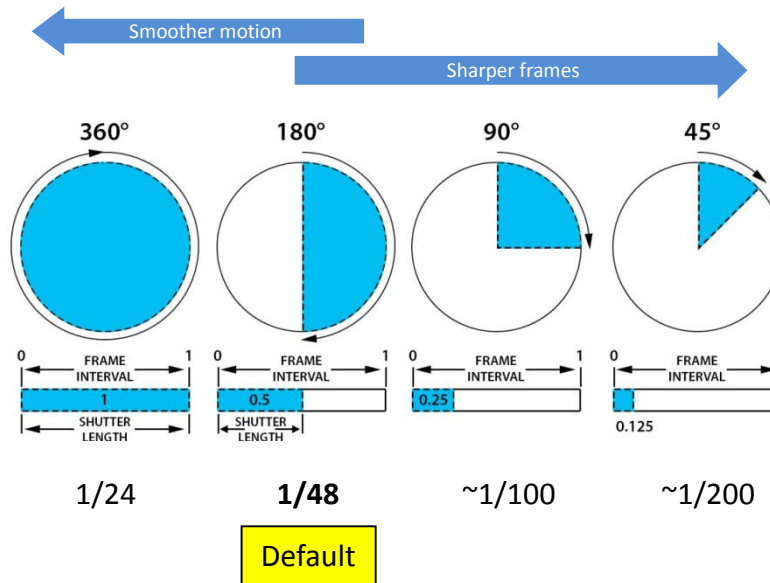

24p Shutter

360°x4	1/6
360°x2	1/12
360°	1/24
180°	1/48
150°	
144°	1/60
135°	
120°	
105°	
90°	
86.4°	1/100
75°	
60°	
45°	
30°	
22.5°	
11.25°	