



CopperHead[™] FS-790 **ProHD**

**Camera-Mounted ENG/EFP Fiber Optic Transceiver System
for JVC GY-HM790HD Camcorder**

User Manual

Systems

FS-790PNACG	FS-790PNARG	FS-790PNVCG	FS-790PNVRG
FS-790PSACG	FS-790PSARG	FS-790PSVCG	F -790PSVRG
FS-790TNCG	FS-790TNRG		

Camera Units

KA-F790NG	KA-F790SG
-----------	-----------

Base Stations

RM-FP790PNCG	RM-FP790PNRG	RM-FP790PSCG	RM-FP790PSRG
RM-FP790TNCG	RM-FP790TNRG		

Power Wafers

KA-PW790AG	KA-PW790VG
------------	------------

External MPS Power Supplies

CH3-MPS-95VD-2ST-NEU	CH3-MPS-95VD-2ST-304
CH3-MPS-95VD-NEU-NEU	CH3-MPS-95VD-NEU-304

Telecast Fiber Systems, Inc.
102 Grove Street
Worcester, MA 01605
Tel: 508-754-4858
Fax: 508-752-1520
www.telecast-fiber.com

v2-110121jh (preliminary)

Table of Contents

ABOUT THIS USER GUIDE	5
CHAPTER 1. IMPORTANT INFORMATION.....	7
1.1. Warranty.....	7
1.2. Safety and Fiber Optic Systems	8
Optical Fiber Safety	8
Power Fuses	8
Unpacking and the CopperHead FS-790 Transceiver System.....	9
1.3. Product Returns	10
CHAPTER 2. – SYSTEM OVERVIEW	11
2.1. Fiber Cable Concepts.....	12
Fiber Optic Cable	12
Fiber Optic Connector Types.....	13
2.2. CopperHead FS-790 Transceiver System concepts.....	14
2.3. Signal paths in the CopperHead FS-790 Transceiver System.....	15
2.4. CopperHead FS-790 Transceiver System Components.....	16
CopperHead KA-F790 Camera Unit Overview.....	16
CopperHead RM-FP790 Base Station.....	16
CopperHead FS-790 Transceiver System Additional Components.....	17
CHAPTER 3. INSTALLATION OF THE COPPERHEAD KA-F790 CAMERA UNIT ON THE JVC PROHD GY-HM790 VIDEO CAMERA	19
3.1. Initial Installation of the CopperHead KA-F790 Camera Unit to the Camera.....	19
Verification of All Components	20
Relocation of the Battery Adaptor from the Camera to the KA-F790 Camera Unit.....	21
Installation Of The Camera Unit Mounting Plate On To The Camera	23
Installation Of The Connector Adaptor Plate And Connection Of Required Cables.....	24
Mounting Of the Camera Unit On To the Mounting Plate.....	25
Operational Test Of The Installed System.....	25
3.2. Mounting Power Wafer Unit to the CopperHead KA-F790 Camera Unit.....	26
3.3. Relocation of the CopperHead RM-FP790 Base Station fiber connector.....	27

CHAPTER 4. COPPERHEAD FS-790 TRANSCEIVER SYSTEM DETAILED DESCRIPTION ...29

4.1. CopperHead KA-F790 Camera Unit.....	29
CopperHead KA-F790 Camera Unit Connector Area –Connectors	30
CopperHead KA-F790 Camera Unit Indicator and Control Panel	33
4.2. CopperHead FS-790 Base Station	35
CopperHead FS-790 Base Station Front Panel	35
CopperHead RM-FP790 Base Station Front Panel – Identifying Controls & Connectors	35
CopperHead RM-FP790 Base Station Back Panel.....	39
CopperHead RM-FP790 Base Station Front Panel – Identifying Controls & Connectors	39
External Power Options.....	39
Internal Power Options	40
4.3. Additional CopperHead FS-790 Transceiver System Items.....	41
“Power Wafer” Camera Adaptor.....	42
MPS External Power Wafer Power Supply	43

CHAPTER 5. CONNECTION OF THE COPPERHEAD FS-790 TRANSCEIVER SYSTEM45

5.1. Connections between the CopperHead RM-FP790 Base Station and the KA-F790 Camera Unit	45
Tactical Fiber between the Base Station and Camera Unit.....	46
SMPTE Hybrid Fiber between the Base Station (powered) and Camera Unit.....	47
SMPTE Hybrid Fiber between Base Station and Camera Unit (Infrastructure Wiring)	48
SMPTE Hybrid Fiber between the MPS Power Unit and Camera Unit	49
5.2. Connections to the CopperHead RM-FP790 Base Station	50
Multi-Pin Cable Assemblies Used with the CopperHead FS-790 Base Station.....	50
Connectors into and out of the CopperHead FS-790 Base Station	51
5.3. Connections to the CopperHead FS-790 Camera Unit.....	53
Connectors into and out of the CopperHead FS-790 Camera Unit Back Side	53
5.4. Camera Unit Connection Example	55
Camera Unit (Camera Facing Side) to Camera Connections	55

CHAPTER 6. OPERATION OF THE COPPERHEAD FS-790 TRANSCEIVER SYSTEM.....57

6.1. Set Up of the CopperHead FS-790 Transceiver System for operation	58
6.2. Connecting and Managing the Fiber Cable	59
Planning the Fiber Cable Route	59
Running the Fiber Cable	60
6.3. Powering the System	62
Powering the CopperHead FS-790 Base Station	62
Powering the CopperHead FS-790 Camera Unit	62

6.4.	Intercom	63
6.5.	Using the Digital Displays	65
	A Brief Guide to Measurement of Fiber Optic Signal Strength	65
	The CopperHeadFS-790 Base Station Digital Display	65
6.6.	Standard Operation.....	69
6.7.	Shutting Down the System	70
6.8.	Troubleshooting.....	71
APPENDICES		72
APPENDIX 1. CONNECTOR PIN ASSIGNMENTS		72
1.1.	CopperHead FS-790 Base Station Connectors	72
	Camera Remote – Base Station DB9 Connector -Wiring	72
	Tally/GPI/Data – Base Station DB15 Connector Wiring	72
	Base Station Audio Inputs & Outputs Connector Wiring	73
	Power Connector – Base Station 4 Pin XLR Connector Wiring.....	73
	Power Connector – Base Station Fused AC Receptacle	74
	Base Station 12VDC Terminal Block Wiring.....	74
	Clear-Com Intercom – Base Station 3 Pin XLR Connector Wiring	74
	RTS Intercom – Base Station 3 Pin XLR Connector Wiring	74
1.2.	CopperHead FS-790 Camera Unit Multi-Pin Connectors	75
	Power Wafer – Camera Unit 4 Pin Lemo Connector Wiring	75
	Camera Headset – Camera Unit 5 Pin XLR Female Connector Wiring	75
	Audio Out	75
APPENDIX 2. BASE STATION REMOTE CONTROL CABLE.....		76
APPENDIX 3. AUDIO CABLE WIRING SUGGESTIONS.....		77
	CopperHead FS-790 Base Station 25-Pin Audio Input Cable	77
	CopperHead FS-790 Base Station 25-Pin Audio Output Cable.....	77
APPENDIX 4. SPECIFICATION		78
APPENDIX 5. DECLARATION OF CONFORMITY		79
APPENDIX 6. COPPERHEAD FS-790 SYSTEM OVERVIEW DIAGRAMS.....		81

List of Main Figures

FIGURE 1 - TACTICAL FIBER OPTIC CABLE CROSS-SECTION (ILLUSTRATIVE ONLY)	12
FIGURE 2 - HYBRID FIBER OPTIC CABLE CROSS-SECTION (ILLUSTRATIVE ONLY)	12
FIGURE 3 - FIBER OPTIC CONNECTORS	13
FIGURE 4- BASE STATION TO CAMERA UNIT CONNECTION	15
FIGURE 5 - CAMERA UNIT: CONNECTOR PANELS	16
FIGURE 6 – CAMERA UNIT: INDICATOR AND INTERCOM LEVEL CONTROL PANEL	16
FIGURE 7 - BASE STATION: FRONT INDICATOR PANEL	16
FIGURE 8 - BASE STATION: REAR CONNECTOR PANEL	16
FIGURE 9 - MOUNTING THE POWER WAFER UNIT TO THE COPPERHEAD FS-790 CAMERA UNIT	26
FIGURE 10 - CONNECTING THE POWER WAFER	26
FIGURE 11 - COPPERHEAD RM-FP790 BASE STATION WITH REAR MOUNTED FIBER CONNECTOR	27
FIGURE 12 - COPPERHEAD RM-FP790 BASE STATION WITH FRONT MOUNTED FIBER CONNECTOR.....	27
FIGURE 13 - COPPERHEAD FS-790 CAMERA UNIT BACK SIDE	29
FIGURE 14 - COPPERHEAD FS-790 BASE STATION FRONT PANEL.....	35
FIGURE 15 - FIBER CONNECTOR TYPES	35
FIGURE 16 - COPPERHEAD RM-FP790 BASE STATION BACK PANEL (POWERED VERSION)	39
FIGURE 17 - MPS EXTERNAL POWER WAFER POWER SUPPLY	43
FIGURE 18 - TACTICAL FIBER BETWEEN THE BASE STATION AND CAMERA UNIT	46
FIGURE 19 - SMPTE HYBRID FIBER BETWEEN THE BASE STATION (POWERED) AND CAMERA UNIT	47
FIGURE 20 - SMPTE HYBRID FIBER BETWEEN BASE STATION AND CAMERA UNIT (INFRASTRUCTURE WIRING).....	48
FIGURE 21 - SMPTE HYBRID FIBER BETWEEN THE MPS POWER UNIT AND CAMERA UNIT	49
FIGURE 22 - COPPERHEAD FS-790 BASE UNIT CONNECTIONS	50
FIGURE 23 - COPPERHEAD FS-790 CAMERA UNIT BACK SIDE CONNECTIONS.....	53
FIGURE 24 - CAMERA UNIT (CAMERA FACING SIDE) TO CAMERA CONNECTIONS	55
FIGURE 25 – INTERCOM AND TALLY CONTROLS/INDICATORS	63
FIGURE 26 - COPPERHEAD JVC FP-790 SERIES BASE STATION REMOTE CABLE.....	76
FIGURE 27 - COPPERHEAD FP-790 BASE STATION 25-PIN AUDIO INPUT CABLE	77
FIGURE 28 - COPPERHEAD FP-790 BASE STATION 25-PIN AUDIO OUTPUT CABLE.....	77
FIGURE 29 - COPPERHEAD FS-790 BASE STATION REAR PANEL	81
FIGURE 30 - COPPERHEAD FS-790 CAMERA UNIT CONNECTORS.....	81
FIGURE 31 - COPPERHEAD FS-790 CAMERA UNIT INDICATORS AND CONTROLS.....	83
FIGURE 32 - COPPERHEAD FS-790 BASE STATION FRONT PANEL.....	83



List of Tables

TABLE 1 - WHAT IS SHIPPED WITH A COPPERHEAD FS-790 SYSTEM.....	9
TABLE 2 - FIBER OPTIC CONNECTOR TYPES & USAGE.....	13
TABLE 3 - MPS POWER SUPPLY ADAPTOR OPTIONS	43
TABLE 4 - COPPERHEAD FS-790 POWER OPTIONS	45
TABLE 5 - BASE STATION CAMERA REMOTE CONNECTOR WIRING.....	72
TABLE 6 - BASE STATION TALLY/GPI CONNECTOR WIRING	72
TABLE 7 - BASE STATION AUDIO 25 PIN CONNECTOR WIRING	73
TABLE 8 - BASE STATION POWER CONNECTOR WIRING	73
TABLE 9 - BASE STATION 12VDC TERMINAL BLOCK WIRING	74
TABLE 10 - BASE STATION CLEAR-COM INTERCOM OUTPUT WIRING	74
TABLE 11 - BASE STATION RTS INTERCOM OUTPUT WIRING	74
TABLE 12 - CAMERA UNIT POWER WAFER CONNECTOR WIRING.....	75
TABLE 13 - CAMERA UNIT HEADSET CONNECTOR WIRING	75
TABLE 14 - STANDARD XLR3 AUDIO CONNECTOR WIRING	75

About this User Guide

The CopperHead RM-FP790 Fiber Optic Transceiver System can be delivered in a number of configurations depending on the Power and Battery Mount options selected. This user guide is designed to cover all of the various options and so not every page in this guide will apply to your specific system.

Throughout this guide a number of informational pointers are used to mark important or useful information.

	<p>Caution – the information provided is important safety information and should be understood and followed in order to operate the CopperHead FS-790 Fiber Optic Transceiver System safely and properly.</p>
	<p>Useful information regarding the User Guide and the CopperHead FS-790 Fiber Optic Transceiver System. Reading and understanding this information will make using the manual and the product easier.</p>

Page Intentionally Left Blank

Chapter 1. Important Information

1.1. Warranty

LIMITED WARRANTY STATEMENT

Telecast Fiber Systems, Inc. (“Telecast”) expressly warrants to Buyer that the Products supplied shall be free from defects in materials and workmanship for a period of 12 months following the date the Products are delivered to Buyer (the “Warranty Period”). Telecast's liability under this limited warranty shall be limited, at its option, to providing refund of purchase price for Products, or replacing or repairing Products shown to be defective either in materials or workmanship. Buyer's sole and exclusive remedy for breach of warranty shall be such refund, replacement or repair.

A claim of defect in materials or workmanship in any Product shall be allowed only when it is submitted in writing to Telecast Fiber Systems, Inc. within seven days after discovery of the defect, and in any event within the Warranty Period. No claim shall be allowed in respect of any Product which has been altered, neglected, damaged or stored in any manner which adversely affects it. In order to obtain service under the terms of this warranty, Distributor's customer or Distributor must notify Telecast of the defect prior to the expiration of the applicable warranty period and obtain a Return Authorization Number from Telecast. In no event may products be returned to Telecast or to Distributor for warranty service without having obtained from Telecast a Return Authorization Number.

This limited warranty applies only to new and unused Products delivered to Buyers located within the United States of America, or to international Buyers if sold through an authorized Distributor organization, and shall not extend to any equipment not manufactured by Telecast Fiber Systems, Inc., even though such equipment may be sold or operated with the Products. In addition, this limited warranty shall be void and of no further force or effect whatsoever if the Product is repaired or modified by any person other than an authorized representative of Telecast Fiber Systems, Inc. without the consent of Telecast Fiber Systems, Inc. This warranty shall not apply to any defect, failure or damage caused by improper use or inadequate maintenance and care. Nor shall this warranty apply to any damage caused in whole or in part by attempts by personnel other than Telecast's personnel, as approved in advance in accordance with the foregoing provisions, to open, install, repair, or service the Product; nor to damage resulting from improper connection with incompatible equipment; nor to damage to a unit which has been modified by personnel other than Telecast personnel.

Products returned to Telecast for warranty service shall be shipped, freight prepaid to Telecast. Telecast will return the repaired product or ship a replacement, freight prepaid, to either Distributor or Distributor's customer, as requested by Distributor's customer, at a location within the United States or, at Telecast's option, to Distributor's location in the case of international sales. This limited warranty shall also apply to Products that replace defective Products and Products that have been repaired by authorized representatives of Telecast Fiber Systems, Inc., but only for the original Warranty Period. The Warranty Period shall not be extended by reason of defect, or any period of time during which the Product is not available to Buyer because of defects or repairs, without the express written consent of Telecast Fiber Systems, Inc.

EXCEPT FOR THE EXPRESS LIMITED WARRANTY AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP CONTAINED HEREIN, TELECAST FIBER SYSTEMS, INC. MAKES NO WARRANTY OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, AND ALL WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND OTHER WARRANTIES OF WHATEVER KIND ARE HEREBY DISCLAIMED BY TELECAST FIBER SYSTEMS, INC. THIS LIMITED WARRANTY SETS FORTH EXCLUSIVELY ALL OF TELECAST FIBER SYSTEMS, INC.'S LIABILITY IN CONTRACT OR OTHERWISE IN THE EVENT OF A DEFECTIVE PRODUCT. WITHOUT LIMITATION ON THE FOREGOING, TELECAST FIBER SYSTEMS, INC. EXPRESSLY DISCLAIMS ANY LIABILITY WHATSOEVER FOR ANY DAMAGES INCURRED DIRECTLY OR INDIRECTLY IN CONNECTION WITH THE SALE OR USE OF, OR OTHERWISE IN CONNECTION WITH, THE PRODUCT, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS AND SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER CAUSED BY NEGLIGENCE OR OTHERWISE, REGARDLESS WHETHER TELECAST HAS BEEN GIVEN ADVANCE NOTICE OF THE POSSIBILITY THEREOF. THIS WARRANTY IS GIVEN BY TELECAST IN LIEU OF ANY OTHER WARRANTY EXPRESSED OR IMPLIED.

1.2. Safety and Fiber Optic Systems

Optical Fiber Safety



Never look directly into the end of the optical fiber while either end of the system is operating. Eye damage can result.

Always use dust caps on fiber optic connectors when cables are not connected. This protects the connector from damage and the unlikely event of accidental exposure of a human eye to an operating laser. Keeping the caps in place when the connectors are not in use will also prevent dirt and dust from entering the connector and degrading the performance of the optical link

Power Fuses



The CopperHead RM-FP790PNRG and RM-FP790PNCG Powered Base Stations are equipped with Dual Cartridge fuses located next to the AC Power receptacle at the left rear of the unit. Refer to Page 74 for specific fuse and location information.

NEVER operate the CopperHead RM-FP790P Powered Base Station without properly installed and rated fuses. Severe electrical and heat damage could result as well as personal injury or death.

Unpacking and the CopperHead FS-790 Transceiver System

The following table lists the various items shipped with a system depending on the particular configuration.

Unpowered System, Tactical Fiber, OpticalCON Connectors		
<u>System Model:</u>	<u>FS-790TNRG</u>	<u>FS-790TNCG</u>
CopperHead Camera Unit:	KA-F790NG	
CopperHead Base Station:	RM-FP790TNRG	RM-FP790TNCG
Base Station Remote Cable:	VC-P790RMG	
12VDC power supply:	AA-FP790G	
<u>SYSTEM VARIABLES</u>		
<i>Base Intercom Interface:</i>	<i>RTS</i>	<i>Clear-Com</i>

Powered System, Hybrid Fiber, OpticalCON Connectors				
<u>System Model:</u>	<u>FS-790PNARG</u>	<u>FS-790PNVRG</u>	<u>FS-790PNACG</u>	<u>FS-790PNVCG</u>
CopperHead Camera Unit:	KA-F790NG			
Power Wafer:	KA-PW790AG	KA-PW790VG	KA-PW790AG	KA-PW790VG
CopperHead Base Station:	RM-FP790PNRG		RM-FP790PNCG	
Base Station Remote Cable:	VC-P790RMG			
<u>SYSTEM VARIABLES</u>				
<i>Base Intercom Interface:</i>	<i>RTS</i>	<i>RTS</i>	<i>Clear-Com</i>	<i>Clear-Com</i>
<i>Power Wafer Battery Plate:</i>	<i>A/B Gold Mount</i>	<i>"V" Mount</i>	<i>A/B Gold Mount</i>	<i>"V" Mount</i>

Powered System, Hybrid Fiber, SMPTE 304M Connectors				
<u>System Model:</u>	<u>FS-790PSARG</u>	<u>FS-790PSVRG</u>	<u>FS-790PSACG</u>	<u>FS-790PSVCG</u>
CopperHead Camera Unit:	KA-F790SG			
Power Wafer:	KA-PW790AG	KA-PW790VG	KA-PW790AG	KA-PW790VG
CopperHead Base Station:	RM-FP790PSRG		RM-FP790PSCG	
Base Station Remote Cable:	VC-P790RMG			
<u>SYSTEM VARIABLES</u>				
<i>Base Intercom Interface:</i>	<i>RTS</i>	<i>RTS</i>	<i>Clear-Com</i>	<i>Clear-Com</i>
<i>Power Wafer Battery Plate:</i>	<i>A/B Gold Mount</i>	<i>"V" Mount</i>	<i>A/B Gold Mount</i>	<i>"V" Mount</i>

Table 1 - What is shipped with a CopperHead FS-790 System

Please consult your packing slip and purchase order to insure that you have received all of the expected Telecast Fiber Systems components.

Inspect all components for scratches and other mechanical damage, and inspect the electrical connectors for bent or damaged pins and latches. Report any missing or damaged components to Telecast Fiber Systems, Inc. See the following section regarding product returns.



You must use your own cables to make connections for Tally, Base Station audio, and other ancillary signals and equipment. Suggestions for these cables are discussed later in this document.

Leave the protective caps on the optical connectors whenever the fiber is disconnected.

1.3. Product Returns

In the unlikely event of damage to your CopperHead FS-790 Fiber Optic Transceiver System during shipping or delivery please note the damage with the delivery or shipping service and document the packaging and product where you see damage. If any component does not work correctly out of the box please contact your JVC sales organization.

If the problem cannot be remedied through a service telephone call an RMA (Return of Merchandise Authorization) will be issued and you will receive an RMA number. Please note this RMA number inside and outside of all shipping boxes and on all documentation provided with the items to be returned.

Chapter 2. – System Overview

This chapter covers the following:

- 1) Fiber Optic Cable Concepts
- 2) CopperHead FS-790 Transceiver System concepts
- 3) Signal paths in the CopperHead FS-790 Transceiver System
- 4) CopperHead FS-790 Transceiver System Components

2.1. Fiber Cable Concepts

Fiber Optics and Fiber Optic Cable are the core technologies at the heart of the Telecast Fiber Systems CopperHead FS-790 Transceiver System. The ability to multiplex and de-multiplex a variety of video, audio and data signals so that they can be carried over a thin strand of Fiber Optic cable for long distances enables the CopperHead System. The theory and operation of Fiber Optics is beyond the scope of this document. What is important for the end user to be aware of are the different types of Fiber Optic Cable and Fiber Optic Cable Connectors.

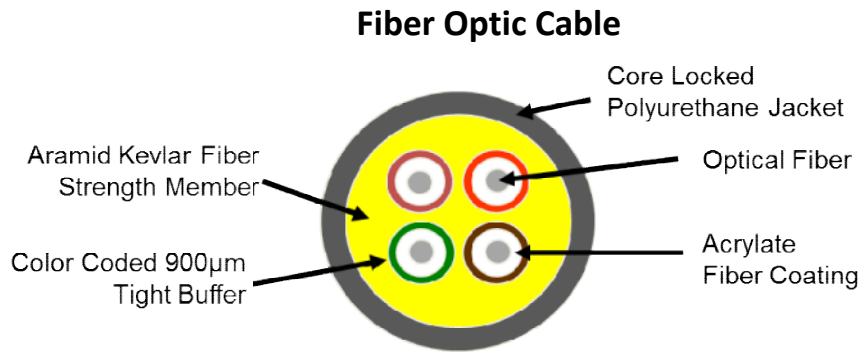


Figure 1 - Tactical Fiber Optic Cable Cross-section (Illustrative only)

Tactical Fiber cable is heavy duty, Kevlar protected and capable of carrying CopperHead signals extended distances. The cable can generally withstand a variety of environmental hazards such as being crushed or run-over. Tactical Fiber can be used in the field mounted on Portable Fiber Reels in lengths up to 2000 feet.

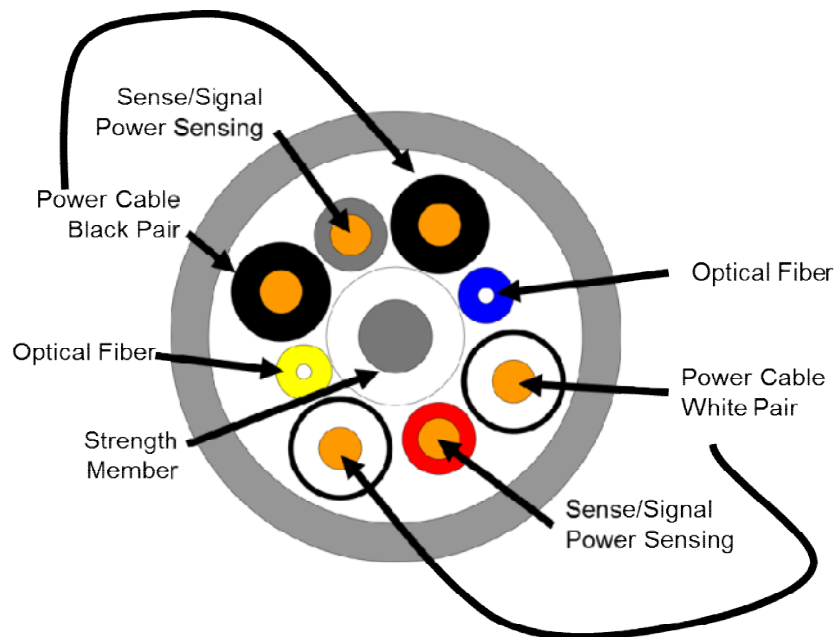


Figure 2 - Hybrid Fiber Optic Cable Cross-section (Illustrative only)

Hybrid Fiber Cable has the same Fiber Optic characteristics with the addition of copper cables. This allows the transmission of power through the cable. This increases weight and reduces operating distance. Hybrid Fiber Cable also includes a pair of Sense/Signal wires that allow systems to determine if there is an open or shorted cable. Hybrid Fiber Cable is also larger in diameter than Tactical Fiber Cable.

Fiber Optic Connector Types

Depending on the type of Fiber Optic Cable used, different Connector types can be configured. The following table summarizes the various types of connectors typically used in a CopperHead FS-790 Transceiver System configuration and the allowed Fiber Optic Cable usage. Each connector type is illustrated below.

Connector Type	Tactical Fiber Use	Hybrid Fiber Use	Camera Unit Use	Base Station Use	Notes
SMPTE 304M	No	Yes	Yes	Yes	
OpticalCON Cable Connector (Neutrik)	Yes	Yes (up to 95V)	Yes	Yes	
OpticalCON Panel Connector (Neutrik)	Yes	Yes	No	No	
ST Fiber Connectors	Yes	Not Typically	No	No	Used with the FP-790 System for infrastructure wiring only
LC Connectors	No	No	No	No	Infrastructure and Internal Equipment Use

Table 2 - Fiber Optic Connector Types & Usage

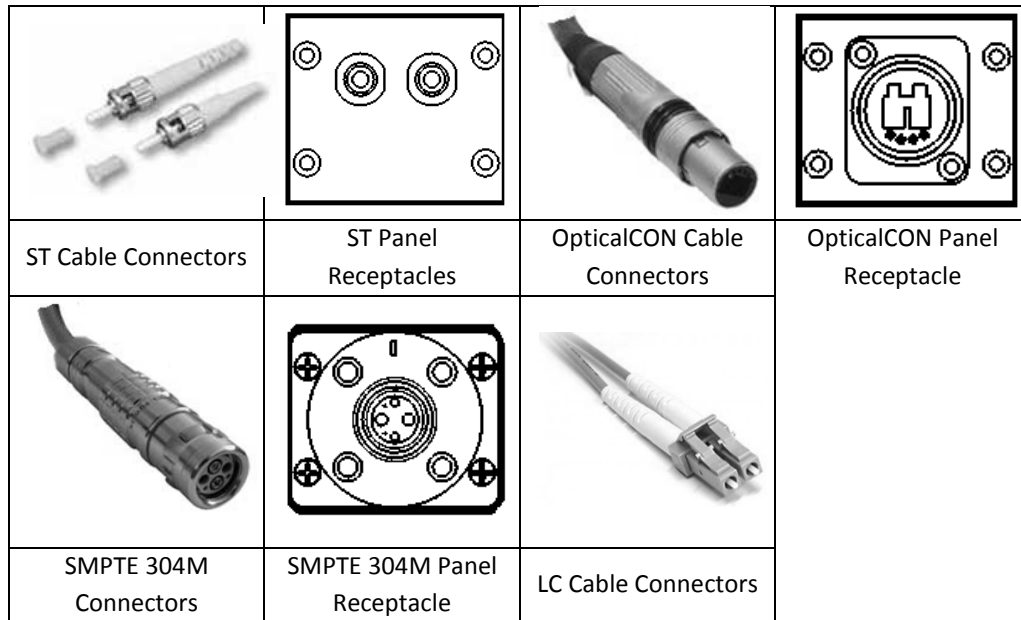


Figure 3 - Fiber Optic Connectors

2.2. CopperHead FS-790 Transceiver System concepts

The Telecast CopperHead FS-790 Transceiver System is a camera video, audio and data multiplexing system that installs between the JVC ProHD GY-HM790 video camera and its power source and connects via a single fiber optic cable to a Base Station in a truck, studio control room, or other video production facility. All video, audio and data usually carried on Triax or multi-core cable is sent, bi-directionally, over a single lightweight fiber over distances as long as 5 km or more.

The Camera Unit is attached directly to the camera. A battery, battery power adaptor or a Telecast Fiber Power Wafer power supply is attached to the Camera Unit. Battery mounts accommodated are the Anton-Bauer and the V-Mount.

The CopperHead FS-790 Transceiver System consists of two main components:

1. The CopperHead FS-790 Camera Unit – this unit has two options: a) the battery physical interface system and b) the fiber connector.
2. The CopperHead FS-790 Base Station – this unit has three options: a) the power configuration, b) the fiber connector and c) the intercom interface.

Typically options are determined at the time of product order and the units are delivered pre-configured. Some options can be field changed by qualified personnel. This manual describes each of the possible options.

The unique design of the CopperHead KA-F790 Camera Unit allows for the majority of signal connections between the JVC ProHD GY-HM790 video camera and the CopperHead to be carried over a 68 pin connector internal to the camera and CopperHead Unit.

The signals carried internally between the camera and the Camera Unit are:

- SDI – HD/SDI Camera Video
- VBS (Analog) Camera Video
- VBS Video (Genlock) to Camera
- VBS Video (Return Video) to Camera
- Audio 1 from Camera
- Audio 2 from Camera
- Timecode to and from Camera
- Camera Control
- Camera Tallies (Red and Green)

2.3. Signal paths in the CopperHead FS-790 Transceiver System

The CopperHead FS-790 Transceiver System utilizes an optical fiber link between the Base Station and the Camera Unit to carry all of the required signals necessary for operation of the camera and associated production equipment. The Camera Unit multiplexes electrical signals from the camera and other remote sources and converts them to an optical signal for transmission over the fiber. Simultaneously, an optical return signal is received at the Camera Unit from the Base Station; this signal is then converted to electrical analog information for use by the camera, camera operator, and auxiliary equipment at the camera location.

When the hybrid fiber cable option is used, the link also provides power to the Camera Unit and the camera itself. Only the single fiber link or hybrid fiber link is required between the Base Station and the Camera Unit.

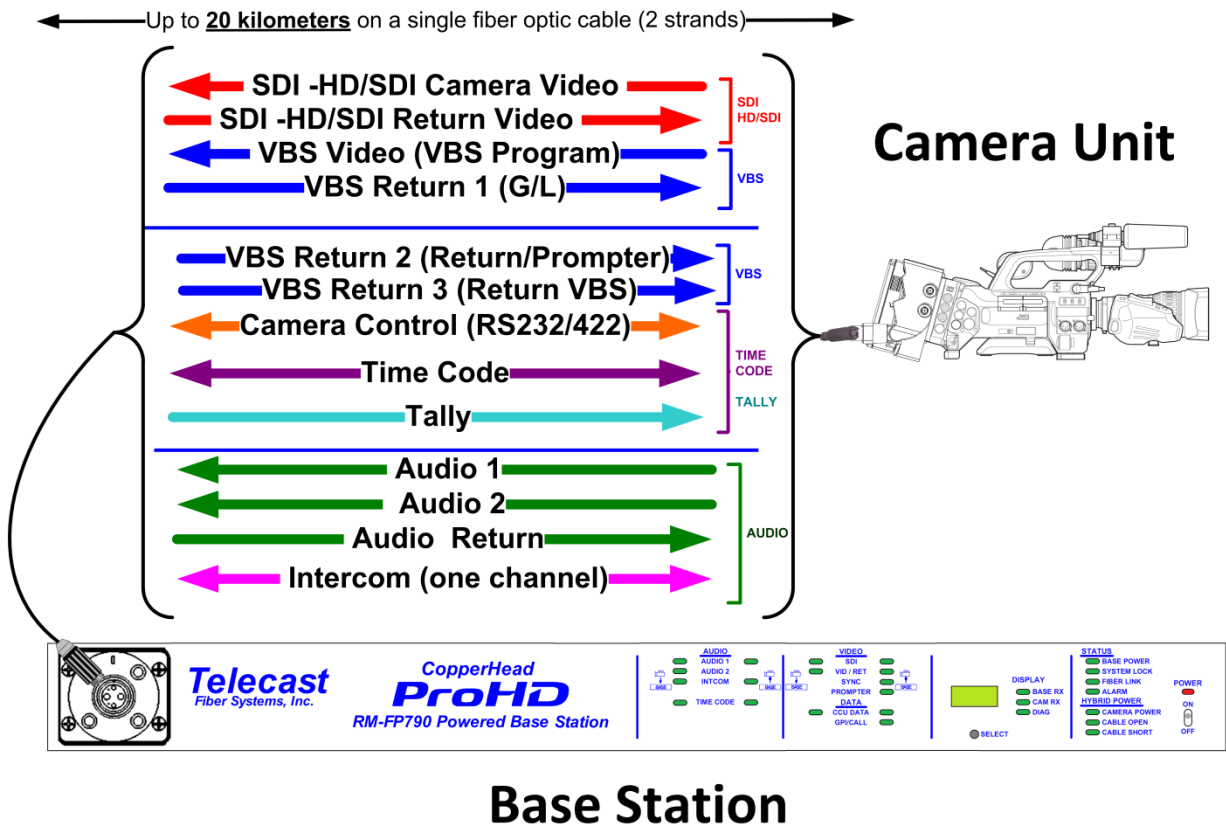


Figure 4- Base Station to Camera Unit Connection

2.4. CopperHead FS-790 Transceiver System Components

CopperHead KA-F790 Camera Unit Overview

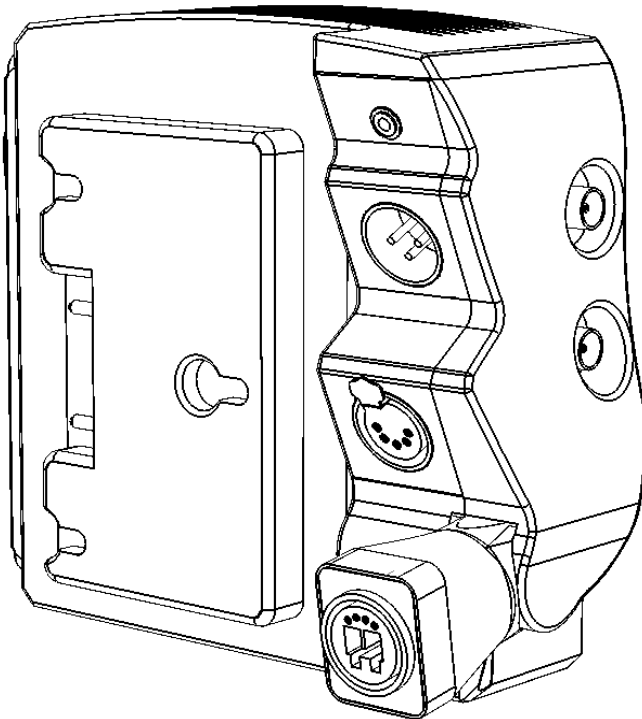


Figure 5 - Camera Unit: Connector Panels

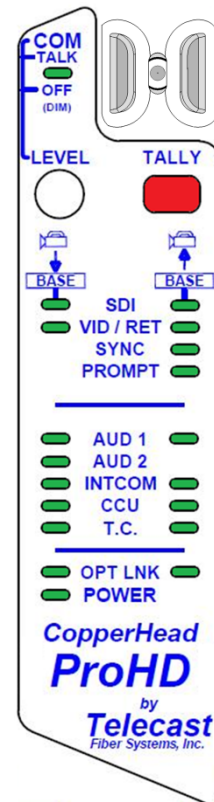


Figure 6 – Camera Unit: Indicator and Intercom Level Control Panel

The actual appearance of your CopperHead KA-F790 Camera Unit will vary depending on the battery mount and fiber cable connection options specified at the time of purchase.

CopperHead RM-FP790 Base Station

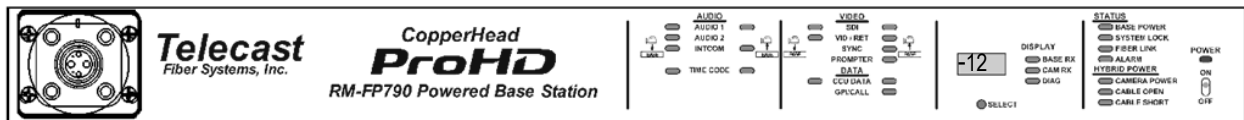


Figure 7 - Base Station: Front Indicator Panel

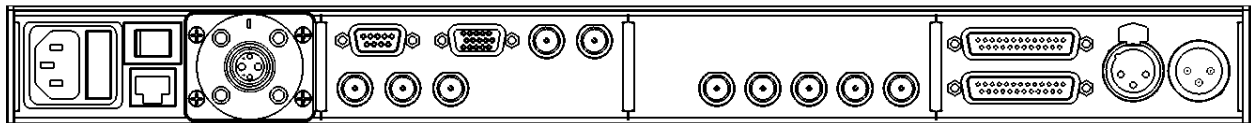


Figure 8 - Base Station: Rear Connector Panel

The actual appearance of your CopperHead R790 Base Station will vary depending on the fiber cable connection and power options specified at the time of purchase.

CopperHead FS-790 Transceiver System Additional Components

In addition to the CopperHead FS-790 Camera Unit and Base Station the system consists of:

1. External Power Supply or Power Cord for the Base Station (depending the unit configuration)
2. Cable Sets as required by your camera and remote controller types to connect the CopperHead Camera Unit to the camera, and to connect the Base Station to the optional remote controller
3. Hardware kits for rack mounting the Base Station
4. Portable fiber reel with fiber per your purchase order
5. Optional “Power Wafer” Camera Adaptor with optional external power supply

Additional JVC accessories for your camera may have been supplied at the time of purchase.

NOTE: You must use your own cables to make connections for Tally, Black Burst/Gen Lock, Base Station monitor, and other ancillary signals and equipment. See Appendices 1 & 2 for suggestions.

Page Intentionally Left Blank

Chapter 3. Installation of the CopperHead KA-F790 Camera Unit on the JVC ProHD GY-HM790 Video Camera

This chapter describes the physical installation of the CopperHead FS-790 Transceiver System. The following areas are covered:

- 1) Initial Installation of the CopperHead KA-F790 Camera Unit to the camera
- 2) Mounting of the optional Power Wafer Unit to the CopperHead FS-790 Camera Unit
- 3) Relocation of the CopperHead FS-790 Base Station Fiber connector from the back panel to the front panel

3.1. Initial Installation of the CopperHead KA-F790 Camera Unit to the Camera

This section describes the physical installation of the CopperHead KA-F790 Camera Unit to the camera. Installation should only be performed by a technically qualified individual. Typically the installation will be performed by the technical staff at your JVC Dealer, System Integrator or a technician on your organization's staff. A qualified and experienced individual should be able to accomplish the installation in about 15 minutes.


The installation encompasses the following steps:

- 1) Verification of all components
- 2) Relocation of the Battery Adaptor from the back of the Camera to the KA-F790 Camera Unit
- 3) Installation of the Camera Unit Mounting Plate on to the camera
- 4) Installation of the Connector Adaptor Plate and connection of required cables
- 5) Mounting of the Camera Unit on to the Mounting Plate
- 6) Operational test of the installed system

You will need a clean flat surface upon which to work and a medium Phillips screwdriver to perform the installation of the Camera Unit on to the Camera.

This User Guide illustrates the installation of a Camera Unit on to a Camera equipped with an Anton Bauer type battery. The V-Mount system installation is identical with the very minor wiring connector differences.


Verification of All Components

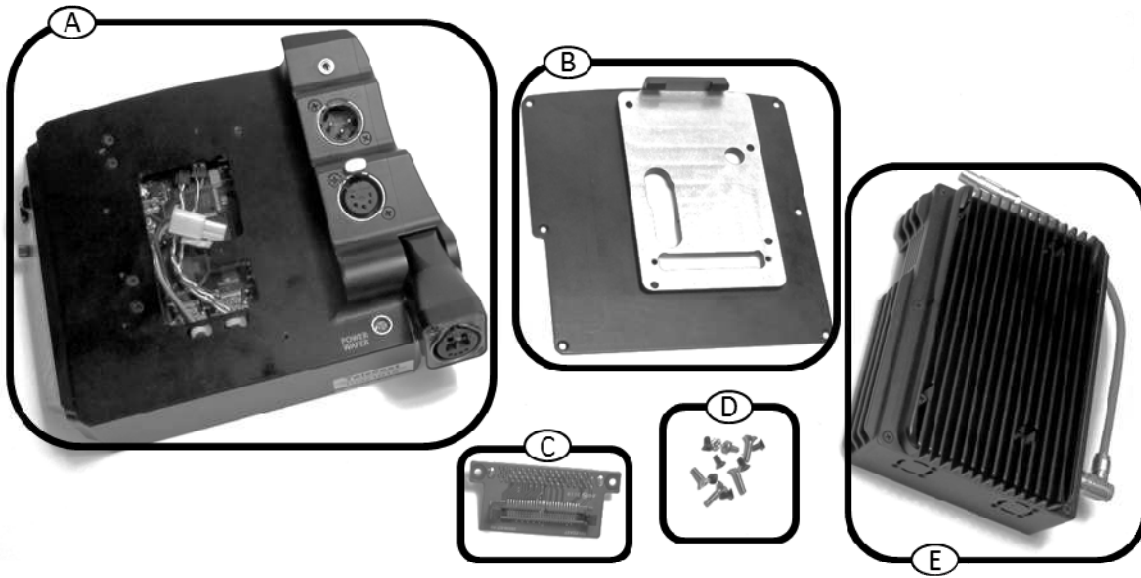

The following items are required for the installation procedure:


- A) The CopperHead KA-F790 Camera Unit
- B) The Camera Unit Mounting Plate
- C) The Connector Adaptor Plate
- D) Screw Assortment
 - a. 2 Connector Adaptor Plate Screws (with lockwashers)
 - b. 6 Mounting Plate to Camera Screws (black Phillips Head)
 - c. 4 Camera Unit to Mounting Plate Screws (plated Phillips head)
 - d. Note: The screws used to mount the Battery Adaptor to the Camera will be re-used to mount the Battery Adaptor to the Mounting Plate
- E) Optional Power Wafer Unit – for Powered Systems only

Insure that all of these items are present before beginning the installation procedure.

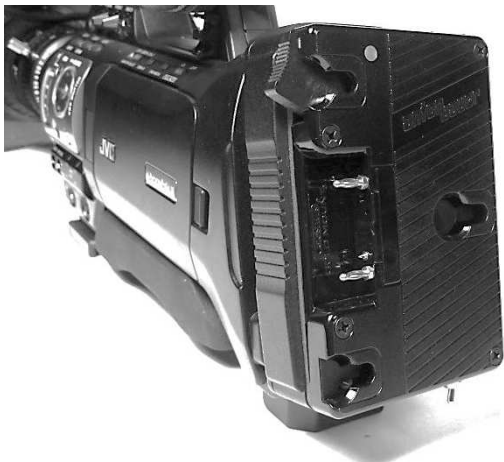

The Camera described in this section is the GY-HM790U equipped with the Anton Bauer battery mount. The GY-HM790E is equipped with the IDX “V-Mount” Battery mount.


Relocation of the Battery Adaptor from the Camera to the KA-F790 Camera Unit

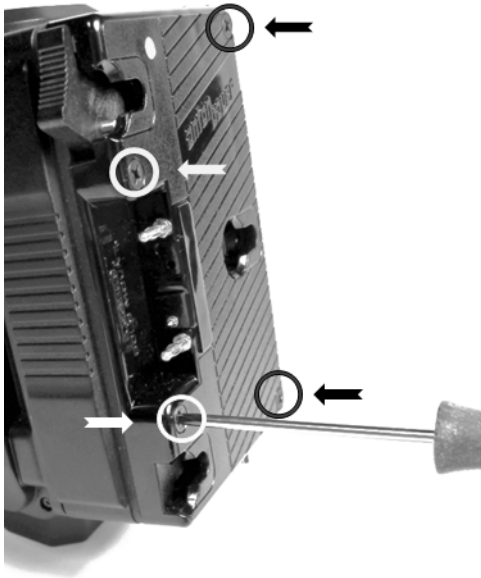


- 1) Place the camera on a flat surface with the battery mount towards you
- 2) Remove each of the four retaining screws indicated in the illustration
- 3) Be careful not to strip these screws during this procedure as they will be needed later
- 4) Place the screws in a safe place where you can get them in a few minutes
- 5) Carefully pull the battery mount off of the camera and lay it wiring side up next to the camera. Be careful not to stretch any of the attached wires past their limit




- 1) Identify the Velcro cable retainer inside the body of the camera
- 2) Pull the Velcro tab free and carefully pull the internal Power Cable connection free of the camera

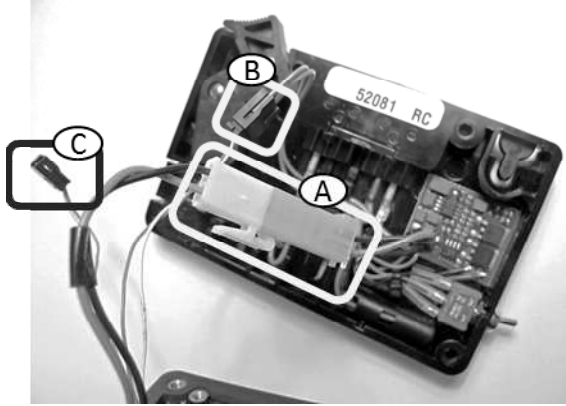

- 1) Identify three connectors
 - a. The white power connector
 - b. The black voltage data connector
 - c. The black unused connector (not connected to the battery adaptor)
- 2) Pull the white power connector apart by pushing the connector release tab
- 3) Slide the black voltage data connector apart
- 4) Once the two connectors are separated put the camera to one side

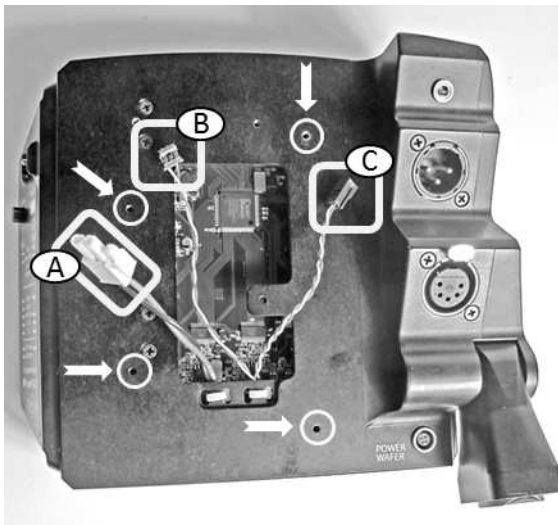


- 1) Position the Camera Unit on the working surface so that the connectors are positioned as shown in the illustration
- 2) Identify the 4 screw holes as indicated
- 3) Position the Battery Mount so that you can access the connectors in the Battery Mount and the Camera Unit
- 4) Connect (A) the White Power connector
- 5) Connect (B) the Power Voltage Data Connector
- 6) Position connector (C) inside the opening of the Camera Unit so that it will not be pinched by the Battery Mount when attached to the Camera Unit. This connector is not used.

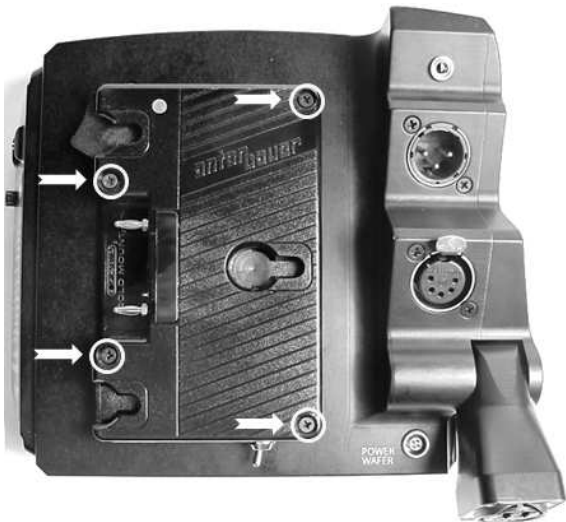

- 1) Carefully position the two connected wires within the Camera Unit
- 2) Place the Battery Mount on to the Camera Unit being careful not to pinch any of the wires between the Battery Mount and the Camera Unit
- 3) Line up the four screw holes between the Battery Mount and the Camera Unit
- 4) Install the screws you removed in the previous step

Note: For these steps the installation of the IDX "V-Mount" battery adaptor is identical

Installation Of The Camera Unit Mounting Plate On To The Camera

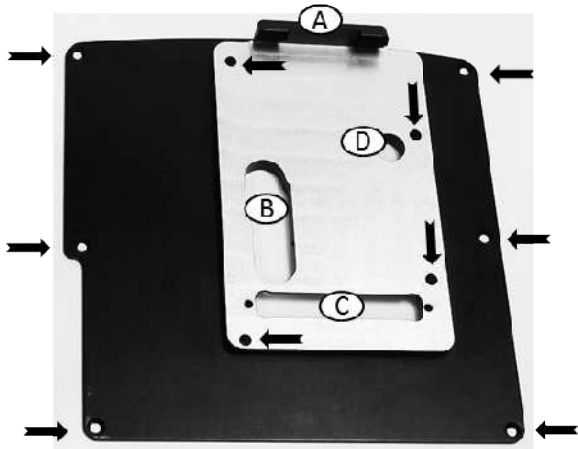


Identify the various features of the Camera Unit Mounting Plate (the camera facing side of the plate is shown in this illustration)


- A) Camera plate mounting hooks (for mounting into the Camera accessory mounting slots)
- B) Connector wire cutout
- C) Connector Adaptor Plate cutout
- D) Video Connector Cutout

Six Mounting Plate to Camera screw holes

Four Camera Unit to Mounting Plate screw holes

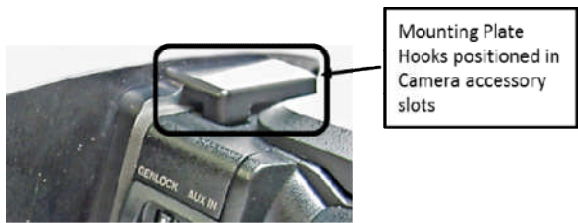


- 1) Position the Mounting Plate so that the two Mounting Plate hooks sit in the Camera accessory mounting slots
- 2) Line up the Mounting plate with the screw holes in the Camera (the same ones used by the Battery Mount)
- 3) Make sure that the connectors and wires feed through the (B) Connector wire cut out and are not pinched between the Camera and the Mounting Plate

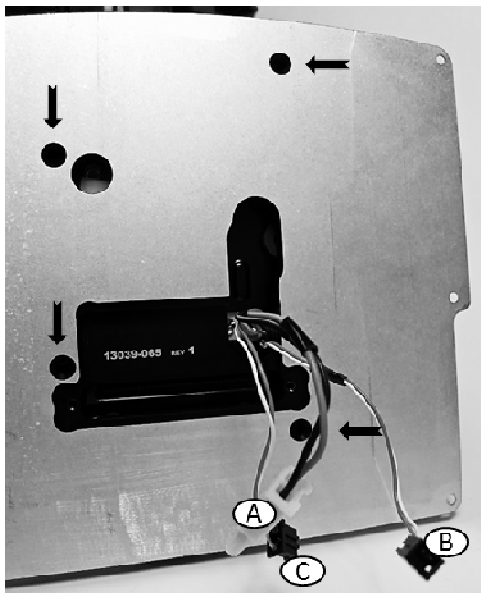


- 1) When the Plate is seated properly secure it to the Camera using the provided 4 Chrome plated flat head screws
- 2) Before tightening down the Plate confirm that the wires move freely in the Connector wire cutout

Installation Of The Connector Adaptor Plate And Connection Of Required Cables

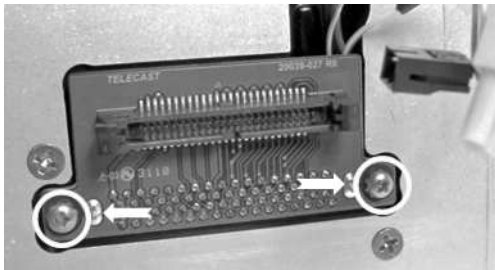


- 1) Position the Connector Adaptor Plate into the cutout as shown
- 2) Carefully push the Adaptor Plate onto the existing 68 pin connector in the Camera
- 3) Secure the Adaptor plate to the Camera using the two provided lock washer screws – Do not over tighten these screws so as to prevent damage to the Adaptor plate

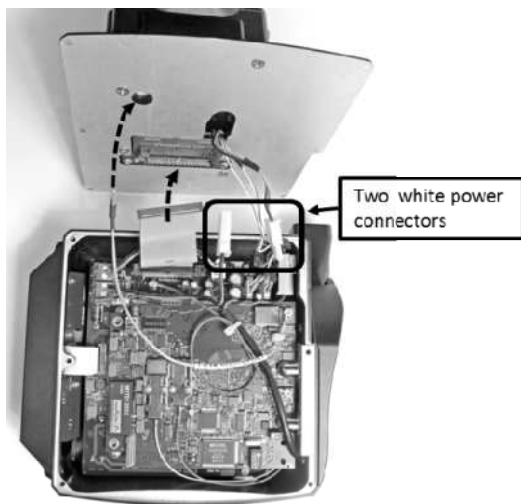


- 1) Position the Camera Unit in front of the Camera and Mounting Plate as shown
- 2) Position the various connectors so that they do not interfere with each other
 - a. White Power Connectors
 - b. 68 Pin Ribbon Cable
 - c. HD/SDI Video Cable

- 3) Position the two unused black voltage and battery data connectors so that they are out of the way

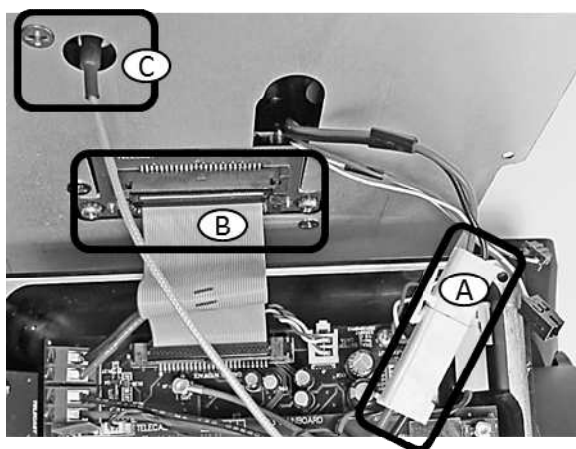


- 1) Connect the two white Power Connectors (A)
- 2) Carefully seat the 68 pin ribbon cable on to the Camera Adaptor Plate (B)– line up the connector key and open the locking levers on either side of the Camera Adaptor
- 3) Only slight pressure is needed to firmly connect the ribbon cable if the key is properly aligned – once seated the locking levers will snap closed and secure the connector
- 4) Connect the HD/SDI Cable (C) to the Camera video connector through the Video Connector cut out

Mounting Of the Camera Unit On To the Mounting Plate

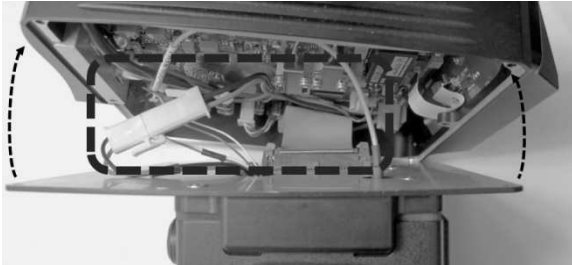

- 1) Carefully position the various wires within the Camera Unit so that they “float” between the Mounting Plate and the Camera Unit – make sure that they will not be pinched when the Camera Unit is attached to the Plate
- 2) Locate the Camera Unit so that the Camera Mounting Plate is seated within the interior of the Camera Unit – you may want to insure that the Camera is stable and stationary during this process

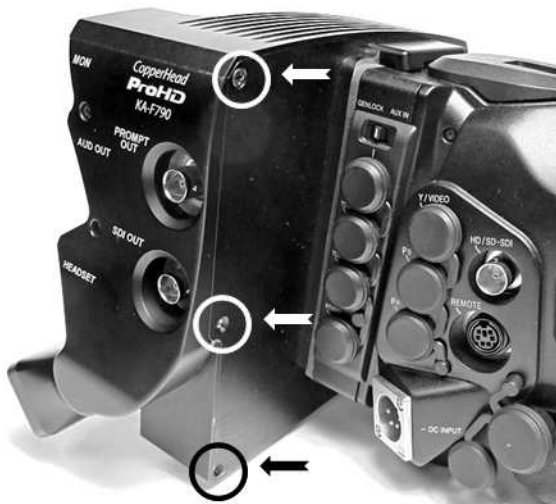

- 1) When the Camera Unit is securely positioned on the Mounting Plate and all wires are securely contained within the Camera Unit secure the Camera Unit using the six provided black flat head screws
- 2) Install all six screws loosely before tightening them down

Operational Test Of The Installed System

When the Camera Unit has been successfully installed perform an Operational Test of the system to insure that all connections were made properly. Follow the setup and operating procedures described in Chapters 5 & 6 of this user guide.

3.2. Mounting Power Wafer Unit to the CopperHead KA-F790 Camera Unit

This example illustrates the use of a camera with an Anton-Bauer battery mount system. This case illustrates a configuration where the camera is powered through the Power Wafer option. The Power Wafer is powered through a Hybrid fiber cable which is powered from the CopperHead FS-790 Base Station or MPS External Power Supply.

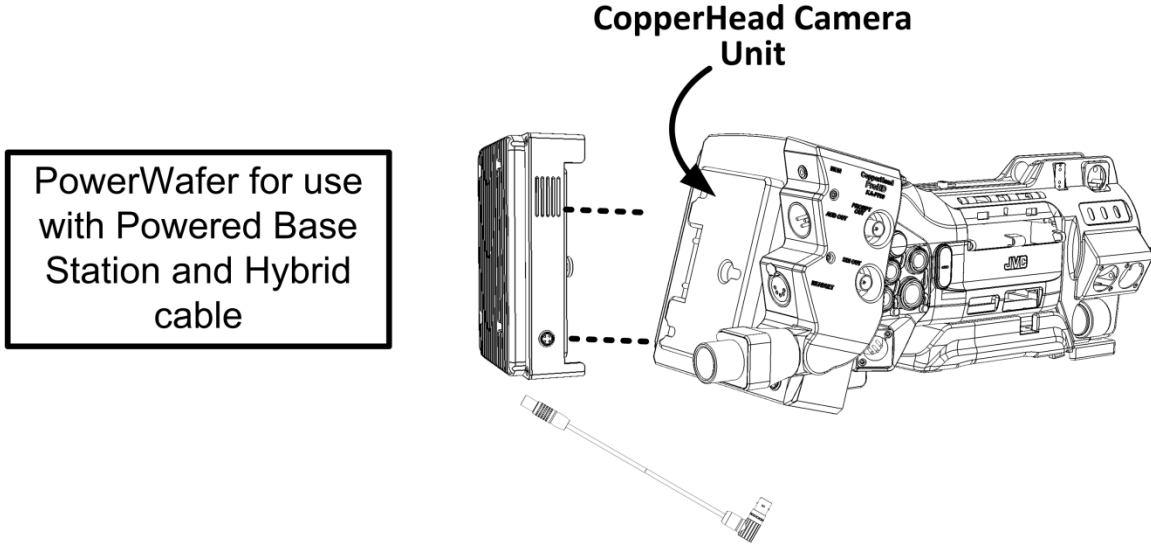


Figure 9 - Mounting the Power Wafer Unit to the CopperHead FS-790 Camera Unit

The Power Wafer is attached to the CopperHead FS-790 Camera Unit in place of the battery. It is attached in the same manner as the camera battery.

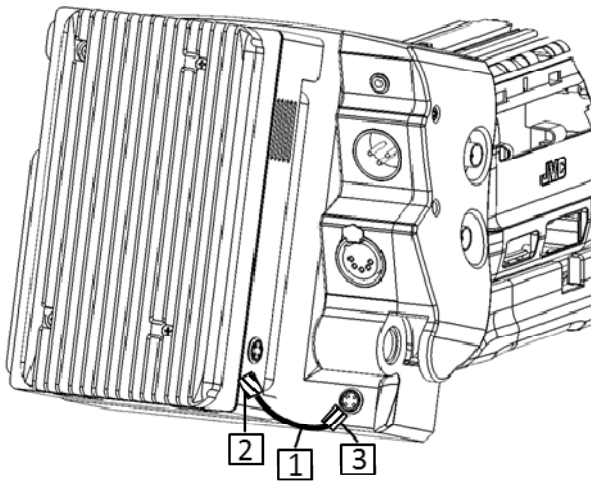


Figure 10 - Connecting the Power Wafer

When the Power Wafer is securely mounted to the CopperHead FS-790 Camera Unit connect the supplied Power Wafer connector cable (1) between the Power Wafer (2) and the Power Wafer connector on the Camera Unit (3)



The Power Wafer to Camera Unit cable is supplied with the CopperHead Power Wafer Unit. For configuration please see Chapter 5.

3.3. Relocation of the CopperHead RM-FP790 Base Station fiber connector

The CopperHead RM-FP790 Base Station may be configured with the fiber connector mounted either on the back or the front of the Base Station. You may order your Base Station in either configuration and it is possible to relocate the Fiber Connector from one position to the other in the field.

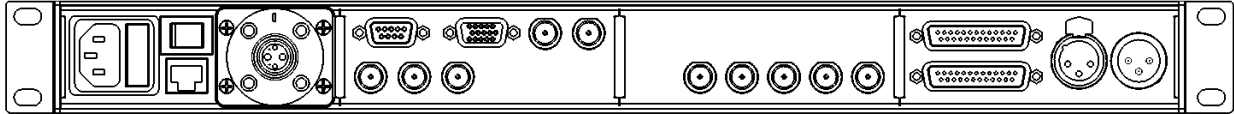


Figure 11 - CopperHead RM-FP790 Base Station with Rear Mounted Fiber Connector

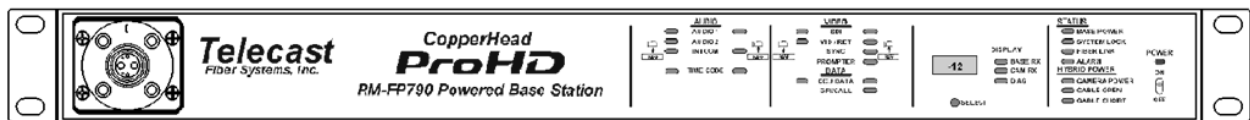


Figure 12 - CopperHead RM-FP790 Base Station with Front Mounted Fiber Connector

The Fiber Connector relocation process can be accomplished by a qualified Telecast Fiber technician in about 15 minutes or less. You should give yourself an hour with the expectation that it will take less time.

For a complete illustrated step-by-step procedure please go to <http://www.telecast-fiber.com/support> and click on the CopperHead FS-790 Technical Notes link or contact Telecast Fiber System support directly.


Page Intentionally Left Blank

Chapter 4. CopperHead FS-790 Transceiver System Detailed Description

This chapter describes in detail each element on the Camera Unit and Base Station of the CopperHead FS-790 Transceiver System. Physical configuration of the system and system connections and practical operation are covered in following chapters. For an overall view of component location please see the CopperHead FS-790 Transceiver System overall diagrams in Appendix 4.

4.1. CopperHead KA-F790 Camera Unit

CopperHead KA-F790 Camera Unit Connector Area

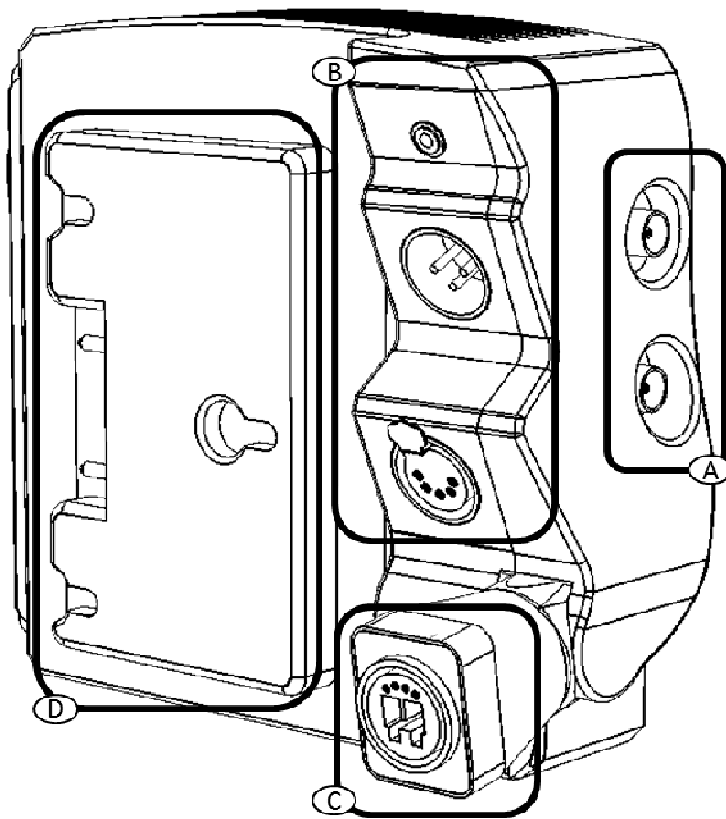

The connector area of the Camera Unit has 4 areas of interest:

- A) Video Connector Panel
See Page 30
- B) Audio/Intercom Connector Panel
See Page 30
- C) Fiber Connector & Power Wafer Connector
See Page 31
- D) Battery Mount
See Page 32

Figure 13 - CopperHead FS-790 Camera Unit Back Side


CopperHead KA-F790 Camera Unit Connector Area –Connectors

For additional information about the signals carried on these connectors please see Page 4.

Area A – Video Connector Panel




Throughout this document component Key Numbers are coordinated with the overall system diagrams found at the end of this User Guide in Appendix 4.

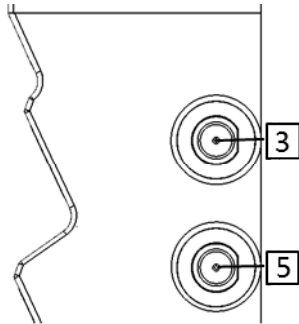

3) Prompter Out (from Base Station)

5) SD-HD/SDI Digital Video Output (from Base Station)

Area B - Audio/Intercom Connector Panel

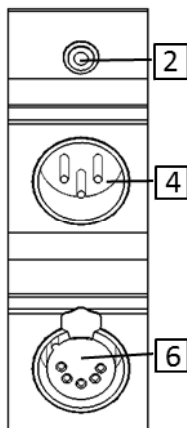

2) Monitor Headset Connector

Typically return intercom audio from the Base Station


4) Audio Output (from Base Station)

Typically return audio from the Base Station

6) Intercom Headset Connector

Two way intercom signals


Area C - Fiber Connector & Power Wafer Connector

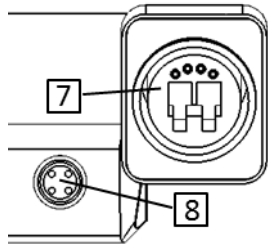


7) Fiber Cable Camera Connector

8) Power Wafer Connector

The CopperHead KA-F790 Camera Unit is shipped with one of the two Fiber Connectors shown below.

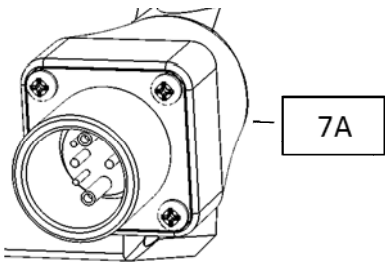


15 A) SMPTE 304M (powered)

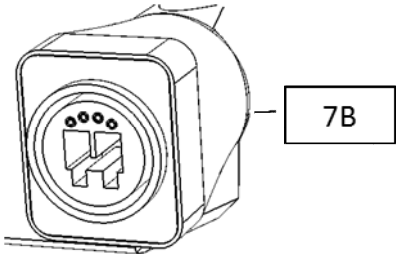


15 B) OpticalCON (powered or unpowered)

Area D – Battery Mount

The CopperHead KA-F790 Camera Unit is fitted for one of two of Battery to camera mount types: the Anton Bauer mount or the V-mount. The battery mount shipped with the camera is reused as the battery mount installed on the Camera Unit.

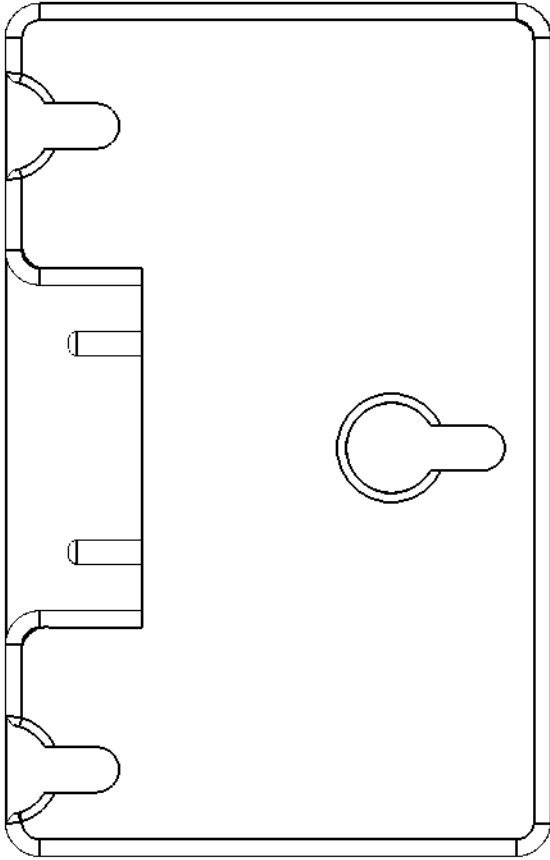

Anton-Bauer Type Battery Mount

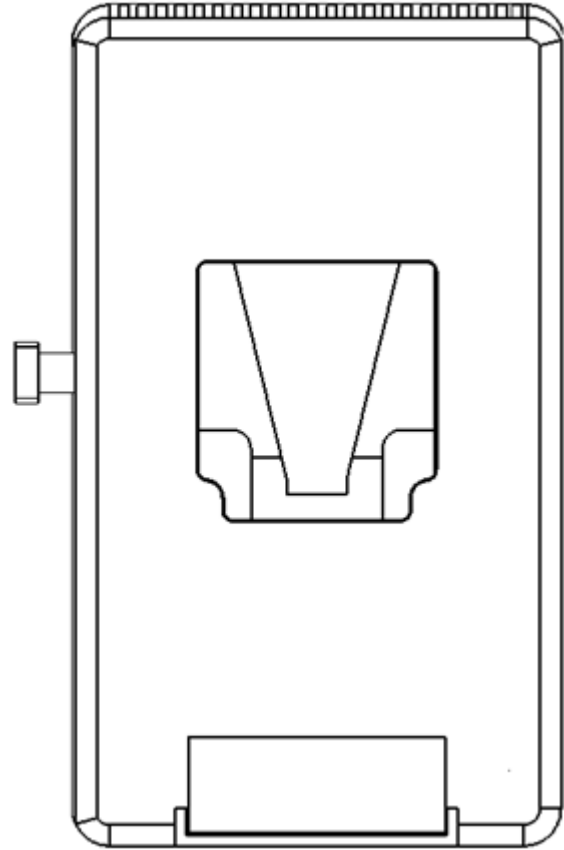

V-type Battery Mount



CopperHead KA-F790 Camera Unit Indicator and Control Panel

The CopperHead KA-F790 Camera Unit Indicator Panel has a series of LED displays that monitor the various signal paths between the Camera Unit and the Base Station.

For signals remain constant such as time code and video the LED remains on as a steady green. For signals that fluctuate such as audio, the LED will reflect the varying signal activity...


If the LED is off either the signal has been lost or it is not in use.

Please see the Overview Diagram in Appendix 4

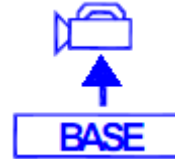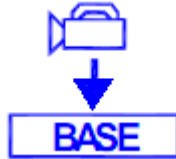

The LED indicators on the left side of the panel indicate signal paths from the Camera Unit to the Base Station.

Right side LEDs indicate signal paths from the Base Station to the Camera Unit.

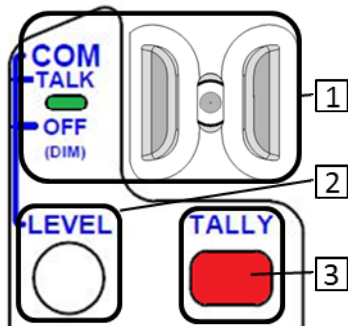

1) Intercom Control Group

Intercom Talk active indicator controlled by switch

Please see Section 6.4 for information on use of the Intercom Control Group

2) Intercom Headset Level Control

3) Tally Indicator Light

Indicates the status of the GPI/Tally 1 signal

Off when the signal is not present

Bright Red when the signal is present

4) SDI Digital Video Signal

Monitors camera SDI Video to Base Station and SDI return video to the Camera Unit

5) Video/Return – Analog Video Signals


Monitors Camera Monitor video from the Camera Unit to the Base Station and Return Video to the Base Station from the Camera Unit


6) Sync

Monitors Genlock (one way from Base Station to Camera)

7) Prompt

Monitors a Prompter Feed (one way from Base Station to Camera)

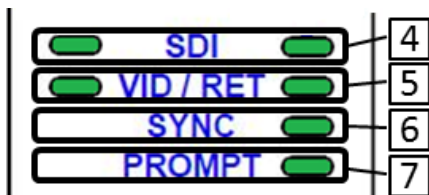

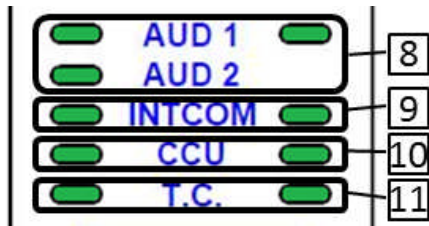

8) AUD 1 & AUD 2 (Program Audio Channels 1-2)

Monitors program audio from Camera Unit to Base Station and return audio from Base Station to Camera Unit

9) INTCOM

Monitors Intercom activity from Camera Unit to Base Station and return audio from Base Station to Camera Unit


10) CCU

Monitors camera control unit data in both directions

11) T.C.

Monitors time code from Camera Unit to Base Station and time code from Base Station to Camera Unit

Area D - Optical Link Signal Strength Indicator & Power Switch

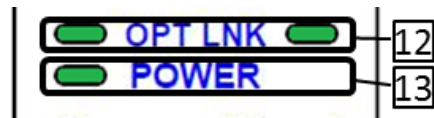

12) Optical Link Indicator

Indicates the status of the optical connection from base to camera and camera to base

Green when both the Base Station and Camera Unit have optical power within normal range.

Red when either the Base Station or Camera Unit optical power is not within normal range.

13) Power Indicator LED

Green indicates power is applied to the Camera Unit. When the camera is powered on so is the KA-FP790 Camera Unit.

Blinking Green indicates a Camera Unit error. Refer to DIAG display mode for details – Page 64

4.2. CopperHead FS-790 Base Station

The CopperHead FS-790 Base Station is available with a number of options. The unit is ordered with a specified Power Module, Audio/Intercom Module and Fiber Connector. For an overall view of component location please see the overall diagrams in Appendix 4.

CopperHead FS-790 Base Station Front Panel


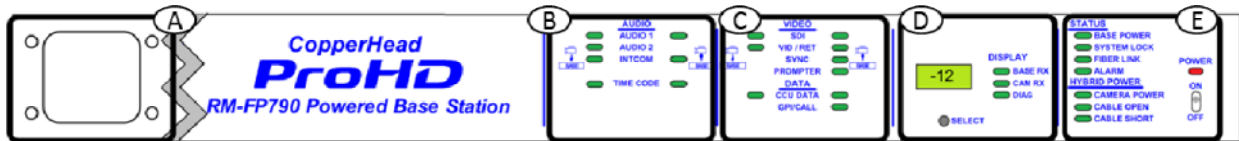


Figure 14 - CopperHead FS-790 Base Station Front Panel

- | | | |
|------------------------------------|-----|-------------------------------------|
| A) Optical Connector | See | D) Signal Strength Indicators/Setup |
| this Page (Front mounted Optional) | | See Page 37 |
| B) Audio Indicators | | E) Status/Power Indicators |
| See Page 36 | | See Page 37 |
| C) Video/Data Indicators | | |
| See Page 36 | | |

CopperHead RM-FP790 Base Station Front Panel – Identifying Controls & Connectors


Area A – Front Panel Optical Connector (Optional)

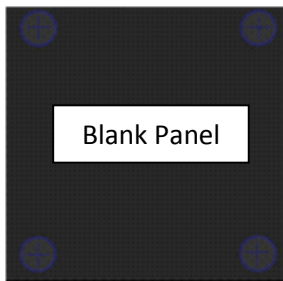


Area A of the CopperHead RM-FP790 Base Station provides for the optional mounting of the Fiber Optical Connector on the front of the Base Station instead of the rear of the Base Station.

For information on how to convert the Base Station from Rear to Front Fiber Connector see Page 27.

Two types of Fiber Connectors are available for use with the CopperHead RM-FP790 Base Station. One of these Fiber Connectors is pre-configured at the time of delivery.

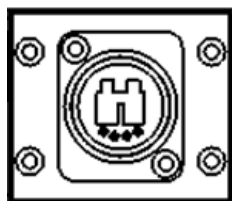


OpticalCON

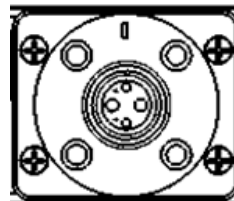

SMPTE 304M

Figure 15 - Fiber Connector Types

Area B – Audio Indicators

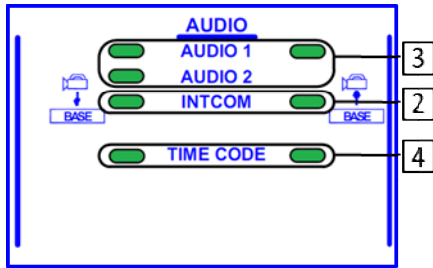

LED Indicators to the left side of the label indicate signal paths from the Camera Unit to the Base Station and right side LEDs indicate signal paths from the Base Station to the Camera Unit.

2) Audio Channels 1-2

Monitors Program audio from Camera Unit to Base Station and one channel of return audio from Base Station to Camera Unit


3) Intercom

Monitors Intercom audio from Camera Unit to Base Station and from Base Station to Camera Unit

4) Time Code Signal

Monitors the time code signal generated by the Camera coming to the Base Station and the Base or House timecode from the Base Station to the Camera Unit

Area C – Video/Data Indicators

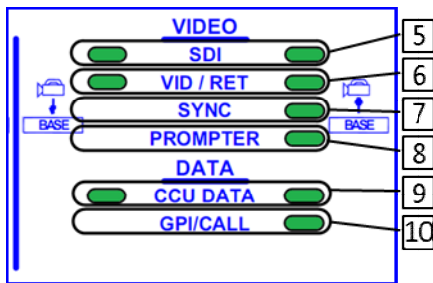

5) SDI Digital Video Signal

Monitors camera SDI video to Base Station and SDI return video to the Camera Unit

6) Vid/Ret

Monitors Camera analog video from the Camera Unit to the Base Station and Return analog video to the Camera Unit from the Base Station

7) Sync

Monitors Genlock signal (one way from Base Station to Camera)

8) Prompter

Monitors Prompter Feed (one way from Base Station to Camera)


9) CCU Data

Indicates that two-way communication exists between the Camera Remote Panel and the Camera

10) GPI/Tally Indicators 1-2

Monitors GPI/Tally Signal 1 to Base Station and Camera and GPI/Tally Signals 1&2 to Camera Unit from Base Station

Area D – Signal Strength Indicators/Setup

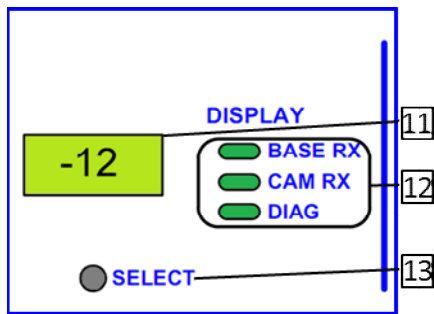

11) Signal Strength Readout in dBm

This display changes between display modes when selected

12) Select Button

Chooses between three modes of operation

13) Readout Function Indicator

BASE RX – Optical Link signal strength received at Base Station from Camera Unit

CAM RX – Optical Link signal strength received at Camera from Base Station

DIAG – Digital display is in Diagnostic mode

For details on how the setup/Diagnostic functions operate please see Page 64.

Area E – Status/Power Indicators

14) Status Indicators

BASE POWER - indicates the status of all power levels in the Base Station

Green when all power levels are normal.

Red when any power level is not normal.

SYSTEM LOCK - indicates that the Base Station is communicating with the Camera Unit.

Green when communicating with Camera Unit

Red when it is not communicating with the Camera Unit

FIBER LINK - indicates the optical power status of the Base Station and camera

Green when both the Base Station and camera optical power are within a normal range.


Red when both the Base Station and camera optical power are not within a normal range

Orange when either the Base Station or camera optical power are not within a normal range

ALARM - indicates that some error condition exists in either the Base Station or the camera.

Red if there is a Base Station error. Refer to the Base Station DIAG for details on the error.

Orange if there is a camera error. Refer to CAM DIAG for details for the error.

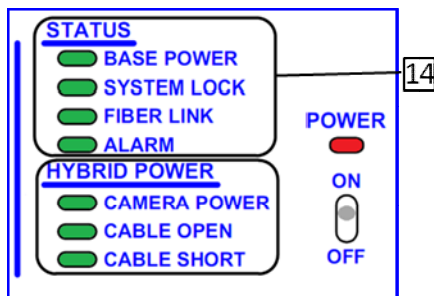

Note: Hybrid Power Indicators are present only on a powered base station unit

15) Hybrid Power Indicators

The Hybrid Power indicators are only applicable to units with the internal power supply (for configurations using the optional MPS power supply – see Pages 47 & 49).

CAMERA POWER - indicates that high voltage is applied to power the camera.

Green when high voltage is being supplied to the camera.

Off when there is no high voltage applied to the camera

CABLE OPEN - indicates that the high voltage cable is open or there is no high voltage cable connected.

Green when the cable is properly connected from the Base Station to the camera.

Red when there no cable connected to the camera or the cable is connected but open.

High voltage will not be applied to the camera until the open condition is corrected.

CABLE SHORT - indicates that the high voltage cable connected is shorted.


16) Power Switch & Power Indicator

Toggle switch to enable or disable Base Station power.

LED turns **Green** when on/off switch is changed to the **ON** position. With a hybrid power system (power supplied by the Base Station) this switch will control power to the Camera and the Camera Unit

For the hybrid system to be properly powered, the AC Mains switch on the rear of Base Station must be in the on position.

See next page for details.

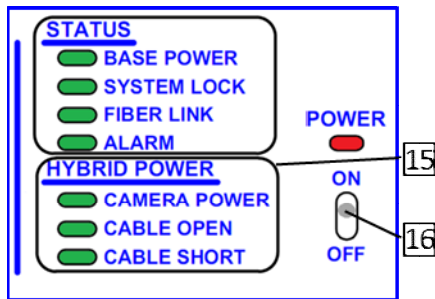

Note: Hybrid Power Indicators are present only on a hybrid power unit

CopperHead RM-FP790 Base Station Back Panel

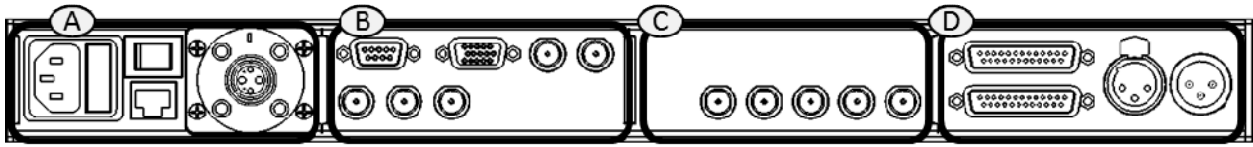


Figure 16 - CopperHead RM-FP790 Base Station Back Panel (Powered Version)


- | | |
|--|---|
| A) Power & Fiber Connectors
See this Page & Page 40 | C) Video Connectors
See Page 40 |
| B) Video/Sync/Data/Control Connectors
See Page 40 | D) Audio/Intercom Connectors
See Page 41 |

CopperHead RM-FP790 Base Station Front Panel – Identifying Controls & Connectors

Area A – Power & Fiber Connectors (Power Module)

The CopperHead RM-FP790 Base Station can be configured with one of three different Power Module Options. The connection and practical use of each of these options is covered in Chapter 5. Multi-pin connector wiring suggestions are covered in Appendix 1.1.


External Power Options

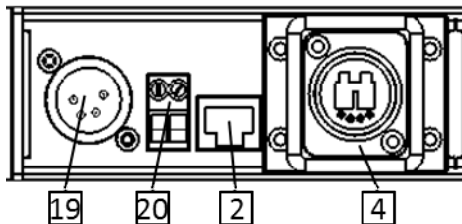

Internal Power with OpticalCON Connector


- 19) 12V DC External Power Supply input connector (XLR 4 Pin)
- 20) 12V DC Input – terminal block
See Appendix 1 – Page 73 for connection details
- 2) For Future Use
- 4) OpticalCON Connector

Internal Power Options

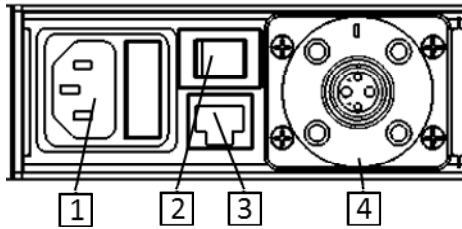

Internal Power with SMPTE 304M Connector


- 1) **AC Power Receptacle and 4AMP Dual Fuse Assembly**
100-240V 50/60 Hz See Page 72 for the Fuse Specification
- 2) **AC Mains switch**
- 3) **For Future Use**
- 4) **SMPTE 304M Connector**

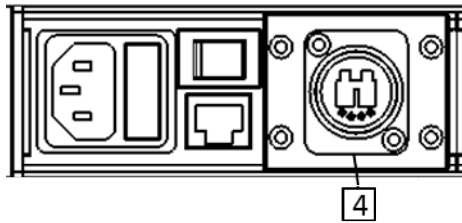

Internal Power with OpticalCON Connector


- 4) **OpticalCON Connector**

Area B – Sync/Data/Control Connectors

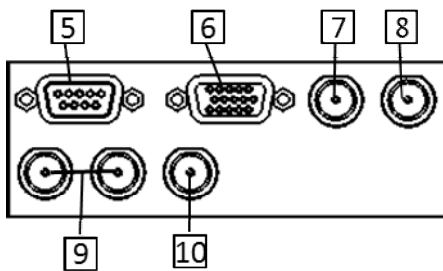

- 5) **Camera Remote Control Panel Connector**
- 6) **Data/GPI Multi-Pin Connector**
- 7) **Time Code In to Camera**
- 8) **Time Code Out from Camera**
- 9) **Sync/Genlock input connector & Loop through**
- 10) **Video Prompter input to Camera**


Area C – Video/Ethernet Connectors

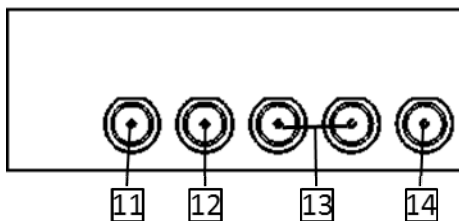

- 11) **Video Output (Analog) from Camera**
- 12) **Prompter Input to Camera**
- 13) **HD/SDI Program from Camera Unit outputs A & B**
- 14) **SDI Return Video source Input to Camera**


Area D – Audio/Intercom Connectors

The CopperHead RM-FP790 Base Station can be configured with one of two different Intercom Options. A third option utilizing a Four-Wire intercom system can be deployed using the 25 pin connectors. Multi-pin connector wiring is covered in Appendix 2

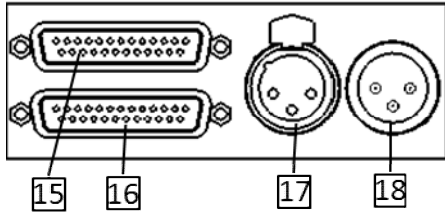

RTS TW Intercom Module

- 15) Audio In and Four-Wire Intercom In**
- 16) Audio Out and Four-Wire Intercom Out**
- 17) RTS TW Intercom Input**
- 18) RTS TW Intercom Loop Through**

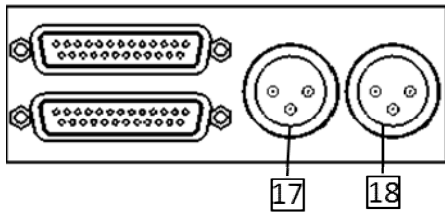

Clear-Com Intercom Module

- 17) Clear Com Ch-A Intercom I/O Connector**
- 18) Clear-Com Ch-B intercom I/O Connector**

4.3. Additional CopperHead FS-790 Transceiver System Items

Your CopperHead FS-790 Transceiver System may consist of one or more of the following items.

1. Portable fiber reel with fiber per your purchase order
2. JVC Supplied Camera Control Unit (please refer to the User's guide supplied with this product)
3. Optional "Power Wafer" Camera Adaptor
4. Optional MPS External Power Wafer Power Supply
5. Optional "PowerPlus" Camera Adaptor and Power Adaptor (please refer to the User's guide supplied with this product)
6. Optional HDX Power Unit (please refer to the User's guide supplied with this product)

“Power Wafer” Camera Adaptor


The CopperHead KA-FP790 Camera Unit can be powered by the optional “Power Wafer” Camera Adaptor. The Power Wafer replaces the local camera battery and any local AC power supply adaptor. The Power Wafer gets its power from the Hybrid fiber cable and the CopperHead FS-790 Base Station equipped with the internal power supply or from the optional MPS external supply.

Up to 95 watts of power can be delivered to the camera, Camera Unit and camera accessories. Up to 780 feet (240 meters) of cable can be used when the Camera Unit is powered directly from the Base Station.

The use of an optional external power supply can extend Base Station to Camera range and increase camera power flexibility. The MPS “Throw Down” Power Adaptor provides this functionality. This unit is described on Page 44.

The Power Wafer replaces the battery or local battery mount AC adaptor. Shown with the Anton/Bauer Battery Mount option.

A short jumper cable carries power from the Camera Unit to the Power Wafer. The power comes to the camera on the power section of the Hybrid Fiber Cable.

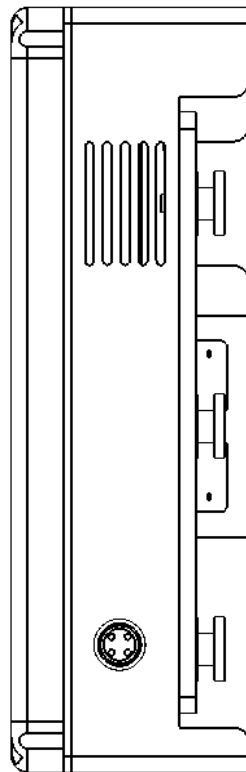

MPS External Power Wafer Power Supply

The CopperHead MPS external power supply provides 95 watts of 12VDC power and fiber cable signal connectivity from the Base Station to the Camera. From the MPS unit to the camera can be configured using either a Hybrid OpticalCON connector or a SMPTE 304M connector. The length available is up to 780 feet or 240 meters.

From the MPS unit to the Base Station can be configured using a non-hybrid OpticalCON connector or two ST connectors. The length available is up to 5 kilometers (3 miles).

The MPS is powered locally with standard AC power. The unit is free standing.

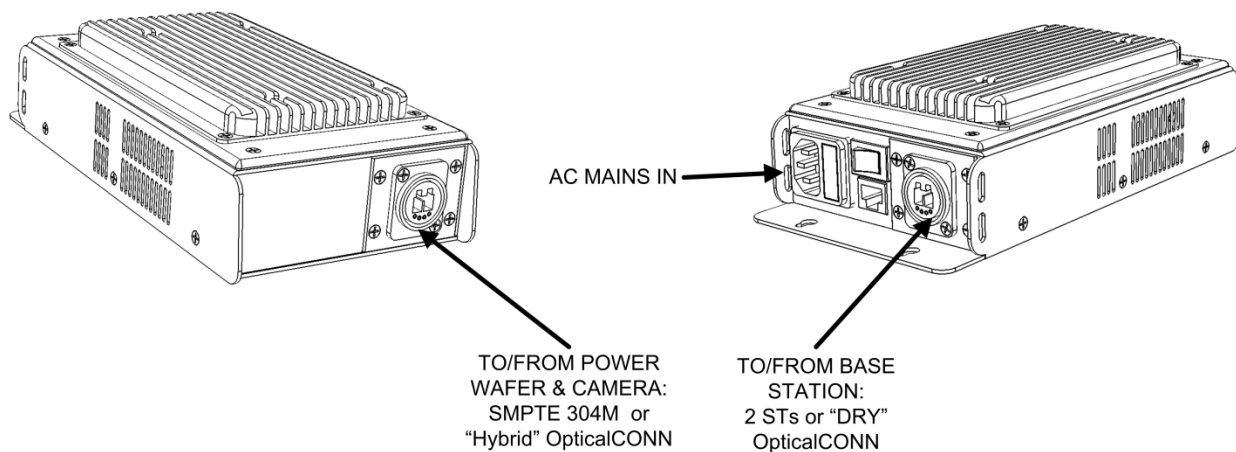


Figure 17 - MPS External Power Wafer Power Supply

All MPS Units require the Power Wafer to provide power to the Camera Unit. Four variations are available with a different set of fiber cable connectors. All MPS units provide 95 watts of 12VDC power.

Part Number	Fiber Connection to Camera	Fiber Connection to Base Station
CH2-MPS-95VD-2ST-NEU	OpticalCON	2 STs
CH2-MPS-95VD-2ST-304	SMPTE 304M	2 STs
CH2-MPS-95VD-NEU-NEU	OpticalCON (with power)	OpticalCON (no power)
CH2-MPS-95VD-NEU-304	SMPTE 304 (with power)	OpticalCON (no power)

Table 3 - MPS Power Supply Adaptor Options

Page Intentionally Left Blank

Chapter 5. Connection of the CopperHead FS-790 Transceiver System

Prior to connecting your CopperHead FS-790 Transceiver System please insure that each of the required cables is available for use. This includes standard video, audio and multi-pin cable sets required for your particular installation. Please see the Appendix for information regarding cables, signals and custom multi-pin cable fabrication. Covered in this chapter are:

- 1) Connections between the CopperHead FS-790 Base Station and the Camera Unit (Fiber Cable)
- 2) Connections between the CopperHead FS-790 Base Station and the base video infrastructure & power components
- 3) Connections between the CopperHead FS-790 Camera Unit and external equipment

5.1. Connections between the CopperHead RM-FP790 Base Station and the KA-F790 Camera Unit

The following table summarizes the various Fiber Cable connection options between the CopperHead FS-790 Base Station and the Camera Unit.

Cable Type	Base Station Power	Camera Unit Power	Distance Range Between Camera and Base
Tactical Fiber	Internal	Local Battery or AC Power	Up to 10 KM (This range can be extended to greater than 20 KM through use of the optional High Power Laser - must be ordered at time of purchase)
SMPTE Hybrid Fiber	Internal	Power Wafer Camera Adaptor	240 meters
SMPTE Hybrid Fiber	External – MPS Power Wafer Power Supply 95 Watts ¹	Power Wafer Camera Adaptor	5 KM between base and MPS power supply 240 meters between power supply and camera
SMPTE Hybrid Fiber	External – HDX Power Supply – 150 Watts ²	CopperHead PowerPlus Camera Adaptor	5 KM between base and power supply 3.2 KM between power supply and camera

Table 4 - CopperHead FS-790 Power Options

1. The optional external MPS Power Supply must be equipped with the appropriate Fiber Cable connectors suitable to your system requirements. Please see Pages 43 for a description of the various options
2. The optional external HDX Power Supply provides two ST Fiber Connectors for connection between the HDX and the Base Station and a SMPTE 304M Connector for connection between the HDX and the Camera Unit. Please see the User Guide supplied with the HDX Power Supply for more information.

The following fiber connection scenarios do not take into account any customized cable and connector installations you may have at your facility. For assistance regarding more complex connection situations please contact Telecast Fiber Systems or your local authorized dealer.

Tactical Fiber between the Base Station and Camera Unit

Camera Internally Powered

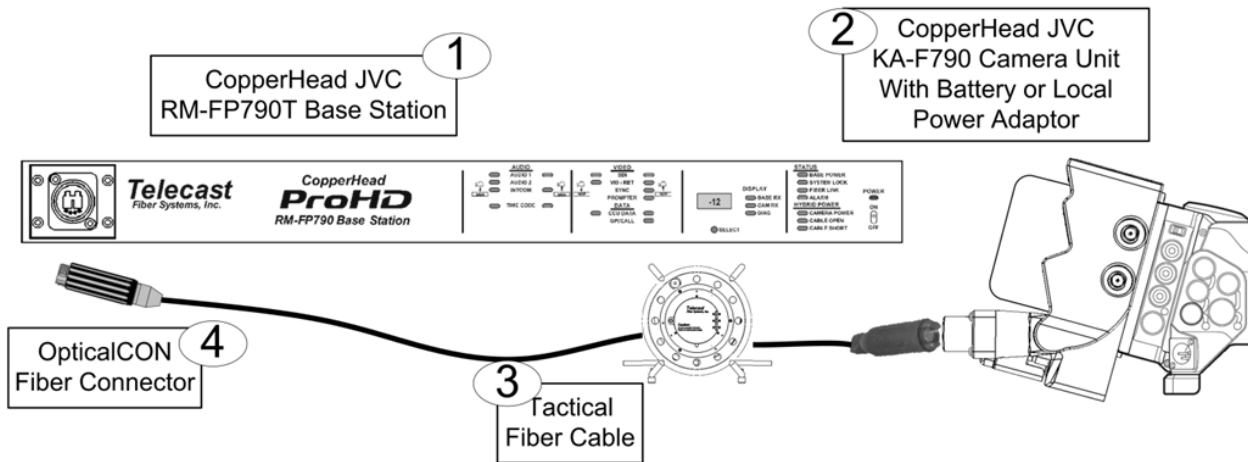


Figure 18 - Tactical Fiber between the Base Station and Camera Unit

Between the Base Station (1) the Camera Unit (2) connect a length of Tactical Fiber Cable (3).

At each end of the fiber cable will be an OpticalCON fiber connector(4).

The Base Station connector (4) may be mounted either on the front or back of the Base Station.

SMPTE Hybrid Fiber between the Base Station (powered) and Camera Unit

Camera Powered through Hybrid Cable from Base Station

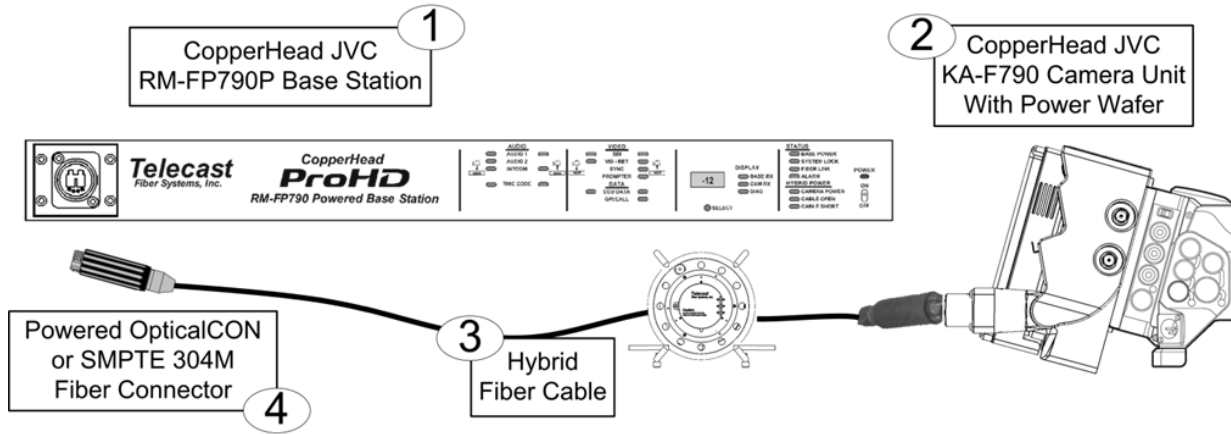


Figure 19 - SMPTE Hybrid Fiber between the Base Station (powered) and Camera Unit

Between the Base Station **(1)** and the Camera Unit **(2)** connect a length of SMPTE Hybrid Fiber Cable **(3)**.

At each end of the fiber cable will be either an OpticalCON or SMPTE 304M Connector **(4)**.

The Base Station connector **(4)** may be mounted either on the front or back of the Base Station.

SMPT E Hybrid Fiber between Base Station and Camera Unit (Infrastructure Wiring)

Infrastructure Wiring Built-In to a Facility using OpticalCON Connectors

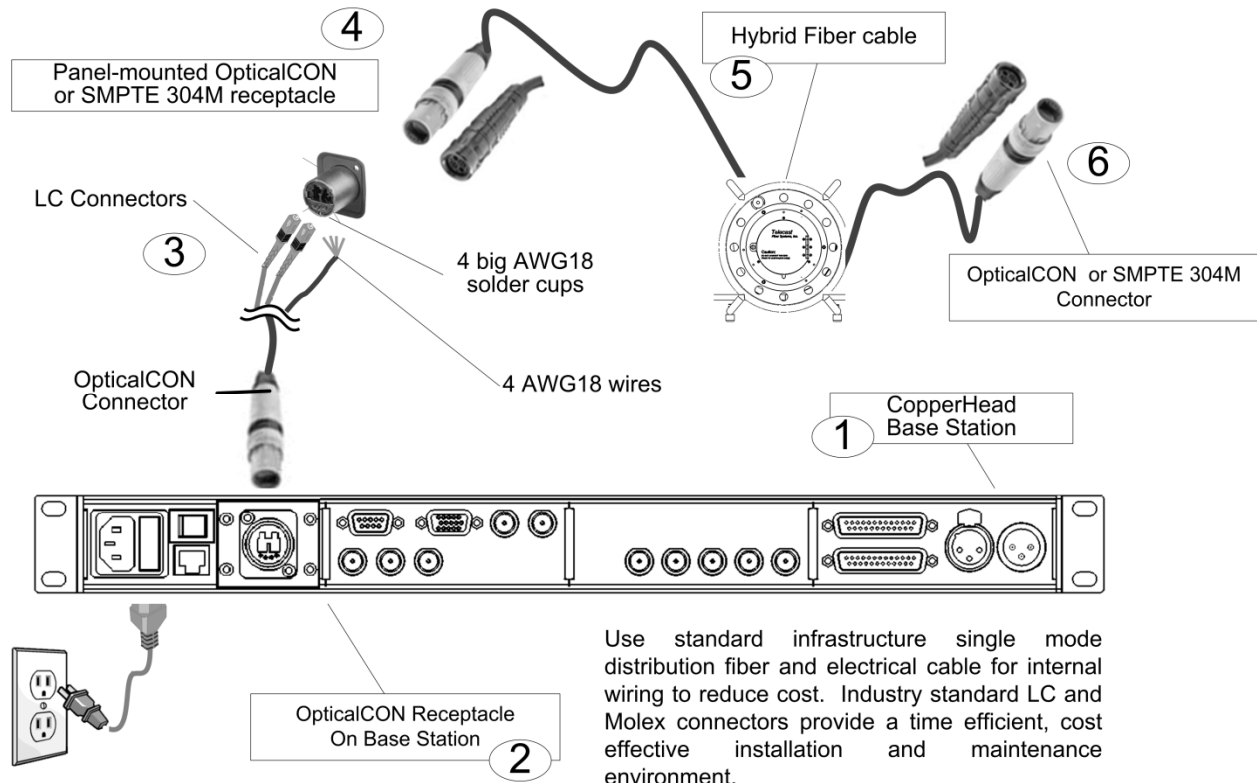


Figure 20 - SMPT E Hybrid Fiber between Base Station and Camera Unit (Infrastructure Wiring)

Panel mounted fiber connectors can be used for permanent installations such as communications closets, truck connector panels and sports facilities. A panel mounted OpticalCON or SMPT E 304M receptacle (4) is connected to the Base Station (1) through infrastructure grade wiring. Two LC Fiber Optic connectors and four soldered AWG18 copper power wires (3) connect to the Base Station through an OpticalCON connector(2).

Between the panel mounted receptacle and the Camera Unit is standard Hybrid Fiber Optic cable (5). This cable is matched to the panel mounted receptacle with either an OpticalCON or SMPT E 304M connector (4) to (6).

SMPT E Hybrid Fiber between the MPS Power Unit and Camera Unit

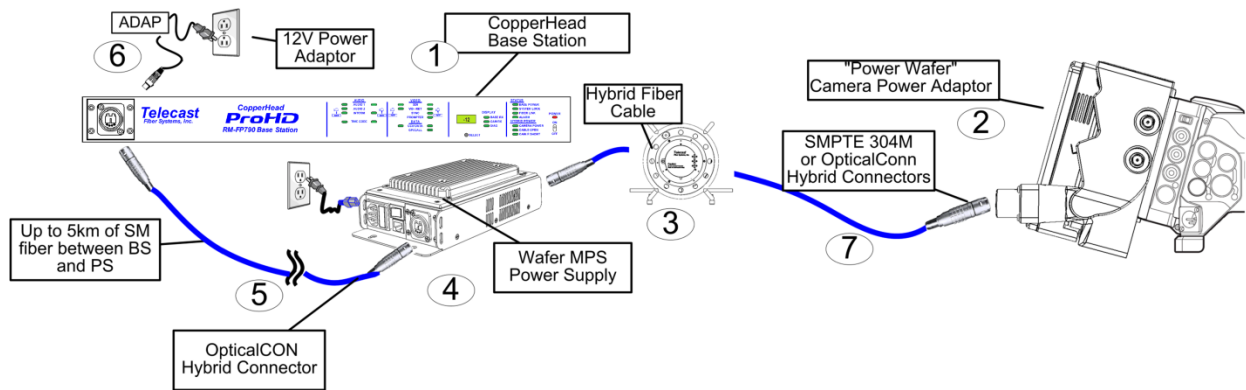


Figure 21 - SMPT E Hybrid Fiber between the MPS Power Unit and Camera Unit

Between the Base Station (1) and the External Wafer Power Supply (4) connect an OpticalCON Tactical Fiber Cable (5) (optionally the MPS Power Supply can be equipped with LC connectors).

Power the External Wafer Power Supply locally by connecting to AC Power. Between the External Wafer Power Supply (4) and the Camera Unit connect a length of SMPT E Hybrid Fiber Cable (3). At each end of the fiber cable will be either an OpticalCON or SMPT E 304M Connector (7). The camera will be powered by the Power Wafer (2).

The Base Station connector (1) may be mounted either on the front or back of the Base Station. The Base Station will be powered by connection to local AC power (6).

5.2. Connections to the CopperHead RM-FP790 Base Station

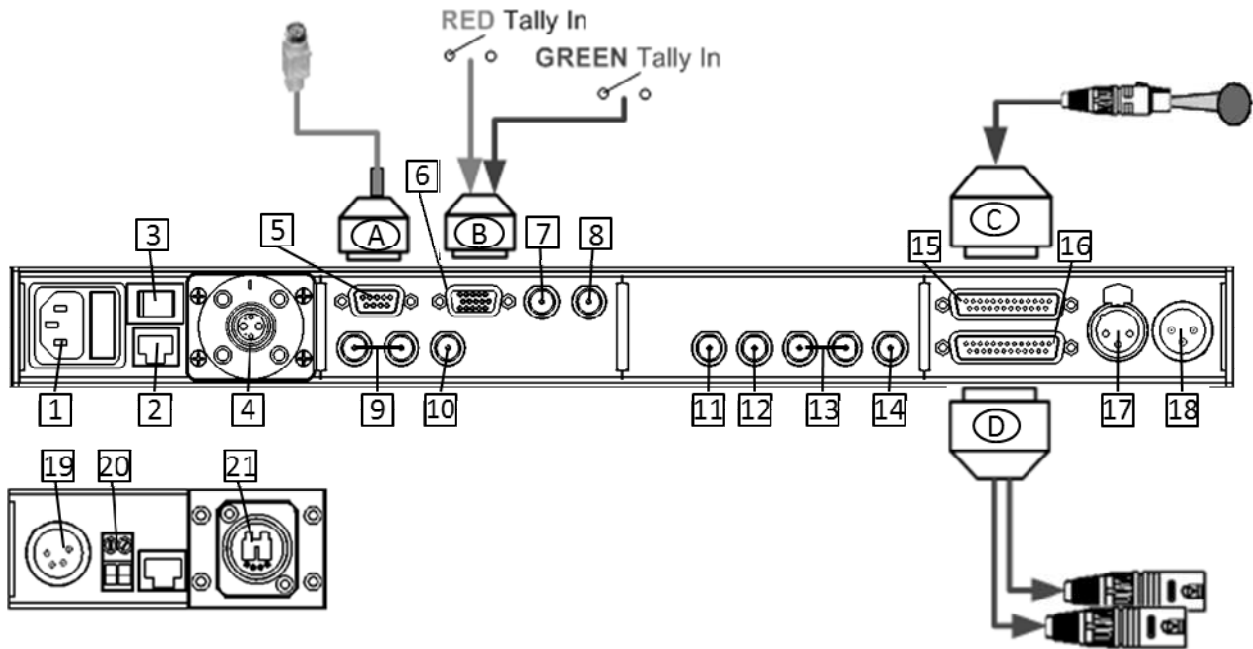


Figure 22 - CopperHead FS-790 Base Unit Connections

Multi-Pin Cable Assemblies Used with the CopperHead FS-790 Base Station

A) Camera Remote Control (Remote) Connector–

Connect your JVC Camera Remote Control Panel (such as RM-LP25, RM-LP55, or RM-LP57).

B) GPI Connector

Connect two GPI/Tally Inputs, typically from your Production Switcher

See Page 71 for connector wiring details

C) Audio In Connector

Connect Return Audio (line level)


See Page 75 for wiring details

D) Audio Out Connector

Carries audio back from the camera location – connect to an audio processing chain or monitors. See Page 76 for wiring details

Connectors into and out of the CopperHead FS-790 Base Station

This information duplicates some of that from above sections. It is presented here to provide a single list of all Base Station connections. Key numbers refer to the diagram above and to the Overview Diagram found in Appendix 4.

- Power In**
- 1 & 19 Depending on your Base Station model, connect a standard 12V DC ADAP power source (4 Pin) or a standard 3 conductor AC Cable (IEC Plug) 100-240V 50/60 Hz
- Fiber Connector** (this connector can be mounted on the Base Station Front Panel – See Page 28)
- 4 & 21 Connect the fiber connector from either the Fiber Cable connected directly to the camera or to the MPS or HDX external power supply if your system is so configured. The type of Fiber Connector will vary depending on your system configuration.
- Multi-Pin Connector A**
- DB9 – 9 pin serial connector connected to an optional Camera Remote Control Panel
- 5  Power to the Base Unit must be turned off when connecting the Camera Remote Control Panel – connecting with the power on can seriously damage your equipment.
- Multi-Pin Connector B**
- DB15 – 15 pin serial connector connected to a breakout of Tally signal connectors. Typically this connector will be connected to the Camera Tally system originating at the Production Switcher or the Tally Management system used on your production environment.
- 6 See Section 6 for an example configuration.
- Time Code In**
- BNC Connector – Standard time code signal sent to camera – typically originating from “house” time code generator feed available to Base Station. On remote productions the primary camera may be used to originate the system time code feed (signal would return to base station via connector 8 and then be distributed to other cameras through the associated Copperhead Base Stations)
- 7 **Time Code Out**
- BNC Connector – Standard time code signal originating from the camera. This time code can be used to reference the local camera time code for proper operations and may also be used as a source for production wide time code distribution.
- 8 **Sync In/Loop**
- BNC Connector – standard Genlock/Sync/Tri-Level sync signal. The loop through is self-terminating.
- 9 **Video Return (Analog) In**
- BNC Connector – Typically used to send SD return video to the camera – an example is monitor out from the Production Switcher
- 10

Connectors into and out of the CopperHead FS-790 Base Station

- 11 Video (Analog) Out**
BNC Connector -Typically used for SD Monitoring Video return from the Camera
- Prompter In**
- 12 BNC Connector** – SD Video feed from external prompter system originating at Base Station location and displaying at Camera location
SDI Out A & B (this carries the HD feed from the camera)
- 13 BNC Connectors** – Two identical video feeds from the camera – typically one may be used for local HD monitoring and one is fed to the Production Switcher environment.
SDI In
- 14 BNC Connector** – Typically used to send HD return video to the camera – an example is program out from the Production Switcher
Audio In- Multi-Pin Connector
- 15 DB25** – 25 pin Connector follows the Tascam TDIF standard. The CopperHead FS-790 Transceiver System accommodates one Audio Channels Line Level. Please see Page 75 for sample wiring.
Audio Out- Multi-Pin Connector
- 16 DB25** – 25 pin Connector follows the Tascam TDIF standard. The CopperHead FS-790 Transceiver System accommodates up to two Audio Channels at Line Level. This connector handles Program audio from the Camera location. Please see Page 76 for sample wiring.
- 17 Intercom Connectors #1 & #2**
& XLR 3 pin Connectors (Male or Female) depending on configuration. One of two options will be installed
18 (RTS or Clear-Com).
- 12V Terminal Block**
- 20 Terminal Block** – bare wire connector. This can be used in place of the ADAP power connection in installations that have 12V power distributed as part of their infrastructure. Do not use this at the same time as the ADAP power connection.

5.3. Connections to the CopperHead FS-790 Camera Unit

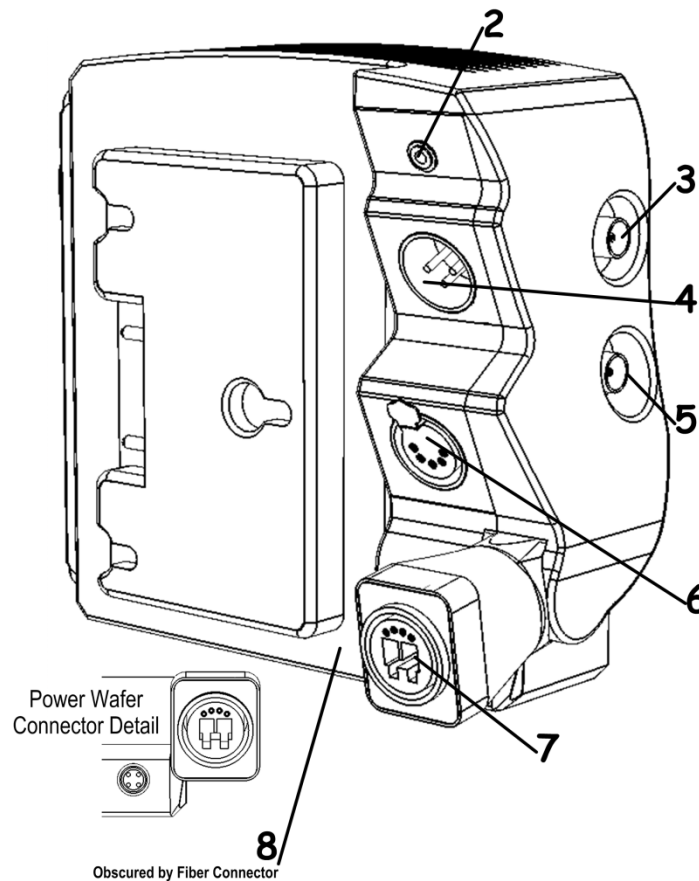


Figure 23 - CopperHead FS-790 Camera Unit Back Side Connections

Connectors into and out of the CopperHead FS-790 Camera Unit Back Side

- 2 Intercom Headset Connector**
Mini-phone Jack – Provides listen only Intercom audio.
- Prompter Out (Analog Video)**
- 3 BNC Connector** – Carries a Prompter Feed or additional Base Station return composite VBS Video from the Base Station to the Camera Unit. This requires a BNC cable between the Camera Unit and any external equipment.
- HD or SD/SDI Out**
- 4 BNC Connector** – Carries HD or SD/SDI video from the Base Station the Camera Unit. Typically this will feed a digital monitor at the camera position (such as JVC VF-HP790 8.4” Studio Viewfinder).
- Audio Out**
- 5 XLR 3 Pin Male Connector** – Provides Return Audio Out from Base Station. Typically connected to an IFB receiver or local audio monitor at the camera position.
- Intercom Headset Connector**
- 6 XLR 5 Pin Female Connector** – Standard RTS-style intercom headset jack. Do not connect an Intercom Belt Pack to this connector. This connector will only function with an Intercom Headset attached.

7 Fiber Connector

Swivel Mounted Fiber Optic Cable receptacle – specific connector depends on your configuration.

Power Wafer Connector

- 8** Multi-Pin Connector C – Supplies power to the Camera Unit from the Power Wafer (if so configured). This cable is supplied with the Power Wafer Power Adaptor.

5.4. Camera Unit Connection Example

Please see the section above for information on these connections.

Camera Unit (Camera Facing Side) to Camera Connections

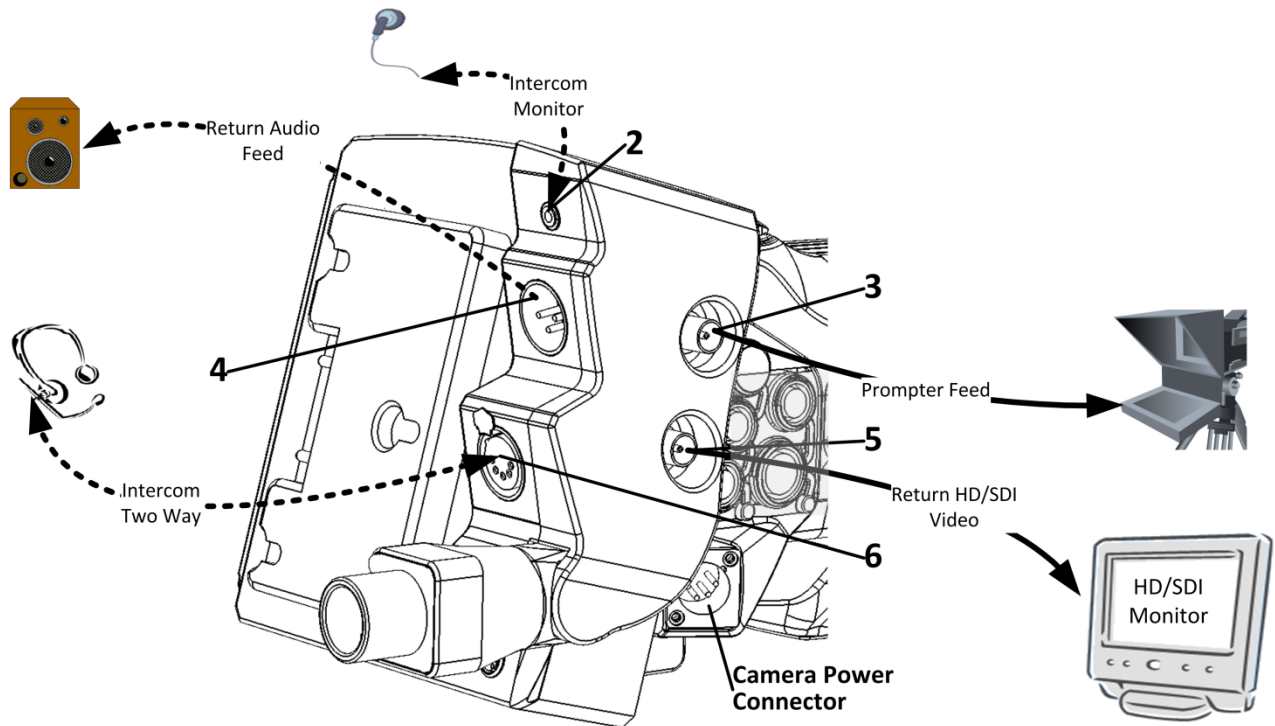


Figure 24 - Camera Unit (Camera Facing Side) to Camera Connections

Please note that a power adaptor plugged into the Camera Power Connector on the rear of the GY-HM790 Camera will only power the camera and not the KA-FP790 Camera Unit. To power both units you must supply power through one of the four methods:

1. Battery attached to Camera Unit
2. Power adaptor attached to Camera Unit
3. Power supplied through a Hybrid Fiber Cable by means of a Power Wafer adaptor
4. Power supplied through a Hybrid Fiber Cable by means of a PowerPlus adaptor

It is possible to power the camera directly through the Camera Power Connector and power the camera unit via the battery plate if the situation calls for this configuration.

Page Intentionally Left Blank

Chapter 6. Operation of the CopperHead FS-790 Transceiver System

This chapter describes in detail the operation of CopperHead FS-790 Transceiver System. Please keep in mind that a wide variety of options and variations are available, so not every possible operational environment can be described. Variations in battery and powering, fiber cable connections and intercom allow for an enormous number of slightly different operational modes.

The following topics are covered:

- 1) Set Up of the CopperHead FS-790 Transceiver System
- 2) Connecting and Managing the Fiber Cable
- 3) Connecting the Fiber Cable
- 4) Powering the System
- 5) Understanding Intercom usage with the CopperHead FS-790
- 6) Using the Digital Display
- 7) Using the Tally System
- 8) Standard Operation
- 9) Shutting Down the System
- 10) Troubleshooting

6.1. Set Up of the CopperHead FS-790 Transceiver System for operation

This section provides an overview of setup of the CopperHead FS-790 Transceiver System for operation. The following sections provide additional detail on each aspect of setup and operation.

It is important that you do an initial setup and test of your CopperHead FS-790 Transceiver System as soon as you receive in order to confirm proper operation and to provide training to you and your team prior to an actual production.

Use the following list of items as an overall checklist for setup.

1. It is highly recommended that you do not attempt to power up the system until all connections are made and in particular the Fiber Optic Cable has been connected at both ends. If you need to power up either the CopperHead FS-790 Base Station or Camera Unit make sure that the fiber connectors are securely capped. This will protect them from damage or dirt and protect you from eye damage.
2. If it is the first time setting up the CopperHead RM-FP790 Base Station or your setup is not permanent as it would likely be in a remote truck, stadium control room or similar, connect all required cables. The order in which you connect the cables makes no difference.
 - a. Make sure to connect the Base Remote cable to the Base Station and Remote Control Panel when the Base Station power is turned off.
 - b. Keep Fiber Optic cable connectors capped until actually connecting the Fiber Cable.
3. When setting up the CopperHead KA-FP790 Camera Unit and attached GY-HM790 Camera you will need to do the following:
 - a. Setup the external power supply as required. Make sure all cables running between the CopperHead FS-790 Base Station and the Power Supply and local AC power cords are properly managed and secured.
 - b. Connect all required cables according to Chapter 5. The order in which you connect the cables makes no difference.
 - c. Set up the Intercom Talk Back switches and level controls as desired. Please see the following Section 6.4 on Page 63 for details on Intercom operation with the CopperHead KA-FP Series Camera Unit.
4. Deploy the Fiber Cable (see the next section) – you are now ready to apply power to the system.

6.2. Connecting and Managing the Fiber Cable

Connecting and managing the Fiber Cable between the CopperHead FS-790 Camera Unit and Base Station or an intermediate power supply requires you to perform four tasks:

1. Plan the route the Fiber Cable will take between the Camera Unit and the Base Station or power supply
2. Run the Fiber Cable along the planned route
3. Connect the Fiber Cable Connectors at each end
4. Power up the Camera Unit and the Base Station or power supply and check the Fiber Optic Cable Link and signal strength

Planning the Fiber Cable Route

Obviously the longer the planned cable run the more planning required. It also makes a difference whether you are running Tactical Fiber Cable or Hybrid Fiber Cable as these affect both the length and the type of exposure the cable can endure.

When planning your cable route take into the consideration the following:


1. Possible obstacles that might cause you to run short of cable – you may need to take a more indirect, but achievable route
2. Possible hazards to the cable – while tactical fiber is extremely durable it is not immune to damage. An obvious hazard is running the cable across a lawn scheduled to be cut during your live production. Make sure the empty roadway at 6AM will not be filled with heavy equipment when it comes time to retrieve your cable
3. Possible interference (physical) with the cable that might cause it to bend or kink to an extent that unacceptable signal loss occurs.
4. Safety hazards – make sure that the cable will not cause a tripping or tangling hazard with people, animals or vehicles.
5. Decide whether the Fiber Cable is to be unspooled from the Base Station location or the Camera location. Typically the reel is kept close to the base station. However if there is a chance the Camera location may need to move further away from the Base Station after initial placement it makes sense to place the reel at the camera end. Make sure there is enough free cable coming out of the stationary end of the cable reel to accommodate a well-managed connection to the camera.

Planning the cable route requires common sense and the ability to foresee the unforeseen.

Running the Fiber Cable

Do the following when running your Fiber Cable:

1. Make sure that both ends of the Fiber Cable are securely capped. In this case the concern is dirt and damage. ANY dirt in the connector can adversely affect Fiber Optical performance and potentially cause you to lose the use of your camera while the problem is diagnosed and remedied.
2. If the cable run is long or if you will lose sight of the spooling out cable reel make sure you have appropriate assistance in running out the cable. When retrieving the cable, assistance to prevent the cable end from being caught or tangled up could be critical. Don't start reeling in the cable on your own and assume the Connector end will make it back to home base safely.
3. When unspooling the cable ALWAYS make sure the stationary end (the end that goes to the Base Station or Power Supply) is securely contained within the reel. A loose Connector can bang around and be damaged and NEVER connect the stationary end of the Fiber Cable to the Base Station or Power Supply and then start unspooling the Fiber Cable. Server damage to the cable could occur due to extreme spiraling of the connected portion of the cable.

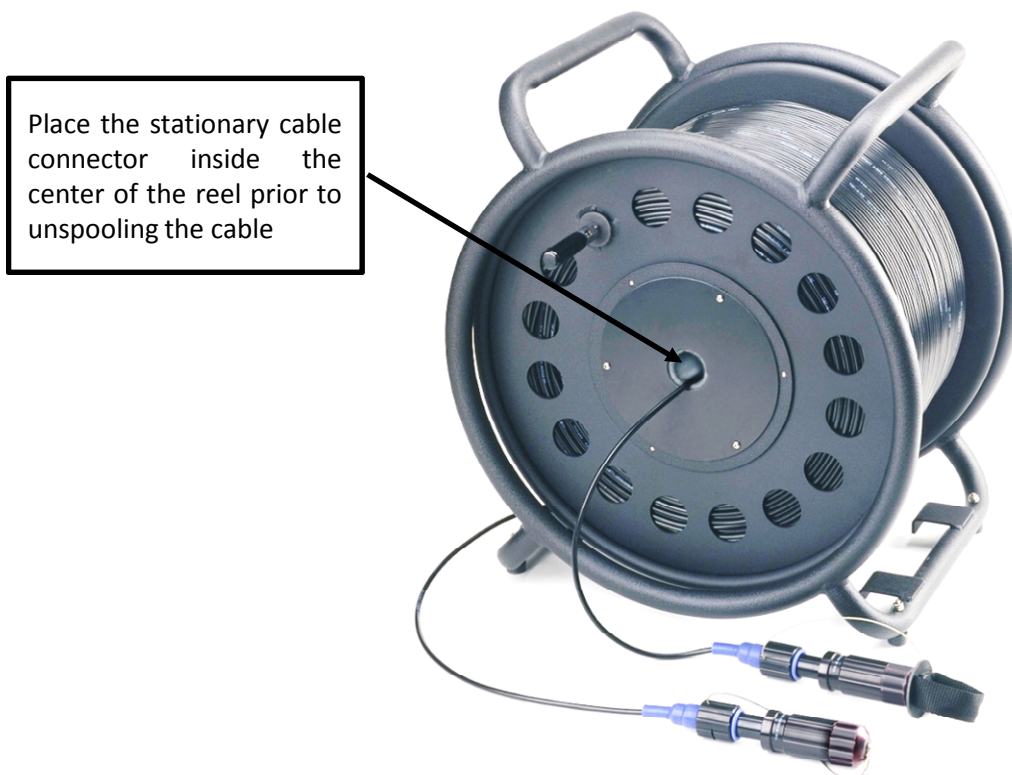

4. Prior to connecting the Fiber Connectors to the Base Station and Camera Unit inspect both Connectors. If required, clean with dry compressed air or with technical wipes that have been moistened with isopropyl alcohol. Fingerprints or other dirt on the optical connector end surfaces will reduce the optical signal level on the fiber. If the connectors have been properly capped during storage and movement you will not likely have a problem. However if a connector has been dropped or dragged through dirt or exposed to dust cleaning is recommended.
5. Once the Fiber Cable has been connected it is time to secure the Fiber Cable run. Make sure there are no cable hazards in the run. Secure the cable with Cable Guards and/or Gaffers tape to insure safety.
6. Now the system can be powered on. Plugging in Fiber Cable connectors with the power on will not damage the system but is not recommended because of the chance of possible eye damage.
7. When re-spooling the Fiber Cable on to the spool guide it across the entire width of the spool so that it winds evenly and the possibility of cinching or kinks is greatly reduced.

6.3. Powering the System

The CopperHead RM-FP790 Base Station and the CopperHead FS-790 Camera Unit each have a power up routine which tests the equipment and performs a system diagnostic.

Powering the CopperHead FS-790 Base Station

Base Station Main Power	1. Turn on the Base Station Power Mains Switch located at the rear left (when facing the back of the Base Station) #3 on the overall diagram. This switch is only on Base Station units with internal power. The front panel power light will come on and be red until the next step.
Base Station Power	2. Turn on the Front Panel Power Switch located at the front right. #16 on the overall diagram. The power monitor indicator turns from red to green.
Four Character Display LED Indicator progression	3. The 4 character display indicates TEST and all front panel LEDs turn, red, then green, then orange, then off.
REV display	4. The LED color test is followed by REV and the revision of the display microcontroller firmware.
Scrolling	5. The REV indication is followed by “telecast-fiber.com” scrolling across the 4 character display. If there's no scrolling please contact Telecast Fiber Systems support for assistance.
PAUSE	6. The scroll is followed by about a 3 second interval used to synchronize all the microcontrollers in the Base Station
Diagnostics	7. The front panel will cycle through the diagnostics displays – See Section 6.5 – Page 65.
Current Status Displayed	8. After the 3 second pause, all the front panel displays update with current status. If the Camera Unit is not powered on the camera related status lights will show red.

Powering the CopperHead FS-790 Camera Unit

Camera Power	1. Turn on the Camera Power and also any peripheral equipment connected to the camera or the CopperHead KA-FP790 Camera Unit such as monitors and microphones. Powering up the camera also powers the KA-FP790 Camera Unit.
LED Indicators On	2. On power on the Camera Unit signal and power status indicators will turn on or flicker according to their current state. Insure that all of these are in the expected state.

The Base Station has a digital display selector button which allows multiple functions for the digital display. These functions are described below on Page 65.

6.4. Intercom

The CopperHead FS-790 Transceiver System is delivered with the RM-FP790 Base Station pre-configured with either the Clear-Com or RTS “two-wire” intercom options. In addition, the Base Station can be interfaced to a generic “Four-Wire” intercom system, using the two 25 pin audio connectors. Multi-pin connector wiring is covered in Appendix 3.

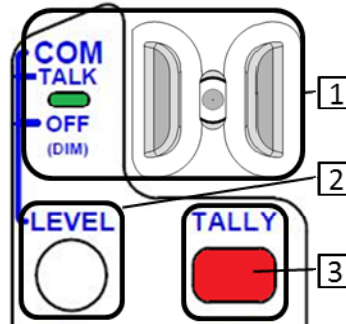


Figure 25 – Intercom and Tally controls/indicators

Two controls on the KA-790 Camera Unit provide the following functionality:



1. Push-to-talk (PTT) control for the intercom headset.

This switch provides momentary/latching operation for the intercom headset microphone.

Momentary Mode: Press and hold the “TALK” switch, then speak into the microphone. The “TALK” LED will remain lit while the “TALK” switch is held. Release the “TALK” switch when finished talking. The “TALK” LED will turn off.

Latching Mode (for Hands-free Conversation): Press the “TALK” switch quickly; the mic will open and the green “TALK” LED will turn on and remain on. When finished talking, press the “TALK” toggle switch again to close the mic; the “TALK” LED will turn off.

This functionality can be duplicated on the “REC” button on the camcorder’s lens or the pan handle of the JVC KA-790G Studio Adaptor. To activate this function, go to the camera’s menu screen and access “Camera function” → “Switch Set Items” → “LENS REC” on the menu and select either “REC” to set the REC button for traditional “Record Start/Pause” functionality. or to “Intercom” to open and close the intercom microphone. The default position is “REC” and it can be selected to “INTERCOM”.

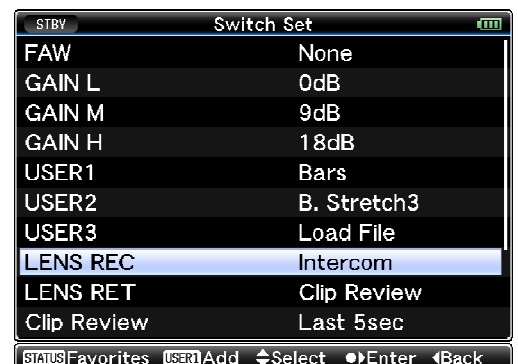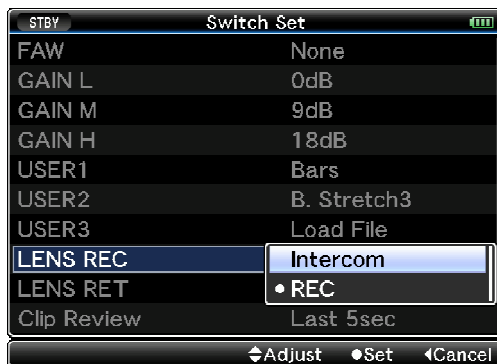

See your Camcorder instruction manual for more details.

- Note: This feature requires GY-HM790 camera firmware version SPL2187 V103 or higher.

The KA-790's PTT control has a secondary function that permits adjusting the brightness of the LEDs on the KA-790's control panel. To change the brightness, hold the PTT selector down ("OFF" position) for 3-5 seconds. The KA-790's LED brightness will begin to cycle, ramping down and then up and down again. Release the toggle to set the LED brightness to the desired level.

2. Volume control for the Intercom headset.

Note: Base Station Intercom XLRs must be terminated, or the camera headset may feedback and/or "howl." To insure proper termination, connect to a two wire system (RTS or Clear-Com compatible) with a terminated power supply. Alternately, an XLR connector with 220 Ohm resistors can be used: tie one 220 Ohm resistor between pins 1 and 2, and another 220 Ohm resistor between pins 1 and 3.

Note that the CopperHead FS-790 Camera Unit acts as the last component of any Intercom Belt-Pack chain. An Intercom Belt Pak cannot be plugged into the CopperHead FS-790 Camera Unit. Only an Intercom headset can be plugged into the Camera Unit.

6.5. Using the Digital Displays

A Brief Guide to Measurement of Fiber Optic Signal Strength

The CopperHead FS-790 Transceiver System provides direct digital readout of the Fiber Optic Link signal strength for both the Base Station to Camera Unit Fiber Link and the Camera Unit to Base Station Fiber Link. This readout is presented in units of dBm. It is useful to understand both the dB or decibel and the dBm or decibel referenced to one milliwatt.

The decibel (dB) is a logarithmic unit of measurement that expresses the magnitude of a physical quantity (usually power or intensity) relative to a specified or implied reference level. Since it expresses a ratio of two quantities with the same unit, it is a dimensionless, relative unit. A decibel is one tenth of a bel, a seldom-used unit. Typically dB has been employed in Audio Measurement and Fiber Optics among many uses.

Proper measurement of signal strength requires an absolute measurement and the dBm provides this measurement. Since it is referenced to the milliwatt, it is an absolute unit, used when measuring absolute power. By comparison, the decibel (dB) is used for quantifying the ratio between two values, such as signal-to-noise ratio

The CopperHead FS-790 Transceiver System operates within a defined range of Fiber Optic Link signal strength. The minimum recommended signal strength is -22 dBm or better. Typically the system should operate at levels between -7 dBm and -20 dBm. The standard CopperHead FS-790 laser output strength is -6 dBm. Cable length affects signal strength as does the number of connections between the Camera Unit and the Base Station. For example, using a Power Supply such as the MPS or HDX adds a minimal signal loss through each additional fiber optic connection.

The alphanumeric digital display on the CopperHead FS-790 Base Station provides direct signal strength measurements in dBm. These readouts also provide a wide range of diagnostic information. The use of the digital display is described below.

The CopperHeadFS-790 Base Station Digital Display

The Base Station digital display has three functions selected by the Display Mode Selector (#14 on the Overview Diagram). These functions are indicated by the Display Mode LEDs.

1. BASE RX – Base Station Optical Power or Signal Strength that is being generated at the Base Station and sent to the Camera Unit. Displayed in units of –dBm.
2. CAM RX – Optical Power or Signal Strength generated by the Camera Unit as measured at the Base Station. Displayed in units of –dBm.
3. DIAG – One of four diagnostics modes available to the Base Station
 - a. TEMP – displays operating temperature in degrees Centigrade of each circuit board that reports temperature
 - b. POWR – displays power level from monitored circuit boards
 - c. REV – displays microcontroller firmware version from each circuit board with a microcontroller
 - d. CAM – displays the error status reported by the Camera Unit

To cycle between Base RX and Cam RX modes, push the Display Mode selector button quickly.

To enter Diagnostic mode, hold the Display Mode selector button for more than 5 seconds. Once in the Diagnostic mode, a quick push of the selector button cycles through the various diagnostic sub-modes described above.

The following table describes the expected readouts in each of the above Base Station display modes. By following the sequence you can understand what the various readouts and four character abbreviations mean for the system.

Display Mode	Typical Readout	Base Station Digital Display Activity Explanation
(assumes after initial power up – see Page 66 for a description of the Power Up sequence)		
<i>BOPT: <u>B</u>ase Station <u>O</u>ptical Receive Signal Strength</i>		
BASE RX	-9	Indicates that the Base Station received optical signal strength is -9 dBm.
BASE RX	BOPT	Indicates that the Display is showing <u>B</u> ase Station <u>o</u> ptical signal strength.
BASE RX	-9	Repeat of the Base Station optical signal strength in dBm.
BASE RX	BOPT	Repeat that the display is showing <u>B</u> ase Station <u>o</u> ptical signal strength.
		This display cycle repeats itself and depending on timing may start with either BOPT or the strength measurement.
<i>COPT: <u>C</u>amera Unit <u>O</u>ptical Receive Signal Strength</i>		
CAM RX	COPT	Sequence starts with COPT to indicate <u>C</u> amera Unit <u>o</u> ptical signal strength.
CAM RX	-9	Indicates that the signal strength from the Camera Unit is -9 dBm.
CAM RX	COPT	Repeat of the display indicating <u>C</u> amera Unit <u>o</u> ptical signal strength.
CAM RX	-9	Repeat of the Camera Unit signal strength in dBm.
CAM RX	COPT	Repeat that the display is showing Optical link signal strength.
		This display cycle repeats itself and depending on timing may start with either OPT of the strength measurement – COPT does not reappear in the repeating cycle.

Display Mode	Typical Readout	Base Station Digital Display Activity Explanation
		To enter Diagnostic mode, push and hold selector button for 5 seconds.
		DIAGNOSTIC MODE Temperature (TEMP)
		When first entering the Diagnostic mode, the DIAG display mode indicator LED will blink – the first sub-mode is TEMP (Temperature). The DIAG LED will glow Green when the temperature is normal and Red when outside of normal range.
DIAG/TEMP	TEMP	Indicates the display is in the TEMP sub-mode.
DIAG/TEMP	PS	The Power Supply (PS) temperature will be displayed.
DIAG/TEMP	TEMP	Repeats that the display is in the TEMP sub-mode.
DIAG/TEMP	37C	Temperature display in Centigrade for Power Supply circuit board.
DIAG/TEMP	BASE	The Base Station main circuit board temperature will be displayed.
DIAG/TEMP	TEMP	Repeats that the display is in the TEMP sub-mode.
DIAG/TEMP	47C	Temperature display in Centigrade for Base Station circuit board.
DIAG/TEMP	PS	The Power Supply (PS) temperature will be again displayed.
DIAG/TEMP	TEMP	Repeats that the display is in the TEMP sub-mode.
DIAG/TEMP	36C	Temperature display in Centigrade for Power Supply circuit board NOTE: that the PS temperature has dropped one degree.
		This display cycle repeats until the Display Mode Selector is pushed.
		DIAGNOSTIC MODE Power Supply Voltage Status (POWER)
		A quick push of the Display Mode Selector advances to the Power (POWER) diagnostic sub-mode. The DIAG LED will glow Green when <i>all</i> power levels are normal and Red when <i>any</i> power level is outside normal level.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	BASE	Indicates that the Base Station main controller board is being measured.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	OK	Indicates that the item is in an OK State.
DIAG/POWER	DISP	Indicates that the LED Display controller board is being measured.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	OK	Indicates that the item is in an OK State.
DIAG/POWER	CHAR	Indicates that the Four Character controller board is being measured.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	OK	Indicates that the item is in an OK State.
DIAG/POWER	AUD	Indicates that the Audio controller board is being measured.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	OK	Indicates that the item is in an OK State.
DIAG/POWER	VBS	Indicates that the VBS (analog Video) controller board is being measured.
DIAG/POWER	POWER	Indicates the display is in the POWER sub-mode.
DIAG/POWER	OK	Indicates that the item is in an OK State.
		DIAG/POWER Exception
DIAG/POWER	ERR	Instead of OK, the display will show ERR if a power level is outside of normal – ERR is followed by a Hexadecimal code. Please note the error code and contact support at Telecast-Fiber.

Display Mode	Readout	Base Station Digital Display Activity Explanation
		DIAGNOSTIC MODE Microcontroller Board Revision Version (REV)
DIAG/REV		A quick push of the Display Mode Selector advances to the Power (POWR) diagnostic sub-mode. This sub-mode displays the microcontroller firmware revision of every board in the Base Station that has a microcontroller. (Note: the REV versions noted here were current as of August 1, 2010. Your system may have different REV versions)
DIAG/REV	REV	Initial display of REV after Display Mode Selector being advances.
DIAG/REV	DISP	Indicates the Display microcontroller board is revision is being queried.
DIAG/REV	REV	Indicates that sub-mode is REV.
DIAG/REV	REVC	Indicates that the REV for the DISP board is REVC.
DIAG/REV	VBS	Indicates the VBS microcontroller board is revision is being queried.
DIAG/REV	REV	Indicates that sub-mode is REV.
DIAG/REV	REVA	Indicates that the REV for the VBS board is REVA.
DIAG/REV	BASE	Indicates the Base Station main microcontroller board is revision is being queried.
DIAG/REV	REV	Indicates that sub-mode is REV.
DIAG/REV	REVA	Indicates that the REV for the BASE board is REVA.
DIAG/REV	AUD	Indicates the audio microcontroller board is revision is being queried.
DIAG/REV	REV	Indicates that sub-mode is REV.
DIAG/REV	REVA	Indicates that the REV for the AUD board is REVA.
DIAG/REV	PS	Indicates the power supply microcontroller board is revision is being queried.
DIAG/REV	REV	Indicates that sub-mode is REV.
DIAG/REV	REVD	Indicates that the REV for the DISP board is REVD.
		This display cycle repeats until the Display Mode Selector is pushed.
		DIAGNOSTIC MODE Camera Unit Error Status (CAM)
		A quick push of the Display Mode Selector advances to the Camera Unit (CAM) diagnostic sub-mode. This mode displays the status of the Camera Unit. The DIAG LED glows green if Camera Unit shows no error and red if the Camera Unit does have an error.
DIAG/CAM	CAM	Indicates that the sub-mode is CAM.
DIAG/CAM	OK	Indicates that the Camera Unit is reporting <i>No</i> fault.
DIAG/CAM	ERR	Indicates that the Camera Unit is reporting <i>Some</i> fault.
		This display cycle repeats until the Display Mode Selector is pushed.

6.6. Standard Operation

The section is devoted to a number of “Best Practices” for use of the CopperHead FS-790 Transceiver System. Specific information on how to operate the system has been presented in the sections above.

1. Protect the Fiber Optic Cable and the Fiber Optic Connectors. **Always** keep these capped unless there are being connected.
2. Read the section on planning the Fiber Run – it may come in handy – Page 60.
3. Once the system is set up and running, do not ignore the Optical Power Signal Strength Readouts at either the Camera or the Base Station. While the Alarm functions of the system are very good, so is the tolerance for optical Signal Strength reduction. By monitoring –dBm levels you can take preventative action to stop a signal and possibly an On-Air or Recording loss. The system is, of course, digital and so the Signal Strength is either just good enough or usually much better than that. When it is no longer strong enough the signal stops.
4. If introducing new equipment (cameras, switchers, etc.) or new operators be sure to do a test run with everything as it will be during the actual production. Reading this User Guide is a good start but hands-on is the best way to understand how it will and more importantly what to do to insure proper operation.
5. If your production is a Multi-Camera shoot with Time Code synchronized between all cameras it is a good idea to periodically confirm that proper Time Code is being returned from the various cameras and that a switch has not been changed in error at a camera location.

6.7. Shutting Down the System

System shutdown is simple. The only cautions relate to the Fiber Cable and to the Base Station Remote Control Panel Cable.

1. To avoid the possibility of looking directly into an active fiber optic port or cable, turn both the Camera Unit and the Base Station off before disconnecting the fiber from either point.
2. To avoid the possibility of damaging the Camera Remote Control Panel, turn the Base Station off before disconnecting the Control Cable from the Control Panel or the Base Station.
3. Protect all cables from dirt, water entry and being dragged across the ground or other surface.
4. When re-spooling the cable take your time so as to avoid cable snags, crimps or damage to the connectors. Re-spool evenly across the reel.
5. If the Base Station is a permanent or semi-permanent installation then simply power off and disconnect and cap the Fiber Cable.

6.8. Troubleshooting

Troubleshooting any technical issues with the CopperHead FS-790 Transceiver System is similar to any piece of television production gear with the obvious exception of the core Fiber Optic technology. Here is a list of things to look out for and check – some of them obvious but sometimes forgotten.



1. Check all your cables – any lost connections or bad connectors?
2. Confirm signal type is on the proper signal path. Though it is possible to physically connect analog signals to digital signal connectors on the CopperHead FS-790 Transceiver System, signals will not pass through the system unless they are the correct type. An SDI signal will not pass through the Analog or VBS paths and an Analog signal will not pass through an SDI path. If the wrong type of signal is incorrectly connected the signal monitor indicator may light up because an electrical voltage is present on the line but no signal will pass through.
3. Check your power – are the Power Supplies working?
4. If you are using the PowerWafer and the camera or CopperHead Camera Unit is not powering up, check the following:
 - a. The PowerWafer cable is connected to the Camera Unit's PowerWafer jack.
 - b. The indicators on the Base Station are all correct (see section 4.2)
 - c. The fuse on the Base Station is not blown.
5. Take advantage of the various diagnostic tools provided in the CopperHead FS-790 Base Station and Camera Unit.
 - a. Is the Fiber Optic Signal Strength within an acceptable range? The product specification calls for strength of -22 dBm or greater but the system will often work at strengths lower than this – though not guaranteed to do so – Use the Four Character Digital Display on the Base Station to check signal strength.
 - b. Observe all of the LED warning and alarm lights on the Base Station and follow up based on what you observe.
 - c. If signal strength is degraded from the time of system checkout at a particular location, walk the Fiber Cable and see that it is intact and has no damage of severe bends or kinks.
6. If the digital display indicates an error and displays a Hexadecimal error code you should contact Telecast Fiber Systems Technical Support to assist in diagnosing the problem. Note the exact error code so you can report it to the support technician. The hexadecimal errors indicate problems with the power supplies and the internal boards. In general, field repair is not usually possible if one of these rare error messages is displayed.

The Digital Display will indicate ERR and then the actual error code will display. This is a typical error code: 00000010 – this indicates 10 to 16 volt status may be out of range.


Appendices

Appendix 1. Connector Pin Assignments

1.1. CopperHead FS-790 Base Station Connectors

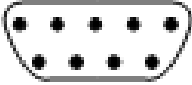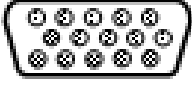Reference Numbers Refer to the Overview Diagrams in Appendix 4 at the End of this User Guide																																	
Camera Remote																																	
 <p>Base Station #5 DB9 Female</p>	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>- Camera Control Data Input</td> </tr> <tr> <td>2</td> <td>Not Used</td> </tr> <tr> <td>3</td> <td>Camera Control Data Ground (Shield)</td> </tr> <tr> <td>4</td> <td>Not Used</td> </tr> <tr> <td>5</td> <td>- Camera Control Data Output</td> </tr> <tr> <td>6</td> <td>+ Camera Control Data Input</td> </tr> <tr> <td>7</td> <td>- 12 VDC Camera Control Data Power Ground</td> </tr> <tr> <td>8</td> <td>+12 VDC Camera Control Data Power</td> </tr> <tr> <td>9</td> <td>+ Camera Control Data Output</td> </tr> </tbody> </table>	Pin	Signal	1	- Camera Control Data Input	2	Not Used	3	Camera Control Data Ground (Shield)	4	Not Used	5	- Camera Control Data Output	6	+ Camera Control Data Input	7	- 12 VDC Camera Control Data Power Ground	8	+12 VDC Camera Control Data Power	9	+ Camera Control Data Output												
	Pin	Signal																															
	1	- Camera Control Data Input																															
	2	Not Used																															
	3	Camera Control Data Ground (Shield)																															
	4	Not Used																															
	5	- Camera Control Data Output																															
	6	+ Camera Control Data Input																															
	7	- 12 VDC Camera Control Data Power Ground																															
	8	+12 VDC Camera Control Data Power																															
9	+ Camera Control Data Output																																
Table 5 - Base Station Camera Remote Connector Wiring																																	
Tally/GPI Input																																	
 <p>Base Station #6 DB15HD Female</p>	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Not used</td> </tr> <tr> <td>2</td> <td>Not used</td> </tr> <tr> <td>3</td> <td>Not used</td> </tr> <tr> <td>4</td> <td>GPI 1 / Red Tally In</td> </tr> <tr> <td>5</td> <td>GND</td> </tr> <tr> <td>6</td> <td>NA</td> </tr> <tr> <td>7</td> <td>GND</td> </tr> <tr> <td>8</td> <td>Not used</td> </tr> <tr> <td>9</td> <td>GPI 2 / Green Tally In</td> </tr> <tr> <td>10</td> <td>Not used</td> </tr> <tr> <td>11</td> <td>Not used</td> </tr> <tr> <td>12</td> <td>Not used</td> </tr> <tr> <td>13</td> <td>Not used</td> </tr> <tr> <td>14</td> <td>Not used</td> </tr> <tr> <td>15</td> <td>Not used</td> </tr> </tbody> </table>	Pin	Signal	1	Not used	2	Not used	3	Not used	4	GPI 1 / Red Tally In	5	GND	6	NA	7	GND	8	Not used	9	GPI 2 / Green Tally In	10	Not used	11	Not used	12	Not used	13	Not used	14	Not used	15	Not used
	Pin	Signal																															
	1	Not used																															
	2	Not used																															
	3	Not used																															
	4	GPI 1 / Red Tally In																															
	5	GND																															
	6	NA																															
	7	GND																															
	8	Not used																															
	9	GPI 2 / Green Tally In																															
	10	Not used																															
	11	Not used																															
	12	Not used																															
	13	Not used																															
14	Not used																																
15	Not used																																
Table 6 - Base Station Tally/GPI Connector Wiring																																	
This cable is end-user supplied.																																	
GPI Inputs:																																	
On: TTL Low or Short to GND																																	
Off: TTL High or Open																																	

Base Station Audio Inputs & Outputs

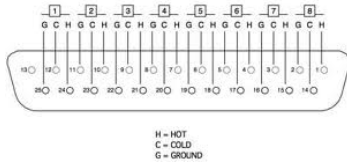


**Base Station #15 & #16
DB25 Female**

Audio In #15	Audio Out #16	Channel	DB25 Pin Number		
			Hot	Cold	Ground
Return Audio 1 In	Cam Audio 1 Out	1	24	12	25
Not Used	Cam Audio 2 Out	2	10	23	11
Not Used	Not Used	3	21	9	22
Not Used	Not Used	4	7	20	8
Not Used	Not Used	5	18	6	19
Not Used	Not Used	6	4	17	5
4W Intercom In	4W Intercom Out	7	15	3	16
Not Used	Not Used	8	1	14	2
		Not Connected	13		

Table 7 - Base Station Audio 25 Pin Connector Wiring

Please see Appendix 3, page 77 for suggested wiring configurations

12VDC Input Power Connectors – Base Station models RM-FP790Txxx

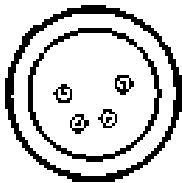


**Base Station #19
XLR4 Male**

Pin	Signal
1	Ground
2	Unused
3	Unused
4	+ Power 12 VDC

Table 8 - Base Station Power Connector

This matching connector is from either an ADAP-AC-04 or a customer-supplied 12VDC power supply

This connector is wired in parallel with terminal block (#20 below)

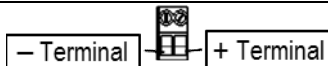


**Base Station #20
Terminal block**

Pin	Signal
1	Minus Voltage Terminal
2	Plus Voltage Terminal

Table 9 - Base Station 12VDC Terminal Block

This connector is wired in parallel with XLR4-Male (#19 above)

AC Power Input Connector- Base Station models RM-FP790Pxxx

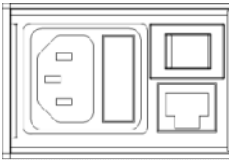


Base Station #1
Standard IEC C14 receptacle

Panel Mounted AC Power Receptacle: 110/220 VAC

Two 4 amp fuses (5 x 20mm).fuses are in operation at all times
– both the AC Line Hot and the AC Line Neutral are fused.

Replacement: Littlefuse 218.

Clear-Com Intercom

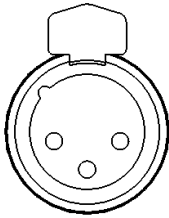


Base Station #17 & 18
XLR3 Female (x2)

Pin	Signal
1	Ground
2	+ VDC Power
3	Power

Table 10 - Base Station Clear-Com Intercom Connector


RTS Intercom

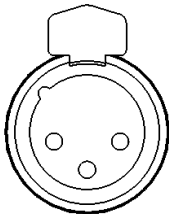

Base Station #17
XLR3 Female

Pin	Signal
1	Ground
2	+ VDC Power & Channel 1 Audio
3	Channel 2 Audio

Table 11 - Base Station RTS Intercom Connector

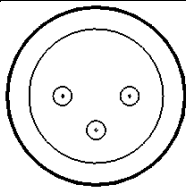

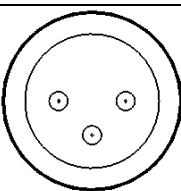


Base Station #18
XLR3 Male

Pin	Signal
1	Ground
2	+ VDC Power & Channel 1 Audio
3	Channel 2 Audio

Table 12 - Base Station RTS Intercom Loop-Thru Connector

1.2. CopperHead FS-790 Camera Unit Multi-Pin Connectors

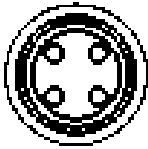Power Wafer Connector													
 <p>Camera Unit #8 4-pin Lemo</p>	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>95VDC +</td> </tr> <tr> <td>2</td> <td>95 VDC -</td> </tr> <tr> <td>3</td> <td>Not Used</td> </tr> <tr> <td>4</td> <td>Not Used</td> </tr> </tbody> </table> <p>Table 13 - Camera Unit Power Wafer Connector Mating connector: Lemo FGG.0B.304.CLAD42 (right angle)</p>	Pin	Signal	1	95VDC +	2	95 VDC -	3	Not Used	4	Not Used		
Pin	Signal												
1	95VDC +												
2	95 VDC -												
3	Not Used												
4	Not Used												
Camera Headset													
 <p>Camera Unit #6 XLR5 Female</p>	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>MIC Ground (shield)</td> </tr> <tr> <td>2</td> <td>+ MIC Input</td> </tr> <tr> <td>3</td> <td>- Earphone Output Ground</td> </tr> <tr> <td>4</td> <td>+ Earphone Output</td> </tr> <tr> <td>5</td> <td>+ Earphone Output</td> </tr> </tbody> </table> <p>Table 14 - Camera Unit Headset Connector (pinout: RTS standard monaural headset)</p>	Pin	Signal	1	MIC Ground (shield)	2	+ MIC Input	3	- Earphone Output Ground	4	+ Earphone Output	5	+ Earphone Output
Pin	Signal												
1	MIC Ground (shield)												
2	+ MIC Input												
3	- Earphone Output Ground												
4	+ Earphone Output												
5	+ Earphone Output												
Audio Out													
 <p>Camera Unit #4 XLR3 Male</p>	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Chassis ground (cable shield)</td> </tr> <tr> <td>2</td> <td>Positive polarity terminal ("hot")</td> </tr> <tr> <td>3</td> <td>Return terminal ("cold")</td> </tr> </tbody> </table> <p>Table 15 - Audio Output connector</p>	Pin	Signal	1	Chassis ground (cable shield)	2	Positive polarity terminal ("hot")	3	Return terminal ("cold")				
Pin	Signal												
1	Chassis ground (cable shield)												
2	Positive polarity terminal ("hot")												
3	Return terminal ("cold")												

Appendix 2. Base Station Remote Control Cable

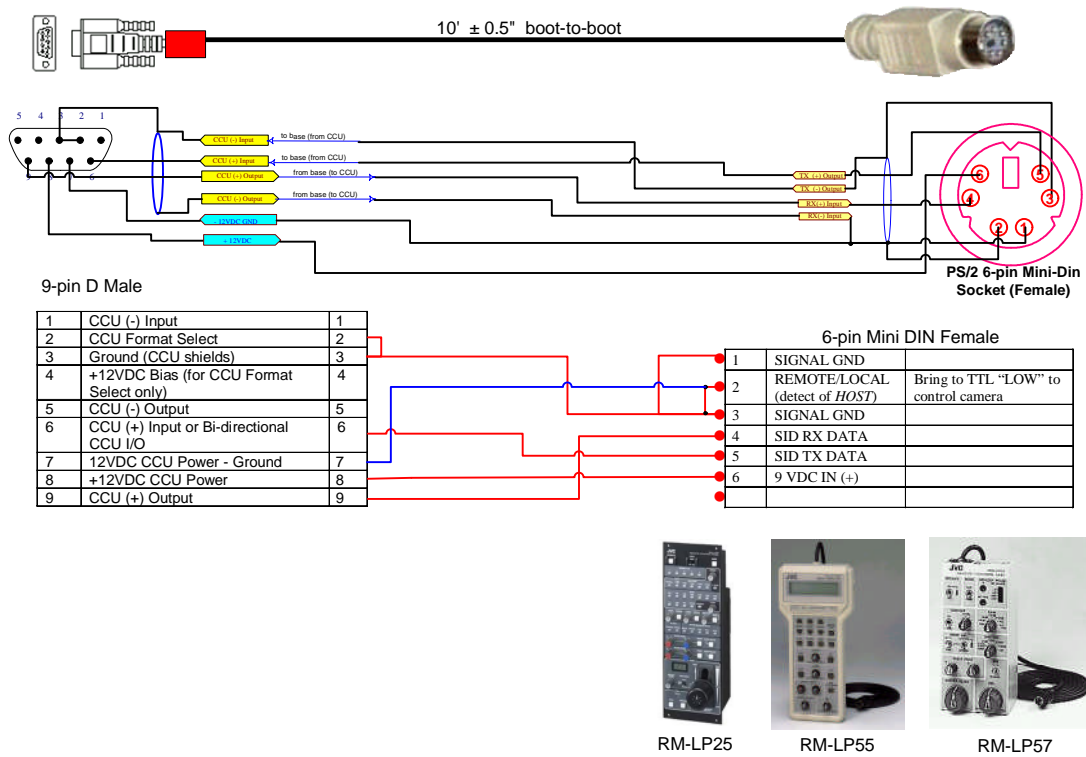


Figure 26 - CopperHead JVC FP-790 Series Base Station Remote Cable

Appendix 3. Audio Cable Wiring Suggestions

CopperHead FS-790 Base Station 25-Pin Audio Input Cable

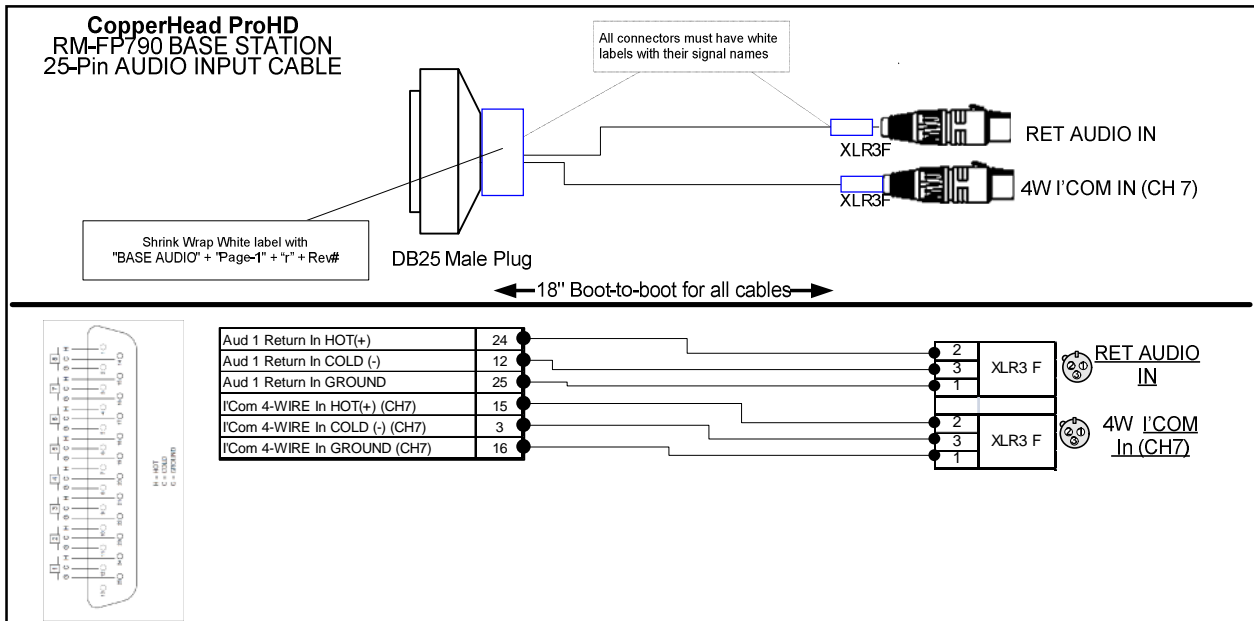


Figure 27 - CopperHead FP-790 Base Station 25-pin Audio Input Cable

CopperHead FS-790 Base Station 25-Pin Audio Output Cable

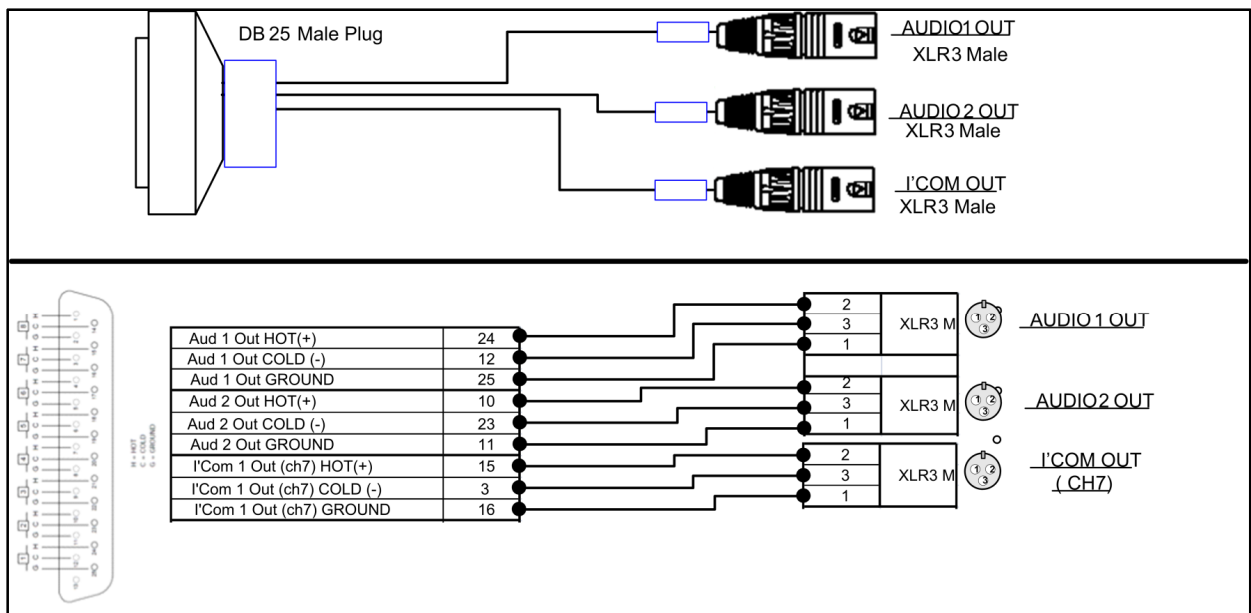


Figure 28 - CopperHead FP-790 Base Station 25-pin Audio Output Cable

Appendix 4. Specifications

<p>Video, Digital (bi-directional) Interface SMPTE 259M, 292M Data Rate270 Mb/s or 1.5 Gbits/s Input Level800 mV (peak to peak) Input/output Impedance..... 75 Ohms Output Impedance 75 Ohms Bit-Error Rate (@ -22 dBm)..... 10-12 Jitter (pathological data).....< 0.2 UI Rise/Fall Times < 270 ps</p> <p>Video, Analog (bi-directional) InterfaceRS170, NTSC, PAL</p> <p>Frequency Response 30 Hz-4.2 MHz..... ±0.15 dB 8MHz-3 dB Video Signal to Noise Ratio ≥ 72 dB Differential Gain < 2% Differential Phase..... < 1°</p> <p>Audio Number of Channels..... 1-to-2 TypeBalanced, line level Impedance >15K Ω Maximum Input Level..... 24 dBu Quantization24 bits, 128x (oversampled) Sample Rate48kS/sec Frequency Response..... ±0.1 dB, 20 Hz to 20 KHz</p> <p>Intercom Number or channels 1 Interface types (Base)..... RTS, Clear-Com or Four-Wire Frequency Response.....200 - 18KHz ± 3dB Max Distortion ≤ 0.5% Noise < -60dBu Max Gain (RTS or Clear-Com) ≥ 24dB Min Gain (RTS or Clear-Com)..... ≤ -45dB</p> <p>GPI/Tally Number, Base-to-Camera Unit2 (Green & Red) Inputs: On:.....TTL Low or Short to GND Off:..... TTL High or Open</p>	<p>Electro-Optical Operating Wavelengths 1300 nm/ TX Laser output power (std./opt) -6 dBm/0 dBm RX Sensitivity, HD/SDI -22 dBm Fiber Compatibility Single Mode</p> <p>Optical Connector Options - Camera Unit: Local Power..... MX or OpticalCON Remote Power: Short Range Power SMPTE 304M or OpticalCON Long Range PowerSMPTE 304M</p> <p>Optical Connector Options - Base Station: Unpowered (Tac fiber) ST or OpticalCON Remote Power (Hybrid fiber): Standard Power.....SMPTE 304M, OpticalCON, or STs & Molex</p> <p>Distance Limit * <small>see note below</small> Tactical Fiber (Local Power at Camera): Standard laser 15db optical loss (≈ 5 km*) Optional DFB laser..... 19db optical loss (≈ 30 km*)</p> <p>SMPTE 311M Hybrid Fiber: Standard Internal Power Supply w/PowerWafer ≈ 240m (787 ft): 95W @ 12VDC* Long Range: HDX w/PowerPlus ≈2km (6562 ft.): 100W Cont./150W Peak*</p> <p>Mechanical/Environmental Dimensions (WxLxD) Camera Unit..... 2.5" x 6.5" x 2.2" Base Station 17.5" x 9" x 1.75" Power Wafer 5" x 6.12" x 2.2" PowerPlus LP (100W) 5" x 6" x 2.5" PowerPlus HP (150W) 5" x 6" x 3.7" HDX..... 13" x 3.5" x 8.5"</p> <p>Weight Camera Unit.....1.5 lb. Base Station 5.0 lb. PowerWafer 1.5 lb. PowerPlus LP: 2.3 lb.....HP: 2.5 lb. HDX..... 10.5 lb.</p> <p>Power Consumption Camera unit..... 8 watts@10-18VDC Base Station (Tac Fiber): 10 watts@10-18VDC Power Connector..... 4-Pin XLR Base Station (Hybrid Fiber): Power Req..... 110-120/220-240 VAC, 50 to 60Hz Power Consumption..... 250 watts max @120VAC</p> <p>Temperature Range -25° to +55°C Humidity Range 0 to 95% RH, Noncondensing</p> <p>* The maximum cable length varies due to optical loss that can depend on cable quality, dirt/dust/contamination on connectors, and the number of cable connectors. When using hybrid cable for camera power, the size of the hybrid cable, as well as the power draw of the camera, lens, viewfinder, and other accessories are also factors.</p>
--	---

Appendix 5. Declaration of Conformity



DECLARATION OF CONFORMITY

We, Telecast Fiber System a Belden brand, declare under our sole responsibility that the product CopperHead G3 JVC, know under models KA-F790 and RM-FP790 to which this declaration relates is in conformity with the following standard(s) or other normative document(s):

- FCC, United States Federal Communications Commission Rules Part 15, Class A
- ICES-003, 2004, Industry Canada, Interference-Causing Equipment Standard, Digital Apparatus, Class A
- EN 55022, 2006, European Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement, Class A
- VCCI, Japanese V-3/2009.04, Class A
- AS/NZS CISPR 22:2005, Australia/New Zealand Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement, Class A
- EN61000-3-2, 2006, Limits for Harmonic Current Emissions
- EN61000-3-3, 1995, Section 3, with A2 (2005), Limitations of Voltage Fluctuations and Flicker in Low-Voltage Supply Systems for Equipment with Rated Current:: 16 Amps
- EN55024:1998 Information Technology Equipment - Immunity
 - Amendment A1:2001 Characteristics -Limits and Methods of Measurement
 - Amendment A2:2003
- EN61000-4-2 Electrostatic Discharge
- EN61000-4-3 Radiated Electromagnetic Fields
- EN61000-4-4 Electrical Fast Transient/Burst
- EN61000-4-5 Surge Immunity Requirements
- EN61000-4-6 Conducted Disturbances Induced By Radio-Frequency Fields
- EN61000-4-11 Voltage Dips, Short Interruptions and Voltage Variations Immunity Tests
- IEC/EN 60950-1:2006 with A11:2009, Information Technology Equipment - Safety - Part 1: General Requirements

The Technical Construction File is maintained at:

Telecast Fiber System
102 Grove Street
Worcester MA, 01543
USA
Phone: 508-754-4858

The authorized representative located within the Community is:

Sebastian Mucha
Director of Product Development
Email: Sebastian.Mucha@belden.com
Phone: 508-754-4858
Fax: 508-752-1520
Date of issue: 01/03/2011
Place of issue: Worcester MA, USA

A handwritten signature in dark ink, appearing to read "Sebastian Mucha", is written over a light blue horizontal line.

SEBASTIAN MUCHA

Page Intentionally Left Blank

Appendix 6. CopperHead FS-790 System Overview Diagrams

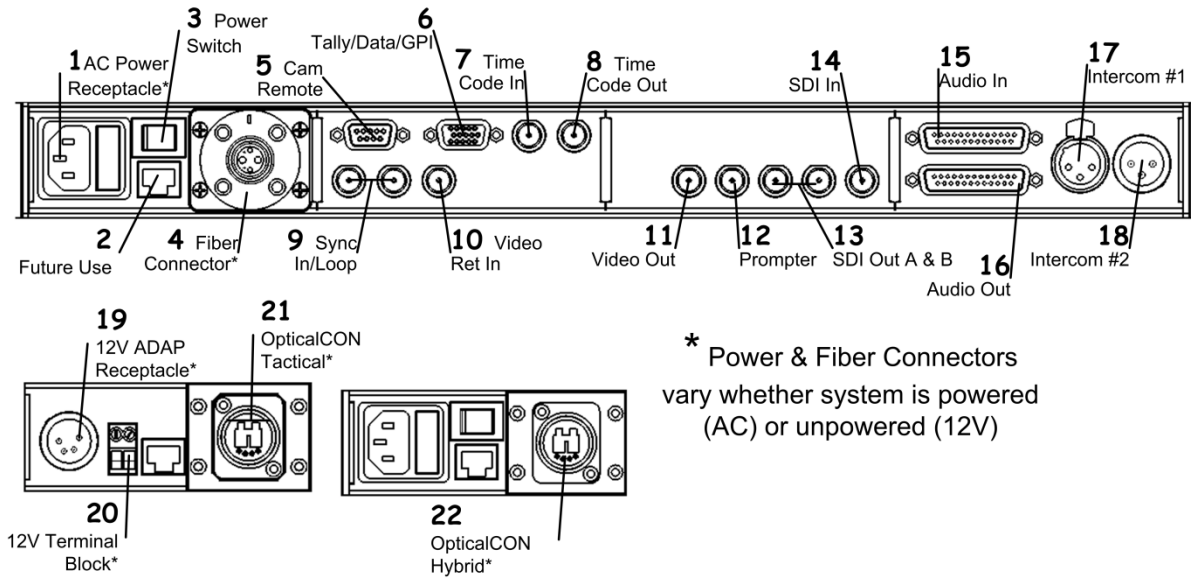


Figure 29 - CopperHead FS-790 Base Station Rear Panel

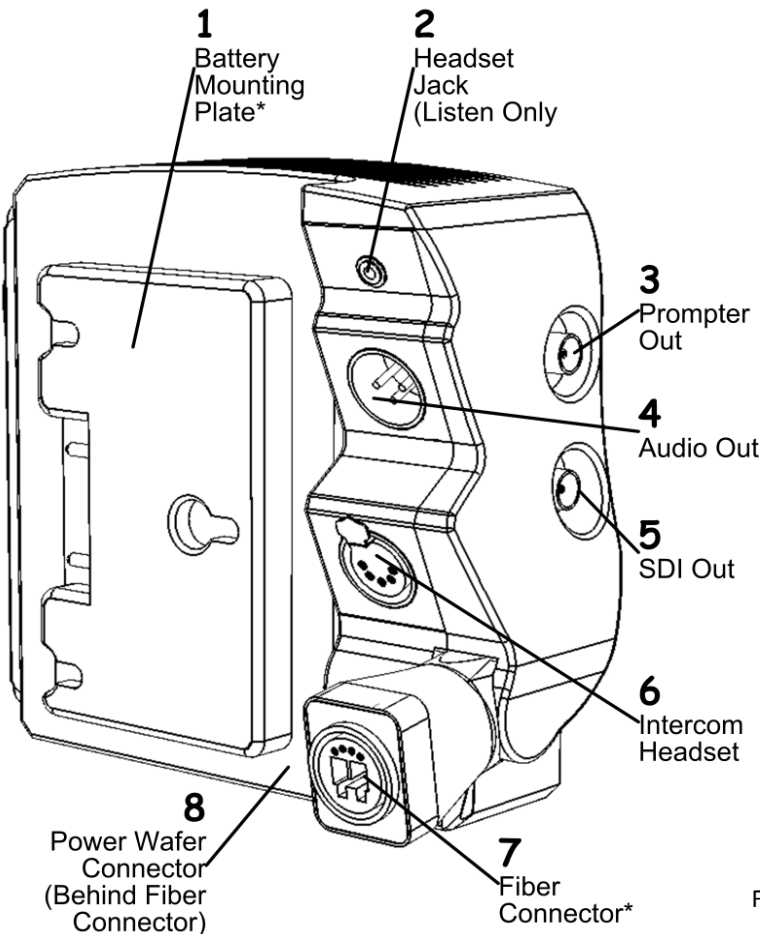


Figure 30 - CopperHead FS-790 Camera Unit Connectors

Page Intentionally Left Blank

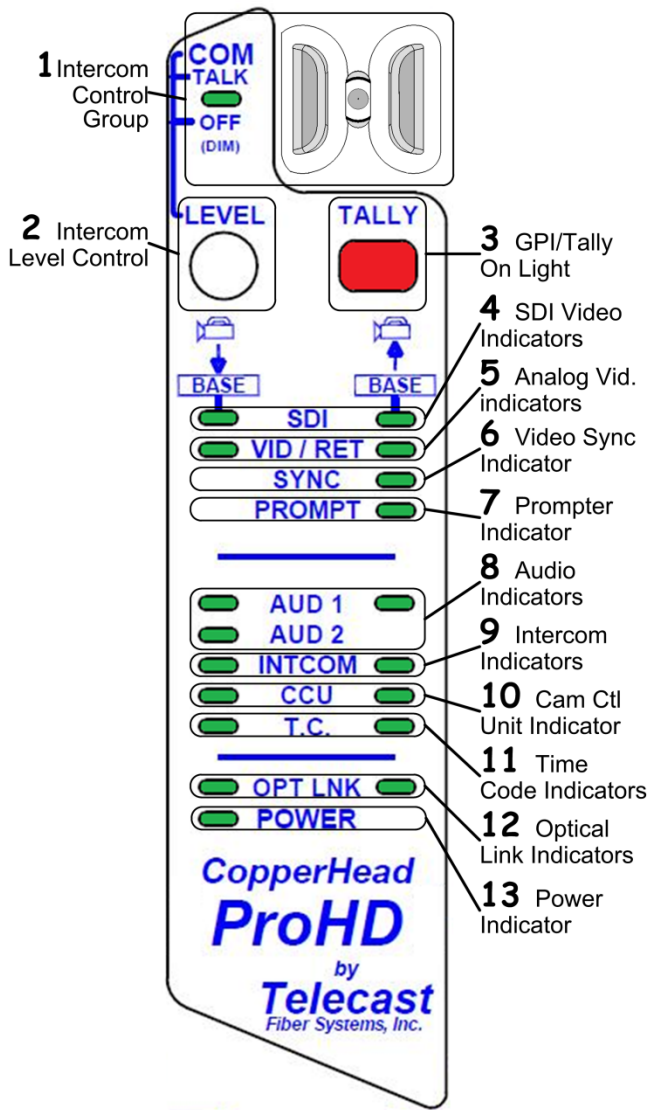


Figure 31 - CopperHead FS-790 Camera Unit Indicators and Controls

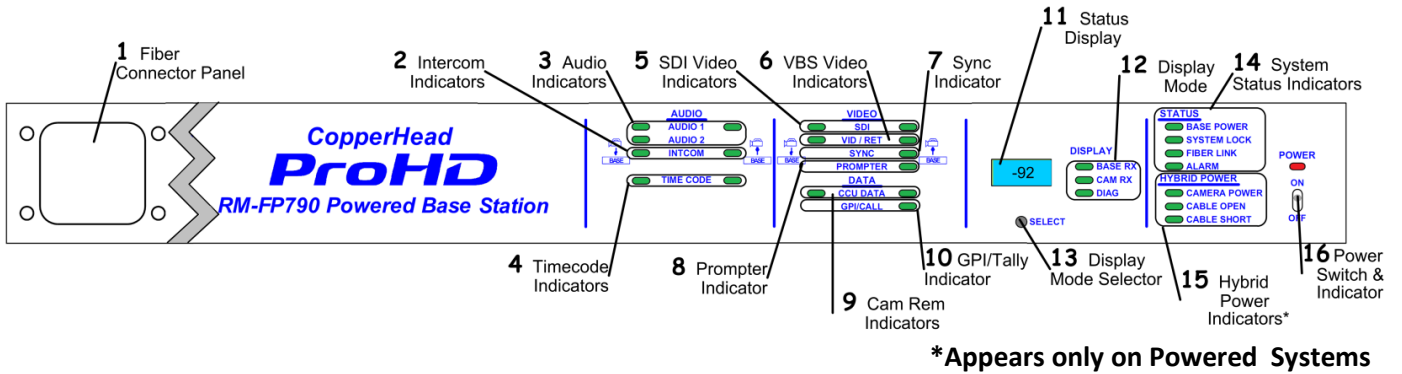


Figure 32 - CopperHead FS-790 Base Station Front Panel

