

D-ILA[®] Projector

DLA-X30/XC388/RS45 Series

DLA-RS4800 Series

DLA-X70R/XC788R/RS55 Series

DLA-X90R/XC988R/RS65 Series

Cedia Command

Communication Specification

Ver. 1.7

2011/12/19

JVCKENWOOD Corp.
Projector Division

(*D-ILA is the trademark of JVCKENWOOD Corp.

Document No. PJ03220107B

CONTENTS

1 OUTLINE.....7

2 INTERFACE7

 2.1 Terminal..... 7

 2.2 External Controller Connector..... 7

 2.3 Communication Line 7

3 PROTOCOL8

 3.1 Communication specification 8

 3.2 Data format..... 8

 3.3 Header table..... 8

 3.4 Unit ID table..... 9

 3.5 Command table..... 9

 3.6 Parameter 10

 3.6.1 Numeric value parameters..... 10

 3.6.2 Special parameter..... 10

 3.7 Exit code 11

 3.8 Error handling..... 11

 3.9 Communication sequence..... 12

4 COMMAND CONTROL..... 13

 4.1 NULL command 13

 4.1.1 Operation..... 13

 4.1.2 Reference..... 13

 4.2 Power [PoWer] 14

 4.2.1 Operation..... 14

 4.2.2 Reference..... 15

 4.3 Input [InPut]..... 16

 4.3.1 Operation..... 17

 4.3.2 Reference..... 18

 4.4 Remote control pass-through [RemoteCode] 19

 4.4.1 Operation..... 20

 4.5 Setup [SetUp]..... 21

 4.5.1 Operation..... 22

 4.6 Gamma table [GammaTable] 23

 4.6.1 Operation..... 24

 4.6.2 Reference..... 24

 4.7 Gamma Bank switch [Gamma-bankSwitch].. 25

 4.7.1 Operation..... 26

 4.7.2 Reference..... 26

4.8 Gamma coefficient of Gamma
table "Custom1/2/3" [GammaPower] 27

 4.8.1 Operation 28

 4.8.2 Reference..... 28

4.9 Gamma data of Gamma table "Custom 1/2/3"
[GammaRed, Green, Blue] 29

 4.9.1 Operation 30

 4.9.2 Reference..... 30

4.10 Pannel Alignment (zone) data [Panel
Alignment(Zone) Red, Blue] 31

 4.10.1 Operation 32

 4.10.2 Reference..... 32

4.11 Source Asking [SourCe].. 33

 4.11.1 Reference..... 33

4.12 Model status asking [MoDel] 34

 4.12.1 Reference..... 35

4.13 Picture adjustment [Adjustment of Picture] 36

 4.13.1 Operation 57

 4.13.2 Reference..... 61

4.14 LAN setup [Lan Setup] 65

 4.14.1 Operation 66

 4.14.2 Reference..... 67

4.15 Service setup [Service Setup] 69

 4.15.1 Operation 74

 4.15.2 Reference..... 77

**5 ADDITIONAL INFORMATION FOR ISF
ADJUSTMENT 79**

5.1 State Transitoin Diagram 79

5.2 Remote Control Code 79

**6 ADDITIONAL INFORMATION FOR THX
ADJUSTMENT 80**

5.1 State Transitoin Diagram 80

5.2 Remote Control Code 80

Table Number

Table 4-1 NULL CMD..... 13

Table 4-2 POWER CMD 14

Table 4-3 POWER CMD DATA0..... 14

Table 4-4 POWER CMD STATUS 15

Table 4-5 INPUT CMD 16

Table 4-6 INPUT CMD DATA 16

Table 4-7	REMO CMD	19	Table 4-50	ASPECT CMD DATA	47
Table 4-8	REMO CMD DATA0-4	19	Table 4-51	MASK CMD DATA	47
Table 4-9	SETUP CMD	21	Table 4-52	FILM MODE CMD DATA	47
Table 4-10	SETUP CMD SUB	21	Table 4-54	3D CONVERSION CMD DATA	47
Table 4-11	GAMMA TABLE CMD	23	Table 4-55	3D TITLE CMD DATA	47
Table 4-12	GAMMA TABLE CMD DATA	23	Table 4-57	LENS CONTROL (Focus / Zoom / Shift) CMD DATA	48
Table 4-13	GAMMA BANK SWITCH CMD	25	Table 4-58	LENS COVER CMD DATA	48
Table 4-14	GAMMA BANK SWITCH CMD DATA	25	Table 4-59	IMAGE PATTERN CMD DATA	48
Table 4-15	GAMMA POWER CMD	27	Table 4-60	LENS LOCK CMD DATA	48
Table 4-16	GAMMA POWER CMD DATA	27	Table 4-61	LENS MEMORY LOAD CMD DATA	478
Table 4-17	GAMMA DATA CMD	29	Table 4-62	INSTALLATION STYLE CMD DATA	48
Table 4-18	PANEL ALIGNMENT(ZONE) DATA CMD	31	Table 4-63	ANAMORPHIC CMD DATA	48
Table 4-19	SOURCE CMD	33	Table 4-64	SCREEN ADJUST CMD DATA	47
Table 4-20	SOURCE CMD DATA	33	Table 4-65	PANEL ALIGNMENT CMD DATA	47
Table 4-21	MODEL STATUS CMD	34	Table 4-66	BACK COLOR CMD DATA	49
Table 4-22	MODEL STATUS CMD DATA (X30/XC388/RS45)	34	Table 4-67	MENU POSITION CMD DATA	49
Table 4-23	MODEL STATUS CMD DATA (RS4800)	34	Table 4-68	MENU DISPLAY CMD DATA	49
Table 4-24	MODEL STATUS CMD DATA (X70/XC788/RS55, X90/XC988/RS65)	34	Table 4-69	LINE DISPLAY CMD DATA	49
Table 4-25	ADJUSTMENT CMD	36	Table 4-70	SOURCE DISPLAY CMD DATA	49
Table 4-26	ADJUSTMENT CMD SUB	36	Table 4-72	LOGOCMD DATA	50
Table 4-27	isf ADJUSTMENT CMD DATA	41	Table 4-73	LANGUAGE CMD DATA	50
Table 4-28	THX ADJUSTMENT CMD DATA	42	Table 4-74	TRIGGER CMD DATA	50
Table 4-31	COLOR TEMP. TABLE CMD DATA	43	Table 4-75	OFF TIMER CMD DATA	50
Table 4-32	COLOR TEMP. CORRECTION CMD DATA	43	Table 4-76	HIGH ALTITUDE MODE CMD DATA	50
Table 4-33	GAMMA CMD DATA	44	Table 4-77	INPUT CMD DATA	51
Table 4-34	GAMMA CORRECTION CMD DATA	44	Table 4-78	SOURCE CMD DATA	51
Table 4-35	BNRCMD DATA	44	Table 4-79	DEEP COLOR CMD DATA	51
Table 4-36	COLOR MANAGEMENT CMD DATA	44	Table 4-81	COPY CMD DATA FOR ISF	47
Table 4-37	CMS DISPLAY COLOR CMD DATA	45	Table 4-82	COPY CMD DATA FOR THX	53
Table 4-38	CLEAR MOTION DRIVE CMD DATA	45	Table 4-83	LENS MEMORY SAVE CMD DATA <OPERATION>	547
Table 4-39	CMD DEMO CMD DATA	45	Table 4-84	LENS MEMORY SAVE CMD DATA <REFERENCE>	547
Table 4-40	LAMP POWER CMD DATA	45	Table 4-85	COLORPROFILE CMD DATA	547
Table 4-41	COLOR SPACE CMD DATA	45	Table 4-86	PICTURE MODE CMD DATA	55
Table 4-42	HDMI INPUT LEVEL CMD DATA	45	Table 4-88	LAN SETUP CMD	65
Table 4-43	HDMI LEVEL CHK CMD DATA	46	Table 4-89	LAN SETUP CMD SUB	65
Table 4-44	HDMI COLOR SPACE CMD DATA	46	Table 4-90	DHCP Client	65
Table 4-45	HDMI CEC CMD DATA	46	Table 4-91	NETWORK RESTART	65
Table 4-46	HDMI 2D/3D CMD DATA	46	Table 4-92	SERVICE SETUP CMD	69
Table 4-47	HDMI 3D Phase CMD DATA	46	Table 4-93	SERVICE SETUP CMD SUB	69
Table 4-48	COMP. COLOR SPACE CMD DATA	46	Table 4-94	TIMER RESET	70
Table 4-49	PC AUTO ALIGNMENT CMD DATA	46	Table 4-95	TEST PATTERN DATA	70
			Table 4-96	CURRENT ADJUSTMENT DATA FOR	

SAVE/LOAD 71
Table 4-97 MUTE DATA..... 73
Table 5-1 Remote Control Code relating to isf 79
Table 6-1 Remote Control Code relating to THX..... 80

1 Outline

This specification describes how to control the D-ILA projector * by using an external controller through the RS-232C interface.


* DLA-X30/X388/RS45, DLA-RS4800, DLA-X70/X788/RS55, and DLA-X90/XC988/RS65

2 Interface

2.1 Terminal

D-SUB 9pin Male terminal

Pin No.	Name	Pin No.	Name
1	NC	6	NC
2	RXD	7	NC
3	TXD	8	NC
4	NC	9	NC
5	GND		



2.2 External Controller Connector

Serial port connector (RS-232C)

For type of the connector and pin layout, please refer to each controller's specifications.


2.3 Communication Line

This control system uses RXD (receive data), TXD(transmit data) and GND line. Use an RS-232C crossover cable to connect the projector to the external controller like as PC.

3 Protocol

3.1 Communication specification

Communication System	Asynchronous
Interface	RS-232C
Baud rate	19200 bps
Data length	8 bits
Parity	None
Stop bit	1 bit
Flow control	None
Communication code	ASCII character code



3.2 Data format

Control commands consist of Header, Unit ID, Command, Data and End. (Refer to the below)

*The length of the control command varies according to function.

1 byte	2 bytes	2 bytes	n+1 bytes	...	1 byte
Header	Unit ID	Command	Data[0]	...	Data[n]
					End

Header: Indicates the start of communication (see paragraph 3.3, Header table).

Unit ID: Specifies the device to be controlled.

Command: See paragraph 3.5, Command table.

Data [i]: Parameter corresponding to the command (data i = 0, 1, .., n).

End: Indicates the end of communication.

3.3 Header table

Added header varies according to type of control command.

HEX	ASCII	Type
0x21	'!	Operation command
0x3F	'?'	Reference command
0x40	'@'	Response command
0x06	ACK	ACK

Operation command: Added when there is an operation command notification.

Reference command: Added when there is a reference command notification.

Response command: Added when there is a response command notice in response to a reference.

ACK: ACK response is given if the command reception is normal.

3.4 Unit ID table

- ◆ The unit ID consists of two bytes, the unit code and the individual code.
- ◆ The unit code is 0x89(Fixed)
- ◆ The individual code signifies “projector ID” and it is fixed on 0x01.
- ◆ A changed individual code is preserved on the unit side.

Unit code								
b7	b6	b5	b4	b3	b2	b1	b0	
1	0	0	0	1	0	0	1	Fixed

Individual code								
b7	b6	b5	b4	b3	b2	b1	b0	
0	0	0	0	0	0	0	1	ID = 1 (Fixed)

3.5 Command table

The command consists of two bytes of ASCII characters.

HEX		ASCII		Function	Operation	Reference
0x00,	0x00	NUL	NUL	NULL command	✓	-
0x50,	0x57	'P'	'W'	Power [PoWer]	✓	✓
0x49,	0x50	'I'	'P'	Input [InPut]	✓	✓
0x52,	0x43	'R'	'C'	Remote control code through [Remote Code]	✓	-
0x53,	0x55	'S'	'U'	Initial setup [SetUp]	✓	✓
0x47,	0x54	'G'	'T'	Gamma table switch [Gamma Table]	✓	✓
0x47,	0x53	'G'	'S'	Gamma bank switch [Gamma-bank Switch]	✓	✓
0x47,	0x50	'G'	'P'	Gamma coefficient of the Gamma table "Custom 1/2/3" [Gamma Power]	✓	✓
0x47,	0x52	'G'	'R'	Gamma data (Red) of the Gamma table "Custom 1/2/3" [Gamma Red]	✓	✓
0x47,	0x47	'G'	'G'	Gamma data (Green) of the Gamma table "Custom 1/2/3" [Gamma Green]	✓	✓
0x47,	0x42	'G'	'B'	Gamma data (Blue) of the Gamma table "Custom 1/2/3" [Gamma Blue]	✓	✓
0x50,	0x52	'P'	'R'	Red of Panel Alignment (zone) * Only X70/XC788/RS55, X90/XC988/RS65	✓	✓
0x50,	0x42	'P'	'B'	Blue of Panel Alignment (zone) * Only X70/XC788/RS55, X90/XC988/RS65	✓	✓
0x53,	0x43	'S'	'C'	Source asking [SourCe]	-	✓
0x4D,	0x44	'M'	'D'	Model status asking [MoDeI]	-	✓
0x50,	0x4D	'P'	'M'	Picture adjustment [adjustment of Picture] : Picture Adjust	✓	✓
0x49,	0x53	'I'	'S'	Picture adjustment [adjustment of Picture] : Input Signal	✓	✓
0x49,	0x4E	'I'	'N'	Picture adjustment [adjustment of Picture] : Installation	✓	✓
0x44,	0x53	'D'	'S'	Picture adjustment [adjustment of Picture] : Display Setup	✓	✓
0x46,	0x55	'F'	'U'	Picture adjustment [adjustment of Picture] : Function	✓	✓
0x49,	0x46	'I'	'F'	Picture adjustment [adjustment of Picture] : Information	-	✓
0x4C	0x53	'L'	'S'	LAN setup [Lan Setup]	✓	✓
0x53	0x53	'S'	'S'	Service setup [Service Setup]	✓	✓

3.6 Parameter

3.6.1 Numeric value parameters

Signed 2-byte hexadecimal code represented by 4 (byte) characters.

Ex-1)

The parameter indication '20' (decimal):

Since '20' (decimal) is represented as '0014' in signed 2-byte hexadecimal, its parameter is:

'0014'(30H 30H 31H 34H)

Ex-2)

The parameter to indicate '-2' (decimal):

Since '-2' (decimal) is represented as 'FFFE' in signed 2-byte hexadecimal, its parameter is:

'FFFE'(46H 46H 46H 45H)

3.6.2 Special parameter

The parameters are generally interpreted with ASCII characters.

But some of the commands have a unique interpretation (for the details, see the section on Command sequences).

HEX	ASCII	Meaning
0x2B	'+'	'+'
0x2D	'_'	'_'
0x30	'0'	OFF/NO/Disable
0x31	'1'	ON/YES/Enable
0x30 ~ 0x39	'0'~'9'	'0'~'9'
0x41 ~ 0x5A	'A'~'Z'	'A'~'Z'


3.7 Exit code

0x0A(LineFeed) fixed.

3.8 Error handling

- ◆ An external controller should not transmit the next commands until it receives an ACK that the transmitted unit ID and the command match.
- ◆ The specifications for timeout and retry when an ACK response has not been received are not specified here; the specifications unique to the external controller may be used.
- ◆ If the byte interval is blank for 50 ms or longer, initialize the transmit-receive sequence (the received data is discarded).
- ◆ If a unit ID other than its own is received, it is ignored.
- ◆ If the unit ID matches but an undefined header/command is received, it is ignored.
- ◆ If the header/command is normal but an undefined parameter is received, it is ignored.
- ◆ Even if the command receipt is normal (ACK response) and the parameter is valid, it may be ignored, depending on the state of the projector. For the details, see the instruction manual for the projector (for example, projector, power ON operation in the power cooling state, etc.).

3.9 Communication sequence

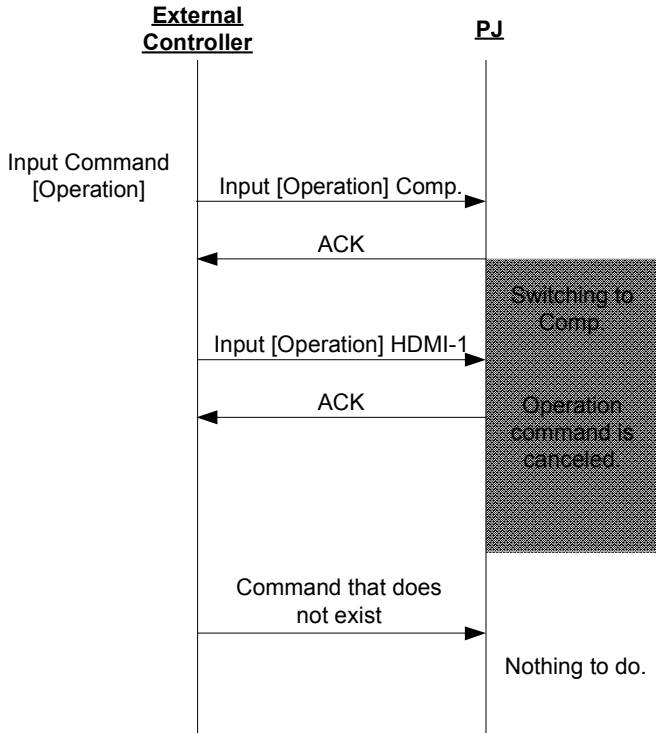


[ACK/NACK concept]

When the projector receives a command, it returns ACK immediately if the command is prescribed. If not, the projector returns nothing.

[Operation sequence]

When projector receives an operation command, it returns ACK immediately and performs the command operation. However, if the projector receives the command while user operation is going on, it only returns ACK for the command but operation is canceled.

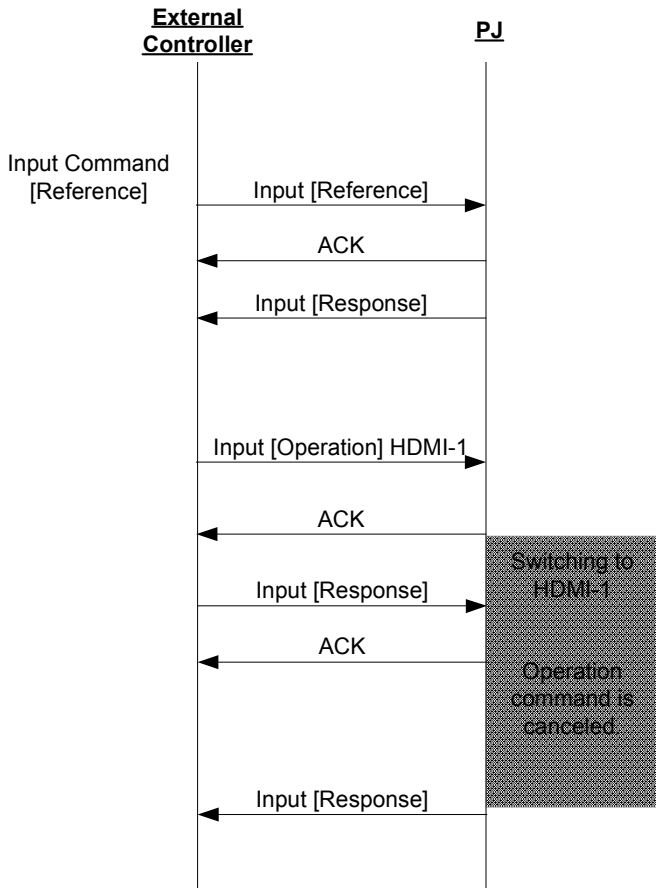

[Reference sequence]

When projector receives a reference command, it returns ACK immediately, and then transmits related information for command as response to external controller.

If the projector receives a reference command while in user operation, it transmits ACK immediately, and then it transmits response command after the completion of user operation.

This is because of conflict between projector information and the information passed to external controller via response command based on timing, if the reference command is approved while in user operation.

4 Command control

4.1 NULL command

In using CEDIA commands, it is used in order to confirm whether transmission is possible.

It is used to confirm whether the external controller and the projector are properly connected.

Command code

Table 4-1 NULL CMD

HEX		ASCII		Function	Operation	Reference
0x00	0x00	NULL	NULL	NULL command	✓	-

Parameter

None

4.1.1 Operation

Use the command as shown in the following examples.

Purpose: To confirm whether the external controller and the projector are properly connected.

(1) Data is transmitted from the external controller to the projector as follows.

1: External controller →					
0x21	0x89	0x01	0x00	0x00	0x0A
'!(Operation)	PJ	Individual:1	NULL	NULL	End

(2) If the external controller and the projector are connected and the projector is operating normally, the projector returns an ACK to the external controller as a NULL command response.

2: ← Projector					
0x06	0x89	0x01	0x00	0x00	0x0A
ACK	PJ	Individual : 1	NULL	NULL	End

By the above exchange, it can be confirmed whether the connection and communication are normal or abnormal.

4.1.2 Reference

N/A

4.2 Power [PoWer]

Used for power ON/OFF operation and for referencing the power setting state of the projector.

Command code

Table 4-2 POWER CMD

HEX		ASCII		Function	Operation	Reference
0x50	0x57	'P'	'W'	Power [POWER]	✓	✓

Parameters

Table 4-3 POWER CMD DATA0

HEX	ASCII	Operation
0x30	'0'	Power OFF
0x31	'1'	Power ON

4.2.1 Operation

Use the command as shown in the following examples.

Purpose: To turn the Projector's power OFF. (Current state: Power-ON)

(1) Data is transmitted from the external controller to the Projector as follows.

1: External controller →						
0x21	0x89	0x01	0x50	0x57	0x30	0x0A
'!(Operation)	PJ	Individual : 1	'P'	'W'	OFF	End

(2) If the projector receives data (1) and the command reception is normal, the projector returns an ACK as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x57	0x0A
ACK	PJ	Individual : 1	'P'	'W'	End

(3) The projector turns power OFF.

The power can be turned OFF by the above exchange.

- The power-OFF operation can be done by a sequence similar to that for power-ON.
- The projector ignores data in the same state. For example, even if power-ON data is sent with the projector in power-ON mode, no projector operation is done.

4.2.2 Reference

Use the command as shown in the following examples.

Purpose: To confirm the present projector's power state. (Current state: Power-ON)

(1) Data is transmitted from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x50	0x57	0x0A
'?' (Reference)	PJ	Individual : 1	'P'	'W'	End

(2) If the projector receives data (1) above and the command reception was normal, the projector returns an ACK as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x57	0x0A
ACK	PJ	Individual : 1	'P'	'W'	End

(3) Next, the projector transmits a report of the power setting to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x50	0x57	0x31	0x0A
'@'(Response)	PJ	Individual : 1	'P'	'W'	ON	End

By the above exchange, it can be confirmed that the projector's power state is ON.

Operation on projector screen

None

Parameters

Data length: 1

【Data 0】

Table 4-4 POWER CMD STATUS

HEX	ASCII	Operation
0x30	'0'	Standby
0x31	'1'	Lamp On
0x32	'2'	Cooling
0x33	'3'	Reserved
0x34	'4'	Error

4.3 Input [InPut]

Used for input switching operation and referencing the input settings of the projector.

Setting is automatically stored in the projector when input is changed.

Command code

Table 4-5 INPUT CMD

HEX		ASCII		Function	Operation	Reference
0x49	0x50	'I'	'P'	Input switch [INPUT]	✓	✓

Parameters

Data length: 1 or 2


【Data 0】

Table 4-6 INPUT CMD DATA

HEX	ASCII	Operation
0x30	'0'	Reserved
0x31	'1'	Reserved
0x32	'2'	COMP
0x33	'3'	PC * Only X70/XC788/RS55, X90/XC988/RS65
0x36	'6'	HDMI-1
0x37	'7'	HDMI-2
0x2B	'+'	Input + Toggle switching
0x2D	'-'	Input - Toggle switching

- ◆ The input switching operation is not done if the parameter data is sent to a terminal that is not provided on the projector.
- ◆ The toggle sequence follows the sequence of Operation panel on the projector.

When operating the projector of Table 4-6, the input toggling switches in the following sequence.

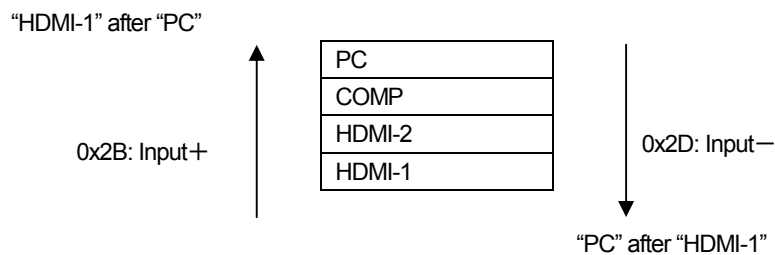

4.3.1 Operation

Use the command as shown in the following examples.

Purpose: To switch the input to COMP. (Current input state: "HDMI-1")

(1) Data is transmitted from the external controller to the projector as follows.

1: External controller →						
0x21	0x89	0x01	0x49	0x50	0x32	0x0A
!(Operation)	PJ	Individual : 1	'I'	'P'	COMP	End


(2) If projector receives data (1) and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector						
0x06	0x89	0x01	0x49	0x50	0x0A	
ACK	PJ	Individual : 1	'I'	'P'	End	

(3) The projector switches the input to COMP.

By the above exchange, the input can be switched to COMP.

Operation on the projector screen

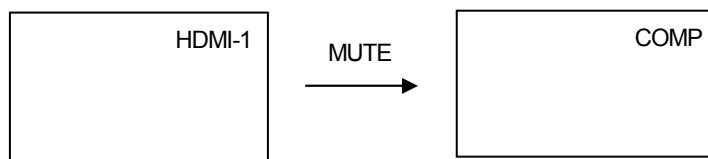

Purpose: To switch the input with the input+ toggle. (Current input state: COMP)

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →						
0x21	0x89	0x01	0x49	0x50	0x2B	0x0A
'!(Operation)	PJ	Individual : 1	'I'	'P'	Input+	End


(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x49	0x50	0x0A
ACK	PJ	Individual : 1	'I'	'P'	End

(3) The projector switches the input to HDMI-1.

By the above exchange, the input can be switched to HDMI-1.

Operation on the projector screen

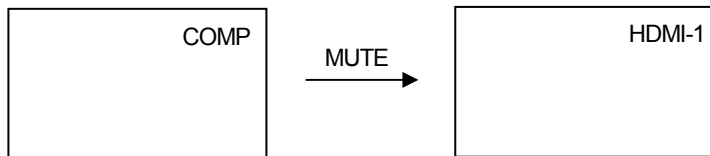

4.3.2 Reference

Use the command as shown in the following examples.

Purpose: To confirm the current projector output. (Current projector state: HDMI-2)

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x49	0x50	0x0A
'?(Reference)	PJ	Individual : 1	'I'	'P'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x49	0x50	0x0A
ACK	PJ	Individual : 1	'I'	'P'	End

(3) The projector transmits information of input setting to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x49	0x50	0x37	0x0A
'@(Response)	PJ	Individual : 1	'I'	'P'	HDMI-2	End

By the above exchange, it can be confirmed that the projector output state is in the HDMI-2 state.

Operation on the projector screen

None

4.4 Remote control pass-through [RemoteCode]

By selecting JVC remote control code, the same operation as user remote control can be achieved.

Remote control code consists of one byte of custom code and one byte of function/operation code.

Remote control code varies according to the projector and its state.

For the details of the remote control codes, see the key code specifications of each model.

Command code

Table 4-7 REMO CMD

HEX		ASCII		Function	Operation	Reference
0x52	0x43	'R'	'C'	Remote control pass-through [Remote Code]	✓	

Parameters

Data length: 4

Table 4-8 REMO CMD DATA0-4

HEX	ASCII	Operation
0x30 ~ 0x39	'0' ~ '9'	Remote control code setting
0x41 ~ 0x46	'A' ~ 'F'	Remote control code setting

- ◆ The remote control code specification is in hexadecimal digits.
- ◆ The operation transition with the remote control codes is the same as from the user remote control.
- ◆ For the details of the remote control codes, see the key code specifications.

4.4.1 Operation

Use the command as shown in the following examples.

Purpose: To display MENU screen by press the “MENU” of remote control code [0x732E].

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →									
0x21	0x89	0x01	0x52	0x43	0x37	0x33	0x32	0x45	0x0A
!(Operation)	PJ	Individual : 1	'R'	'C'	'7'	'3'	'2'	'E'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x52	0x43	0x0A
ACK	PJ	Individual : 1	'R'	'C'	End

- (3) The projector produces a MENU screen.

By the above exchange, the MENU screen can be produced.

4.5 Setup [SetUp]

Used to change the initial setting.

Command code

Table 4-9 SETUP CMD

HEX		ASCII		Function
0x53	0x55	'S'	'U'	Initial setting [SetUp]

Parameters

Data length: No regulation

Sub command table (Mandatory command only)

Table 4-10 SETUP CMD SUB

HEX		ASCII		Function	Last Memory	Operation	Reference	Model		
								X30/XC388/RS45	RS4800	X70/XC788/RS55/ X90/XC988/RS65
0x52	0x53	'R'	'S'	Switch the external control command protocol	No	✓	-	✓	✓	✓
0x52	0x43	'R'	'C'	Switch the IR code	No	✓	✓	✓	✓	✓
0x52	0x4C	'R'	'L'	Switch RS-232C/LAN	Yes	✓	✓	✓	✓	✓

- It consists of "Sub command" + "Setting". The Sub command consists of ASCII character two bytes.

Sub commands parameters are as follow.

Parameters when the Sub command is [0x52,0x53] : Data length 1

HEX	ASCII	Operation
0x31	'1'	Compatible command system

Parameters when the Sub command is [0x52,0x43] : Data length 1

HEX	ASCII	Operation
0x30	'0'	A code(0x73)
0x31	'1'	B code(0x63)

Parameters when the Sub command is [0x52,0x4C] : Data length 1

HEX	ASCII	Operation
0x30	'0'	RS-232C
0x31	'1'	LAN

4.5.1 Operation

Use the command as shown in the following examples.

Purpose: To switch External control command to compatible command protocol.

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →								
0x21	0x89	0x01	0x53	0x55	0x52	0x53	0x31	0x0A
'!(Operation)	PJ	Individual : 1	'S'	'U'	'R'	'S'	Compatible command protocol:1	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x55	0x0A
ACK	PJ	Individual : 1	'S'	'U'	End

- (3) The projector switches external command protocol to Compatible command protocol.

By the above exchange, the projector switches to Compatible command protocol.

Operation on projector screen

None

4.6 Gamma table [GammaTable]

Used for switching the gamma table and referencing the gamma table setting of the projector.

Command code

Table 4-11 GAMMA TABLE CMD

HEX		ASCII		Function	Operation	Reference
0x47	0x54	'G'	'T'	Switch gamma table [GammaTable]	✓	✓

Parameters

Data length: 1

[Data 0]

Table 4-12 GAMMA TABLE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Normal
0x31	'1'	A
0x32	'2'	B
0x33	'3'	C
0x34	'4'	Custom1
0x35	'5'	Custom2
0x36	'6'	Custom3
0x37	'7'	D
0x38	'8'	Normal(3D)
0x39	'9'	Bright(3D)
0x41	'A'	Film 1
0x42	'B'	Film 2
0x43	'C'	Film 3
0x44	'D'	Film 4

- ◆ When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.

4.6.1 Operation

Use the command as shown in the following examples.

Purpose: To switch the gamma table to Custom1. (Current setting: Normal)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →						
0x21	0x89	0x01	0x47	0x54	0x34	0x0A
'!(Operation)	PJ	Individual : 1	'G'	'T'	Custom1	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x54	0x0A
ACK	PJ	Individual : 1	'G'	'T'	End

- (3) The projector switches the gamma table to Custom1.

4.6.2 Reference

Use the command as shown in the following examples.

Purpose: To confirm the current gamma table of the projector. (Current setting: Normal)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x47	0x54	0x0A
'?(Reference)	PJ	Individual : 1	'G'	'T'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x54	0x0A
ACK	PJ	Individual : 1	'G'	'T'	End

- (3) The projector transmits a report of gamma table to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x47	0x54	0x30	0x0A
'@(Response)	PJ	Individual : 1	'G'	'T'	Normal	End

By the above exchange, it can be confirmed that the projector's gamma table is set to Normal.

4.7 Gamma Bank switch [Gamma-bankSwitch]

Gamma bank is to set Gamma coefficient and Gamma data of the gamma table of "Custom1", "Custom2", and "Custom3".

Used for switching operation of the gamma bank and referring the gamma bank.

Command code

Table 4-13 GAMMA BANK SWITCH CMD

HEX		ASCII		Function	Operation	Reference
0x47	0x53	'G'	'S'	Gamma bank switch [Gamma-bankSwitch]	✓	✓

Parameters

Data length: 1

[Data 0]

Table 4-14 GAMMA BANK SWITCH CMD DATA

HEX	ASCII	Operation
0x30	'0'	N/A
0x31	'1'	N/A
0x32	'2'	N/A
0x33	'3'	N/A
0x34	'4'	Custom1
0x35	'5'	Custom2
0x36	'6'	Custom3

- ◆ When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.
- ◆ Gamma table is not switched even if the Gamma bank is switched.
- ◆ Available Gamma tables for switching/referencing Gamma bank are Custom1, Custom2 and Custom3 only. When the gamma table is other than these and it receives the command, the projector ignores the command and does not respond.

4.7.1 Operation

Use the command as shown in the following examples.

Purpose: To switch the Gamma bank to Custom1. (Current Gamma bank: Custom2)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →						
0x21	0x89	0x01	0x47	0x53	0x34	0x0A
'!(Operation)	PJ	Individual : 1	'G'	'S'	Custom1	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x53	0x0A
ACK	PJ	Individual : 1	'G'	'S'	End

- (3) The projector switches the Gamma bank to Custom1.

4.7.2 Reference

Use the command as shown in the following examples.

Purpose: To confirm the current Gamma bank. (Current selection: Custom1)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x47	0x53	0x0A
'?(Reference)	PJ	Individual : 1	'G'	'S'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x53	0x0A
ACK	PJ	Individual : 1	'G'	'S'	End

- (3) The projector transmits Gamma table information to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x47	0x53	0x34	0x0A
'@(Response)	PJ	Individual : 1	'G'	'S'	Custom1	End

By the above exchange, it can be confirmed that the projector's Gamma bank is set to Custom1.

4.8 Gamma coefficient of Gamma table "Custom1/2/3" [GammaPower]

Used to switch the gamma coefficient when the gamma table is Custom 1/2/3 and to refer the gamma coefficient.

Target of switching and referencing is followed by setting value of the Gamma bank.

Command code

Table 4-15 GAMMA POWER CMD

HEX		ASCII		Function	Operation	Reference
0x47	0x50	'G'	'P'	Gamma coefficient of Gamma table "Custom 1/2/3" [GammaPower]	✓	✓

Parameters

Data length: 1

[Data 0]

Table 4-16 GAMMA POWER CMD DATA

HEX	ASCII	Operation
0x30	'0'	1.8
0x31	'1'	1.9
0x32	'2'	2.0
0x33	'3'	2.1
0x34	'4'	2.2
0x35	'5'	2.3
0x36	'6'	2.4
0x37	'7'	2.5
0x38	'8'	2.6

- When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.
- No response returned when Gamma correction is set to Normal/A/B/C/D.

4.8.1 Operation

Use the command as shown in the following examples.

Purpose: To switch the gamma coefficient of the gamma table “Custom1” to 2.1. (Current setting: Gamma bank “Custom1”, Gamma coefficient “2.2”)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →						
0x21	0x89	0x01	0x47	0x50	0x33	0x0A
'!(Operation)	PJ	Individual : 1	'G'	'P'	2.1	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x50	0x0A
ACK	PJ	Individual : 1	'G'	'P'	End

- (3) The projector switches the gamma coefficient of the gamma table “Custom1”.

4.8.2 Reference

Use the command as shown in the following examples.

Purpose: To confirm the current gamma coefficient of the gamma table “Custom2” of the projector. (Current setting: Gamma bank “Custom2”, Gamma coefficient “1.8”)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x47	0x50	0x0A
'?(Reference)	PJ	Individual : 1	'G'	'P'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x50	0x0A
ACK	PJ	Individual : 1	'G'	'P'	End

- (3) The projector transmits a report of the gamma coefficient to the external Controller.

3: ← Projector						
0x40	0x89	0x01	0x47	0x50	0x30	0x0A
'@(Response)	PJ	Individual : 1	'G'	'P'	1.8	End

By the above exchange, it can be confirmed that the gamma coefficient of gamma table “Custom2” is 1.8.

4.9 Gamma data of Gamma table “Custom 1/2/3” [GammaRed, Green, Blue]

Used for sending operation of the gamma data when the Gamma table is Custom, and referencing the gamma data of the projector.

Target of switching and referencing is followed by setting value of the Gamma bank.

Command code

Table 4-17 GAMMA DATA CMD

HEX		ASCII		Function	Operation	Reference
0x47	0x52	'G'	'R'	Gamma data of the gamma table "Custom1/2/3" (Red) [GammaRed]	✓	✓
0x47	0x47	'G'	'G'	Gamma data of the gamma table "Custom1/2/3" (Green) [GammaGreen]	✓	✓
0x47	0x42	'G'	'B'	Gamma data of the gamma table "Custom1/2/3" (Blue) [GammaBlue]	✓	✓

Parameters

Data length: 512

The gamma data has 256 adjustment points composed of binary data.

The byte order is little endian.

- When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.
- When the gamma table of the projector is not "Custom1", "Custom2" or "Custom3" and the projector receives the command, the projector ignores the command and does not respond.
- When the projector receives a gamma data by operation command, the projector saves the gamma data on proper area of EEPROM immediately.
- If the projector receives gamma data larger than 512 bytes, it is judged as invalid data and the projector does not respond.
- The curve is combination of the curve on the OSD and the table (Normal/A/B/C/D) in the video processor.

4.9.1 Operation

Use the command as shown in the following examples.

Purpose: To send red gamma data of the gamma table “Custom1/2/3” to the projector.

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x21	0x89	0x01	0x47	0x52	0x0A
!(Operation)	PJ	Individual : 1	'G'	'R'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x52	0x0A
ACK	PJ	Individual : 1	'G'	'R'	End

- (3) The external controller transmits 512 bytes of binary data to the projector.

- (4) If the projector receives data (3) above and the command receipt was normal, an ACK is returned from the projector as follows.

4: ← Projector					
0x06	0x89	0x01	0x47	0x52	0x0A
ACK	PJ	Individual : 1	'G'	'R'	End

4.9.2 Reference

Use the command as shown in the following examples.

**Purpose: To confirm the green gamma data of the current gamma table “Custom3”.
(Current Gamma bank: Custom3)**

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x47	0x47	0x0A
?(Reference)	PJ	Individual : 1	'G'	'G'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x47	0x47	0x0A
ACK	PJ	Individual : 1	'G'	'G'	End

- (3) The projector transmits 512 bytes binary data to the external controller.

4.10 Panel Alignment (zone) Data [Panel Alignment(Zone) Red, Blue]

Used for transmitting operation and referencing Panel Alignment (zone) data

Corresponding for X70/XC788/RS55, X90/XC988/RS65 only

Command Code

Table 4-18 PANELALIGNMENT(ZONE) DATA CMD

HEX		ASCII		Function	transmitting	referencing
0x50	0x52	'P'	'R'	Data of Red [Panel Alignment(Zone)Red]	✓	✓
0x50	0x42	'P'	'B'	Data of Blue [Panel Alignment(Zone)Blue]	✓	✓

Parameters

Data Length: 256

Horizontal and Vertical data of 11x11 Adjustment zone composed of binary data. Data could be -31 (0xE1) to +31(0x1F).

Data is assigned by 2 bytes and its order is from Horizontal to Vertical. The order of Adjustment zone is shown at a table below.

121 (Adjustment zone) x 2 (Horizontal / Vertical) + 13 (reserved) =256 Byte

Data No.	Horizontal position of zone	Vertical position of zone	Horizontal / Vertical
1	0	0	Horizontal
2			Vertical
3	1	0	Horizontal
4			Vertical
5	2	0	Horizontal
6			Vertical
(skip)			
21	10	0	Horizontal
22			Vertical
23	0	1	Horizontal
24			Vertical
(skip)			
239	9	10	Horizontal
240			Vertical
241	10	10	Horizontal
242			Vertical
243-256	Reserved		

The Byte order is little endian.

- ◆ When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.
- ◆ If the projector receives gamma data larger than 256 bytes, it is judged as invalid data and the projector does not respond.

4.10.1 Operation

Use the command as shown in the following examples.

Purpose : To send red Alignment (zone) data to the projector.

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →					
0x21	0x89	0x01	0x50	0x52	0x0A
'!' (Operation)	PJ	Individual : 1	'P'	'R'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x52	0x0A
ACK	PJ	Individual : 1	'P'	'R'	End

(3) The external controller transmits 256 bytes of binary data to the projector.

(4) If the projector receives data (3) above and the command receipt was normal, an ACK is returned from the projector as follows.

4: ← Projector					
0x06	0x89	0x01	0x50	0x52	0x0A
ACK	PJ	Individual : 1	'P'	'R'	End

4.10.2 Reference

Use the command as shown in the following examples.

Purpose : To confirm Blue data of the current Panel Alignment (zone)

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →					
0x3F	0x89	0x01	0x50	0x42	0x0A
'?' (reference)	PJ	Individual:1	'P'	'B'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x42	0x0A
ACK	PJ	Individual : 1	'P'	'B'	End

(3) The projector transmits 256 bytes binary data to the external controller.

4.11 Source Asking [SourCe]

Used to refer signal input status of the projector.

Command code

Table 4-19 SOURCE CMD

HEX		ASCII		Function	Operation	Reference
0x53	0x43	'S'	'C'	Source asking [SourCe]		✓

Parameters

Data length: 1

【Data 0】

Table 4-20 SOURCE CMD DATA

HEX	ASCII	Operation
0x30	'0'	No signal or out of range
0x31	'1'	Available signal is input to the projector.

- ◆ When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.

4.11.1 Reference

Use the command as shown in the following examples.

Purpose: To confirm the current status of the projector. (Current status: No signal or out of range)

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x53	0x43	0x0A
'?(Reference)	PJ	Individual : 1	'S'	'C'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x43	0x0A
ACK	PJ	Individual : 1	'S'	'C'	End

- (3) The projector transmits the status of the input signal to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x53	0x43	0x30	0x0A
'@(Response)	PJ	Individual : 1	'S'	'C'	No signal or out of range	End

By the above exchange, it can be confirmed that whether the status of input signal of the projector is no signal or out of range.

4.12 Model status asking [MoDel]

Used for referring model status of the projector.

Command code

Table 4-21 MODEL STATUS CMD

HEX		ASCII		Function	Operation	Reference
0x4D	0x44	'M'	'D'	Model status asking [MoDel]	-	✓

Parameters

Data length: 14

Table 4-22 MODEL STATUS CMD DATA (X30/XC388/RS45)

Parameters													
0x49	0x4C	0x41	0x46	0x50	0x4A	0x20	0x2D	0x2D	0x20	0x2D	0x58	0x48	0x45
'I'	'L'	'A'	'F'	'P'	'J'	SP	'_'	'_'	SP	'_'	'X'	'H'	'E'

Table 4-23 MODEL STATUS CMD DATA (RS4800)

Parameters													
0x49	0x4C	0x41	0x46	0x50	0x4A	0x20	0x2D	0x2D	0x20	0x2D	0x58	0x48	0x45
'I'	'L'	'A'	'F'	'P'	'J'	SP	'_'	'_'	SP	'_'	'X'	'H'	'E'

Table 4-24 MODEL STATUS CMD DATA (X70/XC788/RS55, X90/XC988/RS65)

Parameters													
0x49	0x4C	0x41	0x46	0x50	0x4A	0x20	0x2D	0x2D	0x20	0x2D	0x58	0x48	0x46
'I'	'L'	'A'	'F'	'P'	'J'	SP	'_'	'_'	SP	'_'	'X'	'H'	'F'

4.12.1 Reference

Use the command as shown in the following examples.

Purpose: To confirm the model status of the current projector.

- (1) Transmit the data from the external controller to the projector as follows.

1: External controller →					
0x3F	0x89	0x01	0x4D	0x44	0x0A
'?'(Reference)	PJ	Individual : 1	'M'	'D'	End

- (2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4D	0x44	0x0A
ACK	PJ	Individual : 1	'M'	'D'	End

- (3) The projector transmits a report of the model status to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x4D	0x44	Parameters 14 bytes	0x0A
'@'(Response)	PJ	Individual : 1	'M'	'D'	Model status	End

By the above exchange, it can be confirmed model status of the projector.

4.13 Picture adjustment [Adjustment of Picture]

Used for adjusting picture.

Command code

Table 4-25 ADJUSTMENT CMD

HEX		ASCII		Function
0x50	0x4D	'P'	'M'	Picture Adjust
0x49	0x53	'I'	'S'	Input Signal
0x49	0x4E	'I'	'N'	Installation
0x44	0x53	'D'	'S'	Display Setup
0x46	0x55	'F'	'U'	Function
0x49	0x46	'I'	'F'	Information

Parameter1

Parameter1: Sub command

Data length: ASCII character 2 bytes

Parameter1 table is as follow.

Table 4-26 ADJUSTMENT CMD SUB

Command Code	Parameter 1	Function	Operation	Reference	Data type	Model				
						X30/XC388/RS45	RS4800	X70/XC788/RS55/ X90/XC988/RS65		
'P'	'M'	'I'	'E'	isf Calibration Mode switch	✓	✓	Special	-	✓	✓
'P'	'M'	'P'	'M'	Picture Mode switch	✓	✓	Special 12	✓	✓	✓
'P'	'M'	'P'	'R'	Color Profile switch (*1)	✓	✓	Special 11	-	-	✓
'P'	'M'	'C'	'L'	Color Temperature table switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'C'	'C'	Color Temperature Correction switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'G'	'R'	Color Temperature Gain (Red) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'G'	'G'	Color Temperature Gain (Green) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'G'	'B'	Color Temperature Gain (Blue) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'O'	'R'	Color Temperature Offset (Red) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'O'	'G'	Color Temperature Offset (Green) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'O'	'B'	Color Temperature Offset (Blue) adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'G'	'T'	Gamma Table switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'F'	'W'	Tone (White) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'F'	'R'	Tone (Red) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'F'	'G'	Tone (Green) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'F'	'B'	Tone (Blue) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'C'	'N'	Contrast adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'B'	'R'	Brightness adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'C'	'O'	Color adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'T'	'I'	Tint adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'S'	'H'	Sharpness adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'D'	'E'	Detail Enhance adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'R'	'N'	RNR adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'M'	'N'	MNR adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'B'	'N'	BNR switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'G'	'C'	Gamma Correction switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'D'	'R'	Gamma Red data	✓	✓	Special2	✓	✓	✓
'P'	'M'	'D'	'G'	Gamma Green data	✓	✓	Special2	✓	✓	✓
'P'	'M'	'D'	'B'	Gamma Blue data	✓	✓	Special2	✓	✓	✓
'P'	'M'	'W'	'L'	Bright Level adjustment	✓	✓	Numeric	-	-	✓

Command Code		Parameter 1		Function	Operation	Reference	Data type	Model		
'P'	'M'	'B'	'L'	Dark Level adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'C'	'B'	Color Management table switch	✓	✓	Special	-	-	✓
'P'	'M'	'D'	'C'	CMS Display Color switch	✓	✓	Special	-	-	✓
'P'	'M'	'A'	'R'	Adjust Area (Red) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'O'	Adjust Area (Orange) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'Y'	Adjust Area (Yellow) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'G'	Adjust Area (Green) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'C'	Adjust Area (Cyan) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'B'	Adjust Area (Blue) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'A'	'M'	Adjust Area (Magenta) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'R'	HUE (Red) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'O'	HUE (Orange) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'Y'	HUE (Yellow) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'G'	HUE (Green) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'C'	HUE (Cyan) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'B'	HUE (Blue) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'H'	'M'	HUE (Magenta) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'R'	SATURATION (Red) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'O'	SATURATION (Orange) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'Y'	SATURATION (Yellow) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'G'	SATURATION (Green) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'C'	SATURATION (Cyan) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'B'	SATURATION (Blue) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'S'	'M'	SATURATION (Magenta) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'R'	BRIGHTNESS (Red) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'O'	BRIGHTNESS (Orange) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'Y'	BRIGHTNESS (Yellow) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'G'	BRIGHTNESS (Green) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'C'	BRIGHTNESS (Cyan) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'B'	BRIGHTNESS (Blue) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'L'	'M'	BRIGHTNESS (Magenta) adjustment	✓	✓	Numeric	-	-	✓
'P'	'M'	'C'	'M'	Clear Motion Drive switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'C'	'D'	CMD Demo switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'L'	'A'	Lens Aperture adjustment	✓	✓	Numeric	✓	✓	✓
'P'	'M'	'L'	'P'	Lamp Power switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'C'	'S'	Color Space switch	✓	✓	Special	✓	✓	✓
'P'	'M'	'J'	'L'	MPC Level switch	✓	✓	Numeric	-	-	✓
'P'	'M'	'U'	'1'	Name Edit of Picture Mode User1	✓	✓	Special 10	✓	✓	✓
'P'	'M'	'U'	'2'	Name Edit of Picture Mode User2	✓	✓	Special 10	✓	✓	✓
'P'	'M'	'U'	'3'	Name Edit of Picture Mode User3	✓	✓	Special 10	✓	✓	✓
'P'	'M'	'U'	'4'	Name Edit of Picture Mode User4	✓	✓	Special 10	✓	✓	✓
'P'	'M'	'U'	'5'	Name Edit of Picture Mode User5	✓	✓	Special 10	✓	✓	✓
'I'	'S'	'I'	'L'	HDMI Input Level switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'L'	'C'	HDMI Level CHK switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'H'	'S'	HDMI Color Space switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'C'	'E'	HDMI CEC switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'3'	'D'	HDMI 2D/3D switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'3'	'P'	HDMI 3D Phase adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'C'	'C'	COMP. Color Space switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'A'	'A'	PC Auto Alignment execution	✓	-	Special	✓	✓	✓
'I'	'S'	'T'	'R'	PC Tracking adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'P'	'P'	PC Phase adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'P'	'H'	Picture Position (Horizontal) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'P'	'V'	Picture Position (Vertical) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'A'	'S'	Aspect switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'M'	'A'	Mask switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'M'	'L'	Mask (Left) adjustment	(*2)	✓	Numeric	✓	✓	✓
'I'	'S'	'M'	'R'	Mask (Right) adjustment	(*2)	✓	Numeric	✓	✓	✓
'I'	'S'	'M'	'T'	Mask (Top) adjustment	(*2)	✓	Numeric	✓	✓	✓

Command Code		Parameter 1		Function	Operation	Reference	Data type	Model		
'I'	'S'	'M'	'B'	Mask (Bottom) adjustment	(*2)	✓	Numeric	✓	✓	✓
'I'	'S'	'F'	'M'	Film Mode switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'3'	'C'	3D conversion switch	✓	✓	Special	✓	✓	✓
'I'	'S'	'D'	'P'	Intensity of 3D conversion adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'L'	'V'	Parallax of 3D conversion adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'3'	'T'	Sub title adjustment of 3D conversion	✓	✓	Special	✓	✓	✓
'I'	'S'	'C'	'A'	Crosstalk Cancel (White) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'C'	'R'	Crosstalk Cancel (Red) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'C'	'G'	Crosstalk Cancel (Green) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'S'	'C'	'B'	Crosstalk Cancel (Blue) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'F'	'N'	Focus Near adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'F'	'F'	Focus Far adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'Z'	'T'	Zoom Tele adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'Z'	'W'	Zoom Wide adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'S'	'L'	Shift Left adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'S'	'R'	Shift Right adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'S'	'U'	Shift Up adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'S'	'D'	Shift Down adjustment (*3)	✓	✓	Special	✓	✓	✓
'I'	'N'	'C'	'V'	Lens Cover switch	✓	✓	Special	-	-	✓
'I'	'N'	'I'	'P'	Image Pattern switch	✓	✓	Special	✓	✓	✓
'I'	'N'	'L'	'L'	Lens Lock switch	✓	✓	Special	✓	✓	✓
'I'	'N'	'X'	'R'	Pixel Adjust (Horizontal Red) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'X'	'B'	Pixel Adjust (Horizontal Blue) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'Y'	'R'	Pixel Adjust (Vertical Red) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'Y'	'B'	Pixel Adjust (Vertical Blue) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'I'	'S'	Installation Style switch	✓	✓	Special	✓	✓	✓
'I'	'N'	'K'	'H'	Keystone (Horizontal) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'K'	'V'	Keystone (Vertical) adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'V'	'S'	Anamorphic switch	✓	✓	Special	✓	✓	✓
'I'	'N'	'S'	'A'	Screen Adjust switch	✓	✓	Numeric	-	-	✓
'I'	'N'	'S'	'B'	Screen Adjust switch	✓	✓	Special	✓	✓	-
'I'	'N'	'R'	'B'	Black Level adjustment	✓	✓	Numeric	✓	✓	✓
'I'	'N'	'P'	'A'	Panel Alignment switch	✓	✓	Special	✓	✓	✓
'I'	'N'	'M'	'S'	Store Lens memory	✓	✓	Special 9	✓	✓	✓
'I'	'N'	'M'	'L'	Load Lens memory	✓	-	Special	✓	✓	✓
'I'	'N'	'M'	'1'	Name Edit of Lens Memory 1	✓	✓	Special 10	✓	✓	✓
'I'	'N'	'M'	'2'	Name Edit of Lens Memory 2	✓	✓	Special 10	✓	✓	✓
'I'	'N'	'M'	'3'	Name Edit of Lens Memory 3	✓	✓	Special 10	✓	✓	✓
'D'	'S'	'B'	'C'	Back Color switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'M'	'P'	Menu Position switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'M'	'D'	Menu Display switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'L'	'D'	Line Display switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'S'	'D'	Source Display switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'L'	'O'	Logo switch	✓	✓	Special	✓	✓	✓
'D'	'S'	'L'	'A'	Language switch	✓	✓	Special	✓	✓	✓
'F'	'U'	'T'	'R'	Trigger switch	✓	✓	Special	✓	✓	✓
'F'	'U'	'O'	'T'	Off Timer switch	✓	✓	Special	✓	✓	✓
'F'	'U'	'H'	'A'	High Altitude Mode switch	✓	✓	Special	✓	✓	✓
'I'	'F'	'I'	'N'	Input display	-	✓	Special	✓	✓	✓
'I'	'F'	'I'	'S'	Source display	-	✓	Special	✓	✓	✓
'I'	'F'	'R'	'H'	Horizontal Resolution display	-	✓	Numeric	✓	✓	✓
'I'	'F'	'R'	'V'	Vertical Resolution display	-	✓	Numeric	✓	✓	✓
'I'	'F'	'F'	'H'	Horizontal Frequency display (*4)	-	✓	Numeric	✓	✓	✓
'I'	'F'	'F'	'V'	Vertical Frequency display (*4)	-	✓	Numeric	✓	✓	✓
'I'	'F'	'D'	'C'	Deep Color display	-	✓	Special	✓	✓	✓
'I'	'F'	'L'	'T'	Lamp Time display	-	✓	Numeric	✓	✓	✓
'I'	'F'	'S'	'V'	Soft Version Display	-	✓	Special 14	✓	✓	✓
'I'	'F'	'C'	'I'	Calibrator Information transmission/display (*5)	✓	✓	Special3	-	-	✓
'P'	'M'	'C'	'I'	Calibrator Information transmission/display (*5)	✓	✓	Special3	-	-	✓

Command Code		Parameter 1		Function	Operation	Reference	Data type	Model		
'P'	'M'	'C'	'P'	isf Calibration Mode, Picture mode copy	✓	-	Special4	-	✓	✓
'P'	'M'	'P'	'A'	isf Calibration Mode, Picture mode paste	✓	-	Special4	-	✓	✓
'P'	'M'	'S'	'V'	isf Calibration Mode, Picture mode save (*6)	-	✓	Special5	-	✓	✓
'P'	'M'	'L'	'D'	isf Calibration Mode, Picture mode load (*7)	✓	-	Special5	-	✓	✓
'P'	'M'	'T'	'H'	THX Adjustment Mode switch	✓	✓	Special	-	-	✓
'T'	'H'	'C'	'P'	THX Adjustment Mode, Picture mode copy	✓	-	Special6	-	-	✓
'T'	'H'	'P'	'A'	THX Adjustment Mode, Picture mode paste	✓	-	Special6	-	-	✓
'T'	'H'	'S'	'V'	THX Adjustment Mode, Picture mode save (*8)	-	✓	Special7	-	-	✓
'T'	'H'	'L'	'D'	THX Adjustment Mode, Picture mode load (*9)	✓	-	Special7	-	-	✓

Always available regardless of the adjustment mode except Picture mode is isf-DAY/ isf-NIGHT/ THX-Bright /THX-Dark.

(*1) Only the parameter that follows Picture Mode is effective. (Refer to the table of Picture Mode vs. Color Profile that described in “Color Profile” section of Functional Spec.)

[Example] Picture Mode = Natural Video(0x38) -> Accepted, Anime1(0x36) -> Rejected

Picture Mode = Film Film1(0x31) -> Accepted, Standard(0x33) -> Rejected

If the corresponded parameter is only one, PJ ignores setting command.

(*2) Setting operations of Mask Left / Right / Top / Bottom [ISML, ISMR, ISMT, ISMB] command are only effective when Mask Setting [ISMA] is set to “Custom”.

(*3) Because of electrical limitation, only one motor can be driven at the same time.

If the projector receives a motor drive request when other motor is driving, the projector rejects its request.

When a driving motor reaches its limit, the projector stops the motor automatically.

(*4) Parameter is equal to the result in which 100 is multiplied with the actual value.

[Example] When Horz. Frequency is 63.98 kHz : Parameter = 63.98 * 100 = 6398 = 0x18FE

(*5) Both commands are completely same.

(*6) Save of picture adjust mode for isf [PMSV] command is only effective when isf Adjust mode [PMIE] is Enable(0x31) or Adjust(0x32).

(*7) Load of picture adjust mode for isf [PMLD] command is only effective when isf Adjust mode [PMIE] is Adjust(0x32).

And, this command can use regardless of Picture Mode setting.

(*8) Save of picture adjust mode for THX [THSV] command is only effective when THX Adjust mode [PMTH] is Enable(0x31) or Adjust(0x32).

(*9) Load of picture adjust mode for THX [THLD] command is only effective when THX Adjust mode [PMTH] is Adjust(0x32).

And, this command can use regardless of Picture Mode setting.

(*10) Effective when THX Mediadirector switch is On(0x31)

Parameter2

Parameter2 data depends on Sub command.

Data length is as follow depending on Sub command.

Data type	Data length	Note
Numeric	4 bytes	ASCII character
Special	1 byte	ASCII character
Special2	512 bytes	Binary data(for Gamma)
Special3	18 bytes	ASCII character (Information for Calibrator)
Special4	2 bytes	ASCII character
Special5	384 bytes	Binary data
Special6	2 bytes	ASCII character
Special7	384 bytes	Binary data
Special9	1 byte(operation) /3 byte (reference)	ASCII character
Special10	10 bytes	ASCII character
Special11	2 bytes	ASCII character
Special12	2 bytes	ASCII character
Special13	2 bytes	ASCII character
Special14	6 bytes	ASCII character

- ◆ When the projector is not powered on and it receives the command, the projector ignores the command and does not respond.

Special data

- isf Adjustment Mode Data

Table 4-27 isf ADJUSTMENT CMD DATA

HEX	ASCII	Operation	Comments
0x30	'0'	Invalid	<ul style="list-style-type: none"> • Factory default • No possible to set "isf-DAY", "isf-NIGHT" in Picture Mode • Invalid "isf-DAY", "isf-NIGHT" on OSD • Make Save[PMSV] /Lord [PMLD] in Picture Mode, invalid.
0x31	'1'	Valid	<ul style="list-style-type: none"> • Possible to set "isf-DAY", "isf-NIGHT" in Picture Mode • Valid "isf-DAY", "isf-NIGHT" on OSD • Invalid member in Picture Mode (contrast, etc.) • Make Save[PMSV] / Load [PMLD] in Picture Mode, valid.
0x32	'2'	Adjust	<ul style="list-style-type: none"> • Possible to set "isf-DAY", "isf-NIGHT" in Picture Mode • Valid "isf-DAY", "isf-NIGHT" on OSD • Valid member in Picture Mode (contrast, etc.) • Make Save[PMSV] / Load [PMLD] in Picture Mode, valid.

- ※ In "isf-DAY" or "isf-NIGHT" mode, when isf Adjustment Mode is switched from "Valid" to "Invalid", Picture Mode is switched to "Natural".

When Picture Mode is other than "isf-DAY" or "isf-NIGHT", Picture Mode does not change.

• THX Adjustment Mode Data

Table 4-28 THX ADJUSTMENT CMD DATA

HEX	ASCII	Operation	Comments
0x30	'0'	Invalid	<ul style="list-style-type: none"> • Factory default • No possible to set "THX-Bright", "THX-Dark" in Picture Mode • Invalid "THX-Bright", "THX-DARK" on OSD • Make Save[THSV] / Lord [THLD] in Picture Mode, invalid.
0x31	'1'	Valid	<ul style="list-style-type: none"> • Possible to set "THX-Bright", "THX-Dark" in Picture Mode • Valid "THX-Bright", "THX-Dark" on OSD • Invalid member in Picture Mode (contrast, etc.) • Make Save[THSV] / Load [THLD] in Picture Mode, valid.
0x32	'2'	Adjust	<ul style="list-style-type: none"> • Possible to set "THX-Bright", "THX-Dark" in Picture Mode • Valid "THX-Bright", "THX-Dark" on OSD • Valid member in Picture Mode (contrast, etc.) • Make Save[THSV] / Load [THLD] in Picture Mode, valid.

※ In "THX-Bright" or "THX-Dark" mode, when THX Adjustment Mode is switched from "Valid" to "Invalid", Picture Mode is switched to "Natural".

When Picture Mode is other than "THX-Bright" or "THX-Dark", Picture Mode does not change.

• Color Temp. Table Data

Table 4-31 COLOR TEMP. TABLE CMD DATA

HEX	ASCII	Operation
0x30	'0'	5500K
0x31	'1'	6000K
0x32	'2'	6500K
0x33	'3'	7000K
0x34	'4'	7500K
0x35	'5'	8000K
0x36	'6'	8500K
0x37	'7'	9000K
0x38	'8'	9500K
0x39	'9'	High Bright
0x41	'A'	Custom1
0x42	'B'	Custom2
0x43	'C'	Custom3
0x44	'D'	Xenon1
0x45	'E'	Xenon2
0x46	'F'	Xenon3

• Color Temp. Correction Data

Table 4-32 COLOR TEMP. CORRECTION CMD DATA

HEX	ASCII	Operation
0x30	'0'	5500K
0x31	'1'	6000K
0x32	'2'	6500K
0x33	'3'	7000K
0x34	'4'	7500K
0x35	'5'	8000K
0x36	'6'	8500K
0x37	'7'	9000K
0x38	'8'	9500K
0x39	'9'	High Bright
0x41	'A'	Xenon1
0x42	'B'	Xenon2
0x43	'C'	Xenon3

- Gamma Data

Table 4-33 GAMMA CMD DATA

HEX	ASCII	Operation
0x30	'0'	Normal
0x31	'1'	A
0x32	'2'	B
0x33	'3'	C
0x34	'4'	Custom1
0x35	'5'	Custom2
0x36	'6'	Custom3
0x37	'7'	D
0x38	'8'	Normal(3D)
0x39	'9'	Bright(3D)
0x41	'A'	Film1
0x42	'B'	Film2
0x43	'C'	Film3
0x44	'D'	Film4

- Gamma Correction Data

Table 4-34 GAMMA CORRECTION CMD DATA

HEX	ASCII	Operation
0x30	'0'	Normal
0x31	'1'	A
0x32	'2'	B
0x33	'3'	C
0x34	'4'	D
0x35	'5'	1.8
0x36	'6'	1.9
0x37	'7'	2.0
0x38	'8'	2.1
0x39	'9'	2.2
0x41	'A'	2.3
0x42	'B'	2.4
0x43	'C'	2.5
0x44	'D'	2.6

- BNR Data

Table 4-35 BNRCMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Color Management Data

Table 4-36 COLOR MANAGEMENT CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	Custom1
0x32	'2'	Custom2
0x33	'3'	Custom3

- CMS Display Color Data

Table 4-37 CMS DISPLAY COLOR CMD DATA

HEX	ASCII	Operation
0x30	'0'	All Color
0x31	'1'	Select Color

- Clear Motion Drive Data

Table 4-38 CLEAR MOTION DRIVE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	Mode 1
0x32	'2'	Mode 2
0x33	'3'	Mode 3
0x34	'4'	Mode 4
0x35	'5'	Inverse Telecine

- CMD Demo Data

Table 4-39 CMD DEMO CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	Left
0x32	'2'	Right
0x33	'3'	Top
0x34	'4'	Bottom

- Lamp Power Data

Table 4-40 LAMP POWER CMD DATA

HEX	ASCII	Operation
0x30	'0'	Normal
0x31	'1'	High

- Color Space Data

Table 4-41 COLOR SPACE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Standard
0x31	'1'	Wide1
0x32	'2'	Wide2

- HDMI Input Level Data

Table 4-42 HDMI INPUT LEVEL CMD DATA

HEX	ASCII	Operation
0x30	'0'	Standard
0x31	'1'	Enhanced
0x32	'2'	Super White

- HDMI Level CHK Data

Table 4-43 HDMI LEVEL CHK CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- HDMI Color Space Data

Table 4-44 HDMI COLOR SPACE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Auto
0x31	'1'	YCbCr(4:4:4)
0x32	'2'	YCbCr(4:2:2)
0x33	'3'	RGB

- HDMI CEC Data

Table 4-45 HDMI CEC CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- HDMI 2D/3D Data

Table 4-46 HDMI 2D/3D CMD DATA

HEX	ASCII	Operation
0x30	'0'	2D
0x31	'1'	Auto
0x33	'3'	Side By Side
0x34	'4'	Top and Bottom

- HDMI 3D Phase Data

Table 4-47 HDMI 3D Phase CMD DATA

HEX	ASCII	Operation
0x30	'0'	Standard
0x31	'1'	Flip

- COMP. Color Space Data

Table 4-48 COMP. COLOR SPACE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Y Pb/Cb Pr/Cr
0x31	'1'	RGB

- PC Auto Alignment Data

Table 4-49 PC AUTO ALIGNMENT CMD DATA

HEX	ASCII	Operation
0x30	'0'	Execute

- Aspect Data

Table 4-50 ASPECT CMD DATA

HEX	ASCII	Operation
0x30	'0'	4:3
0x31	'1'	16:9
0x32	'2'	Zoom
0x33	'3'	Auto
0x34	'4'	Just
0x35	'5'	Full

- Mask Data

Table 4-51 MASK CMD DATA

HEX	ASCII	Operation
0x30	'0'	2.5%
0x31	'1'	5%
0x32	'2'	Off
0x33	'3'	Custom

- Film Mode Data

Table 4-52 FILM MODE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	Auto

- 3D Conversion Switch Data

Table 4-54 3D CONVERSION CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- 3D Sub title adjustment Data

Table 4-55 3D SUB TITLE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Lens Control(Focus Near, Focus Far, Zoom Tele, Zoom Wide, Shift Left, Shift Right, Shift Up, Shift Down) Data

Table 4-57 LENS CONTROL (Focus / Zoom / Shift) CMD DATA

HEX	ASCII	Operation
0x30	'0'	Stop
0x31	'1'	Start

- Lens Cover Data

Table 4-58 LENS COVER CMD DATA

HEX	ASCII	Operation
0x30	'0'	Auto
0x31	'1'	Open

- Lens Image Pattern Data

Table 4-59 IMAGE PATTERN CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Lens Lock Data

Table 4-60 LENS LOCK CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Lens Memory Load Data

Table 4-61 LENS MEMORY LOAD CMD DATA

HEX	ASCII	Operation
0x30	'0'	Memory1
0x31	'1'	Memory2
0x32	'2'	Memory3

- Installation Style Data

Table 4-62 INSTALLATION STYLE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Front
0x31	'1'	Ceiling Mount (F)
0x32	'2'	Rear
0x33	'3'	Ceiling Mount (R)

- Anamorphic Data

Table 4-63 ANAMORPHIC CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	A
0x32	'2'	B

- Screen Adjust Data (for X30/XC388/RS45 and RS4800)

Table 4-64 SCREEN ADJUST CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	A
0x32	'2'	B
0x33	'3'	C

- Panel Alignment Switch Data

Table 4-65 PANEL ALIGNMENT CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Back Color Data

Table 4-66 BACK COLOR CMD DATA

HEX	ASCII	Operation
0x30	'0'	Blue
0x31	'1'	Black

- Menu Position Data

Table 4-67 MENU POSITION CMD DATA

HEX	ASCII	Operation
0x30	'0'	Left-Top
0x31	'1'	Right-Top
0x32	'2'	Center
0x33	'3'	Left-Bottom
0x34	'4'	Right-Bottom

- Menu Display Data

Table 4-68 MENU DISPLAY CMD DATA

HEX	ASCII	Operation
0x30	'0'	15sec
0x31	'1'	On

- Line Display Data

Table 4-69 LINE DISPLAY CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	5sec

- Source Display Data

Table 4-70 SOURCE DISPLAY CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Logo Data

Table 4-72 LOGOCMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Language Data

Table 4-73 LANGUAGE CMD DATA

HEX	ASCII	Operation
0x30	'0'	日本語
0x31	'1'	English
0x32	'2'	Deutsch
0x33	'3'	Español
0x34	'4'	Italiano
0x35	'5'	Français
0x36	'6'	Português
0x37	'7'	Nederlands
0x38	'8'	Svenska
0x39	'9'	Norsk
0x41	'A'	Русский
0x42	'B'	中文

- Trigger Data

Table 4-74 TRIGGER CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On(Power)
0x32	'2'	On(Anamo)

- Off Timer Data

Table 4-75 OFF TIMER CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	1 Hour
0x32	'2'	2 Hours
0x33	'3'	3 Hours
0x34	'4'	4 Hours

- High Altitude Mode Data

Table 4-76 HIGH ALTITUDE MODE CMD DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

- Input Data

Table 4-77 INPUT CMD DATA

HEX	ASCII	Operation
0x32	'2'	COMP
0x33	'3'	PC * Only X70/XC788/RS55, X90/XC988/RS65
0x36	'6'	HDMI-1
0x37	'7'	HDMI-2

- Source Data

Table 4-78 SOURCE CMD DATA

HEX	ASCII	Operation
0x30	'0'	480i
0x31	'1'	576i
0x32	'2'	480p
0x33	'3'	576p
0x34	'4'	720p50
0x35	'5'	720p60
0x36	'6'	1080i50
0x37	'7'	1080i60
0x38	'8'	1080p24
0x39	'9'	1080p50
0x41	'A'	1080p60
0x42	'B'	No signal
0x43	'C'	720p 3D
0x44	'D'	1080i 3D
0x45	'E'	1080p 3D

- Deep Color Data

Table 4-79 DEEP COLOR CMD DATA

HEX	ASCII	Operation
0x30	'0'	8 bit
0x31	'1'	10 bit
0x32	'2'	12 bit

Special2 Data

This is the same as Gamma data [GammaRed, Green, Blue] of Gamma table "Custom 1/2/3".

Special3 Data

This is the same as Model Status Asking [MoDel].

Special4 Data

For copying isf adjustment data, a table by terminal and picture mode is specified.

Table 4-81 COPY CMD DATA FOR ISF

HEX		ASCII		Operation
0x30	0x30	'0'	'0'	isf-DAY_HDMI1
0x30	0x31	'0'	'1'	isf-DAY_HDMI2
0x30	0x32	'0'	'2'	isf-DAY_Comp
0x30	0x35	'0'	'5'	isf-DAY_PC ^(*)
0x31	0x30	'1'	'0'	isf-NIGHT_HDMI1
0x31	0x31	'1'	'1'	isf-NIGHT_HDMI2
0x31	0x32	'1'	'2'	isf-NIGHT_Comp
0x31	0x35	'1'	'5'	isf-NIGHT_PC ^(*)

(*1) Not used on RS4800 models.

Special5 Data

All isf-Day/NIGHT data except Gamma.

37(Adjust Item 1) × 2(Picture Mode) × 4(Terminal) + 138(Color Temp. /Col. Management) + 78 (Reserved) = 512 byte

Adjust Item 1
Color Profile(1) ^(*)
Tone White(2) ^(*)
Tone Red(2) ^(*)
Tone Green(2) ^(*)
Tone Blue(2) ^(*)
Contrast(2)
Brightness(2)
Color(2)
Tint(2)
Sharpness(2)
Detail Enhance(2)
RNR(2)
MNR(2)
BNR(1)
Bright Level(2) ^(*)
Dark Level(2) ^(*)
Color Space(1) ^(*)
Clear Motion Drive(1)
Lens Aperture(2)
Lamp Power(1)
MPC Level (2)

Picture Mode
isf-DAY
isf-NIGHT

Terminal
HDMI1
HDMI2
Comp.
PC ^(*)

Adjust Item 2 (Color Temp. /Color Management)
Color Temp. Correction(1) × Picture Mode(2) = 2
Gain(R/G/B) (3x2) × Picture Mode(2) = 12
Offset(R/G/B) (3x2) × Picture Mode(2) = 12
Adjust Area(R/G/B/C/M/Y/O) (7x2) × Picture Mode(2) = 28 ^(*)
Hue(R/G/B/C/M/Y/O) (7x2) × Picture Mode(2) = 28 ^(*)
Sat(R/G/B/C/M/Y/O) (7x2) × Picture Mode(2) = 28 ^(*)
Bright(R/G/B/C/M/Y/O) (7x2) × Picture Mode(2) = 28 ^(*)

These data are aligned by little endian.

(*1) Not used on RS4800 models although described here to keep memory map matching.

(*2) Not used on X70/XC788/RS55, X90/XC988/RS65 models although described here to keep memory map Matching.

Special6 Data

For copying THX adjustment data, a table by terminal and picture mode is specified.

Table 4-82 COPY CMD DATA FOR THX

HEX		ASCII		Operation
0x32	0x30	'2'	'0'	THX-BRIGHT_HDMI1
0x32	0x31	'2'	'1'	THX-BRIGHT_HDMI2
0x32	0x32	'2'	'2'	THX-BRIGHT_Comp
0x32	0x35	'2'	'5'	THX-BRIGHT_PC
0x33	0x30	'3'	'0'	THX-DARK_HDMI1
0x33	0x31	'3'	'1'	THX-DARK_HDMI2
0x33	0x32	'3'	'2'	THX-DARK_Comp
0x33	0x35	'3'	'5'	THX-DARK_PC

Special7 Data

All THX-Bright / THX-Dark Data except Gamma.

$37(\text{Adjust Item 1}) \times 2(\text{Picture Mode}) \times 4(\text{Terminal}) + 138(\text{Color Temp. /Col. Management}) + 78(\text{Reserved}) = 512 \text{ byte}$

Adjust Item 1
Color Profile(1) ^(*)
Gamma Shift White(2)
Gamma Shift Red(2)
Gamma Shift Green(2)
Gamma Shift Blue(2)
Contrast(2)
Brightness(2)
Color(2)
Tint(2)
Sharpness(2)
Detail Enhance(2)
RNR(2)
MNR(2)
BNR(1)
Bright Level(2)
Dark Level(2)
Color Space(1) ^(*)
Clear Motion Drive(1)
Lens Aperture(2)
Lamp Power(1)
MPC Level (2)

Picture Mode
THX-Bright
THX-Dark

Terminal
HDMI1
HDMI2
Comp.
PC

Adjust Item 2 (Color Temp./Color Management)
Color Temp. Correction(1) x Picture Mode(2) = 2
Gain(R/G/B) (3x2)x Picture Mode(2) = 12
Offset(R/G/B) (3x2)x Picture Mode(2) = 12
Adjust Area(R/G/B/C/M/Y/O) (7x2)x Picture Mode(2) = 28
Hue(R/G/B/C/M/Y/O) (7x2)x Picture Mode(2) = 28
Sat(R/G/B/C/M/Y/O) (7x2)x Picture Mode(2) = 28
Bright(R/G/B/C/M/Y/O) (7x2)x Picture Mode(2) = 28

These data are aligned by little endian.

(*) it is described for compatibility with isf-DAY / isf-NIGHT (Special5). Not used actually.

Special9 Data

Parameter relating to save lens memory. Parameter format and meanings are depend on <Operation.> and <Reference.>.

<Operation.>

Table 4-83 LENS MEMORY SAVE CMD DATA<operation.>

HEX	ASCII	operation
0x30	'0'	Memory1
0x31	'1'	Memory2
0x32	'2'	Memory3

<Reference.>

Saved condition on Memory1/2/3 (Either Not-Saved / saved) is returned with 1 byte each. 3 bytes in Total are returned.

Table 4-84 LENS MEMORY SAVE CMD DATA<Reference.>

HEX	ASCII	Operation
0x30	'0'	Not- Saved
0x31	'1'	Saved

Special10 Data

Parameter relating to editing names of Lens Memory 1/2/3 and User 1/2/3 in Picture Mode. 10 Byte ASCII characters. Communication format is same as Calibrator information transmission/display [PMC].

Special 11 Data

Assign Color Profile.

Table 4-85 COLORPROFILE CMD DATA

HEX		ASCII		Operation	Comments
0x30	0x30	'0'	'0'	Off	
0x30	0x31	'0'	'1'	Film1	
0x30	0x32	'0'	'2'	Film2	
0x30	0x33	'0'	'3'	Standard	
0x30	0x34	'0'	'4'	Cinema1	
0x30	0x35	'0'	'5'	Cinema2	
0x30	0x36	'0'	'6'	Anime1	
0x30	0x37	'0'	'7'	Anime2	
0x30	0x38	'0'	'8'	Video	
0x30	0x39	'0'	'9'	Vivid	
0x30	0x41	'0'	'A'	Adobe	
0x30	0x42	'0'	'B'	Stage	
0x30	0x43	'0'	'C'	3D	
0x30	0x44	'0'	'D'	THX	
0x30	0x45	'0'	'E'	Custom1	For X70/XC788/RS55 X90/XC988/RS65
0x30	0x46	'0'	'F'	Custom2	For X70/XC788/RS55 X90/XC988/RS65
0x31	0x30	'1'	'0'	Custom3	For X70/XC788/RS55 X90/XC988/RS65
0x31	0x31	'1'	'1'	Custom4	For X70/XC788/RS55 X90/XC988/RS65
0x31	0x32	'1'	'2'	Custom5	For X70/XC788/RS55 X90/XC988/RS65

Special12 Data

Specify Picture Mode.

Table 4-86 PICTURE MODE CMD DATA

HEX		ASCII		Operation	Comments
0x30	0x30	'0'	'0'	Film	
0x30	0x31	'0'	'1'	Cinema	
0x30	0x32	'0'	'2'	Animation	
0x30	0x33	'0'	'3'	Natural	
0x30	0x34	'0'	'4'	Stage	
0x30	0x35	'0'	'5'		Reserved
0x30	0x36	'0'	'6'	THX	
0x30	0x37	'0'	'7'	isf-Day	Possible to select only when isf Adjustment mode is "Operative" and "Adjust". For RS4800, X70/XC788/RS55 and X90/XC988/RS65
0x30	0x38	'0'	'8'	isf-Night	Possible to select only when isf Adjustment mode is "Operative" and "Adjust". For RS4800, X70/XC788/RS55 and X90/XC988/RS65
0x30	0x39	'0'	'9'	THX-Bright	Possible to select only when THX Adjustment mode is "Operative" and "Adjust". For RS4800, X70/XC788/RS55 and X90/XC988/RS65
0x30	0x41	'0'	'A'	THX-Dark	Possible to select only when THX Adjustment mode is "Operative" and "Adjust". For RS4800, X70/XC788/RS55 and X90/XC988/RS65
0x30	0x42	'0'	'B'	3D	
0x30	0x43	'0'	'C'	User1	
0x30	0x44	'0'	'D'	User2	
0x30	0x45	'0'	'E'	User3	
0x30	0x46	'0'	'F'	User4	
0x31	0x30	'1'	'0'	User5	

Special14 Data

Data Length: 6

2 byte +0x2D ('-') +3 byte

4.13.1 Operation

Use the command as shown in the following examples.

(Example 1) Switching isf Adjustment Mode

Purpose: Validate isf Table, "isf-DAY", "isf-NIGHT"

(1) Transmitting Data from External controller to Projector as follows.

1: External Controller →								
0x21	0x89	0x01	0x50	0x4D	0x49	0x45	0x31	0x0A
!(Operation)	PJ	Individual : 1	'P'	'M'	'I'	'E'	Valid	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) The projector makes isf table valid.

(Example 2) Contrast adjustment

Purpose: To set Contrast to +20.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →											
0x21	0x89	0x01	0x50	0x4D	0x43	0x4E	0x30	0x30	0x31	0x34	0x0A
!(Operation)	PJ	Individual : 1	'P'	'M'	'C'	'N'	'0'	'0'	'1'	'4'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) The projector sets the contrast to +20.

(Example 3) Gamma adjustment

Purpose: To transmit gamma data of red to the projector.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x21	0x89	0x01	0x50	0x4D	0x44	0x52	0x0A
!(Operation)	PJ	Individual : 1	'P'	'M'	'D'	'R'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) The external controller sends 512 bytes binary data to the projector.

3: External controller →	
512 byte	
Data parameter	

(4) If the projector receives data (3) above and receipt was normal, an ACK is returned from the projector as follows.

4: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(Example 4) Input Calibrator information

Purpose: Set Calibrator information “JVC N.T”

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x21	0x89	0x01	0x50	0x4D	0x43	0x49	0x0A
!(Operation)	PJ	Individual : 1	'P'	'M'	'C'	'I'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) Transmit 18 Byte ASCII data from External Controller to the projector

Parameter																	
0x4A	0x56	0x43	0x20	0x4E	0x2E	0x54	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20
'J'	'V'	'C'	SP	'N'	'.'	'T'	SP	SP	SP	SP	SP	SP	SP	SP	SP	SP	SP

(4) If the projector receives the data (3) above and the command receipt is normal, an ACK is returned from the projector as follows.

4: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(Example 5) Picture Mode Copy

Purpose: Copying isf-DAY Picture Data in HDMI-2 terminal to isf-NIGHT Picture Data in PC terminal.

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →									
0x21	0x89	0x01	0x50	0x4D	0x43	0x50	0x30	0x31	0x0A
! (Operation)	PJ	individual : 1	'P'	'M'	'C'	'P'	isf-DAY	HDMI-2	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	individual : 1	'P'	'M'	End

(3) The projector sets original Picture data isf-DAY in HDMI-2 terminal.

(4) Transmit the data from the external controller to the projector as follows.

3: External Controller →									
0x21	0x89	0x01	0x50	0x4D	0x50	0x41	0x31	0x33	0x0A
! (Operation)	PJ	individual : 1	'P'	'M'	'P'	'A'	isf-NIGHT	PC	End

(5) If the projector receives the data (3) above and the command receipt is normal, an ACK is returned from the projector as follows.

4: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	individual : 1	'P'	'M'	End

(6) The projector pastes original Picture Data to isf-NIGHT in PC terminal.

※ **Initial Table Value of copy source is “isf-DAY of HDMI-1 terminal”.**

In another words, when PMPA command is received without receiving any of PMCP commands, “isf-DAY of HDMI-1 terminal” is set as the Picture Data in copy source.

The communication format described above is used in following commands.

- Picture Mode Copy (for isf adjustment mode) [PMCP]
- Picture Mode Copy (for THX adjustment mode) [THCP]

(Example 6) Transmit Saved Data to PJ

Purpose: Transmit All Picture Data (except Gamma) to PJ

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x21	0x89	0x01	0x50	0x4D	0x4C	0x44	0x0A
!' (Operation)	PJ	Individual : 1	'P'	'M'	'L'	'D'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) Transmit 512 Byte Binary data from External Controller to the projector

3: External Controller →	
512 byte	
Data parameter	

(4) If the projector receives the data (3) above and the command receipt is normal, an ACK is returned from the projector as follows.

4: ←Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(5) The projector saves All received Picture Data to EEPROM in PJ.

4.13.2 Reference

Use the command as shown in the following examples.

(Example1) Confirm Picture Mode

Purpose: To Confirm Current Picture Mode (Picture Mode: isf-DAY)

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x3F	0x89	0x01	0x50	0x4D	0x50	0x4D	0x0A
'?'(Reference)	PJ	Individual : 1	'P'	'M'	'P'	'M'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) Then, the projector transmits Picture Mode to the External Controller.

3: ← Projector							
0x40	0x89	0x01	0x50	0x4D	0x30	0x37	0x0A
'@'(Reference)	PJ	Individual: 1	'P'	'M'	isf-Day		End

By the above exchange, it can be confirmed that the projector's Picture Mode is isf-DAY.

(Example 2) Brightness confirmation

Purpose: To confirm the brightness. (Current brightness: -3)

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x50	0x4D	0x42	0x52	0x0A
'?'(Reference)	PJ	Individual : 1	'P'	'M'	'B'	'R'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) The projector transmits brightness setting "-3" to the external controller.

3: ← Projector									
0x40	0x89	0x01	0x50	0x4D	0x46	0x46	0x46	0x44	0x0A
'@'(Response)	PJ	Individual : 1	'P'	'M'	'F'	'F'	'F'	'D'	End

By the above exchange, it can be confirmed that the projector's brightness is set to "-3".

(Example 3) Gamma confirmation

Purpose: To confirm the Green gamma data.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x50	0x4D	0x44	0x47	0x0A
'?'(Reference)	PJ	Individual : 1	'P'	'M'	'D'	'G'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual : 1	'P'	'M'	End

(3) The projector transmits 512 bytes binary data to the external controller.

(Example 4) Receive All Picture Data from PJ

Purpose: To Receive All Picture Data (except Gamma) from PJ

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x3F	0x89	0x01	0x50	0x4D	0x53	0x56	0x0A
'?' (Reference)	PJ	Individual: 1	'P'	'M'	'S'	'V'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual:1	'P'	'M'	End

(3) Then, the Projector transmits 512 bytes binary data to the external controller.

(Example 5) Confirm Calibrator Information

Purpose: To Confirm Calibrator Information

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x3F	0x89	0x01	0x50	0x4D	0x43	0x49	0x0A
'?' (Reference)	PJ	Individual:1	'P'	'M'	'C'	'I'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x50	0x4D	0x0A
ACK	PJ	Individual:1	'P'	'M'	End

(3) Then, the projector transmits 18 Bytes ASCII Data to the external controller.

3: ←Projector																	
0x4A	0x56	0x43	0x20	0x4E	0x2E	0x54	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20	0x20
'J'	'V'	'C'	SP	'N'	'.'	'T'	SP	SP	SP	SP	SP	SP	SP	SP	SP	SP	SP

By the above exchange, it can be confirmed that the calibrator information is "JVC N.T".

The communication format described above is used in following commands.

- Calibrator Information (Send / Receive) [IFCI]
- Calibrator Information (Send / Receive) [PMCI]
- Serial Number [SSSN]

(Example 6) Confirm Software Version

Purpose: Confirm Software Version

(1) Transmit the data from the external controller to the projector as follows.

1: External Controller →							
0x3F	0x89	0x01	0x49	0x46	0x53	0x56	0x0A
'?' (Reference)	PJ	Individual:1	'I'	'F'	'S'	'V'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x49	0x46	0x0A
ACK	PJ	Individual : 1	'I'	'F'	End

(3) Then, the Projector transmits Software version to the external controller.

3: ←Projector											
0x06	0x89	0x01	0x49	0x46	0x30	0x33	0x2D	0x30	0x30	0x35	0x0A
ACK	PJ	Individual : 1	'I'	'F'	'0'	'3'	'_'	'0'	'0'	'5'	End

By the above exchange, it can be confirmed that the Software version is "03.005".

4.14 LAN setup [Lan Setup]

Used to setup LAN configuration.

Command code

Table 4-88 LAN SETUP CMD

HEX		ASCII		Function
0x4C	0x53	'L'	'S'	LAN setup [Lan Setup]

Parameter1

Data length: No regulation

Sub command table (Mandatory command only)

Table 4-89 LAN SETUP CMD SUB

HEX		ASCII		Function	Last memory	Operation	Reference
0x44	0x53	'D'	'S'	DHCP Client setting	Yes	✓	✓
0x49	0x50	'I'	'P'	IP Address setting	Yes	✓ (When 'DHCP Client' is Off.)	✓
0x53	0x4D	'S'	'M'	Subnet Mask setting	Yes	✓ (When 'DHCP Client' is Off.)	✓
0x44	0x47	'D'	'G'	Default Gateway setting	Yes	✓ (When 'DHCP Client' is Off.)	✓
0x4D	0x41	'M'	'A'	MAC Address setting	Yes	-	✓
0x52	0x53	'R'	'S'	Network reboot	No	✓	-
0x50	0x54	'P'	'T'	Port setting	Yes	✓	✓

- It consists of "Sub command" + "setting". Sub command consists of ASCII character 2 bytes.

Parameter2

Sub command parameters are as follows.

Parameters when Sub command is [0x44,0x53]: Data length 1

Table 4-90 DHCP Client

HEX	ASCII	Operation
0x30	'0'	Off(Static)
0x31	'1'	On

Parameters when Sub command is [0x49,0x50] [0x53,0x4D] [0x44,0x47]: Data length 8

Parameters when Sub command is [0x4D,0x41]: Data length 12

Parameters when Sub command is [0x52,0x53]: Data length 1

Table 4-91 NETWORK RESTART

HEX	ASCII	Operation
0x31	'1'	Network Restart

Parameters when Sub command is [0x50,0x54]: Data length 4

4.14.1 Operation

Use the command as shown in the following examples.

(Example1) DHCP Client setting

Purpose: To set DHCP Client to On.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →								
0x21	0x89	0x01	0x4C	0x53	0x44	0x53	0x31	0x0A
!(Operation)	PJ	Individual : 1	'L'	'S'	'D'	'S'	On	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector set DHCP Client to On.

(Example2) IP Address setting

Purpose: To set IP Address to 192.168.1.10.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →															
0x21	0x89	0x01	0x4C	0x53	0x49	0x50	0x43	0x30	0x41	0x38	0x30	0x31	0x30	0x41	0x0A
!(Operation)	PJ	Individual : 1	'L'	'S'	'I'	'P'	192(=0xC0)	168(=0xA8)	1(=0x01)	10(=0x0A)					End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector saves "192.168.1.10." to IP Address. (Valid after network reboot)

(Example3) Network reboot

To reboot Network

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →								
0x21	0x89	0x01	0x4C	0x53	0x52	0x53	0x31	0x0A
!(Operation)	PJ	Individual : 1	'L'	'S'	'R'	'S'	Execute	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector reboots the Network.

(Example4) Port setting

Purpose: To set the Port to 10000(=0x2710).

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →											
0x21	0x89	0x01	0x4C	0x53	0x50	0x54	0x32	0x37	0x31	0x30	0x0A
'!(Operation)	PJ	Individual : 1	'L'	'S'	'P'	'T'	10000(=0x2710)				End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector saves 10000 to the Port. (No matter what the Network reboot)

4.14.2 Reference

Use the command as shown in the following examples.

(Example1) DHCP Client confirmation

Purpose: To confirm DHCP Client.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x4C	0x53	0x44	0x53	0x0A
'?(Reference)	PJ	Individual : 1	'L'	'S'	'D'	'S'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector transmits DHCP Client to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x4C	0x53	0x30	0x0A
'@(Response)	PJ	Individual : 1	'L'	'S'	Off	End

By the exchange above, it can be confirmed that the projector DHCP Client is set to Off.

(Example2) MAC Address confirmation

Purpose: To confirm the current MAC Address.

(1) Transmit the data from the external controller to the projector as follows.


1: External controller →							
0x3F	0x89	0x01	0x4C	0x53	0x4D	0x41	0x0A
'?(Reference)	PJ	Individual : 1	'L'	'S'	'M'	'A'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector transmits MAC Address to the external controller.

3: ← Projector				
0x40	0x89	0x01	0x4C	0x53
'@(Response)	PJ	Individual : 1	'L'	'S'

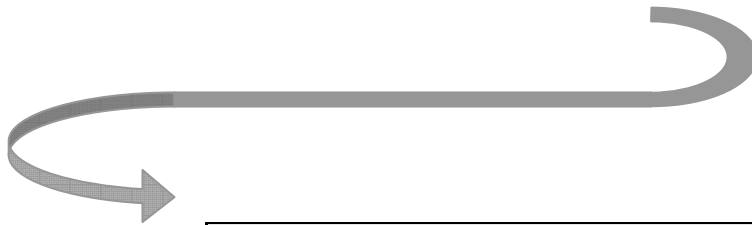

MAC Address												
0x30	0x30	0x38	0x30	0x38	0x38	0x31	0x32	0x33	0x34	0x35	0x56	0x0A
00	80	88	12	34	56	End						

By the above exchange, it can be confirmed that the projector's MAC Address is set to "00:80:88:12:34:56".

(Example3) Port confirmation

Purpose: To confirm the current Port.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x4C	0x53	0x50	0x54	0x0A
'?(Reference)	PJ	Individual : 1	'L'	'S'	'P'	'T'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x4C	0x53	0x0A
ACK	PJ	Individual : 1	'L'	'S'	End

(3) The projector transmits Port to the external controller.

3: ← Projector									
0x40	0x89	0x01	0x4C	0x53	0x35	0x30	0x34	0x41	0x0A
'@(Response)	PJ	Individual : 1	'L'	'S'	20554(=504A)				End

By the above exchange, it can be confirmed that the projector's port is set to 20554(=0x504A).

4.15 Service setup [Service Setup]

Used to change the service setting.

Command code

Table 4-92 SERVICE SETUP CMD

HEX		ASCII		Function
0x53	0x53	'S'	'S'	Service setting [Service Setup]

Parameter1

Data length: No regulation

Sub command table (Mandatory command only)

Table 4-93 SERVICE SETUP CMD SUB

HEX		ASCII		Function	Data type	Last memory	Operation	Reference
0x4C	0x54	'L'	'T'	Lamp time reset/reference (Reset is available only at Standby mode)	Special1	No	✓	✓
0x4C	0x53	'L'	'S'	Lamp accumulated time reset/reference (Reset is available only at Standby mode)	Special1	No	✓	✓
0x53	0x54	'S'	'T'	System Time reset/reference (Reset is available only at Standby mode)	Special1	No	✓	✓
0x54	0x50	'T'	'P'	Test Pattern for adjustment	Special2	No	✓	✓
0x46	0x52	'F'	'R'	Flat Pattern level (Red) adjustment	Numeric	Yes	✓	✓
0x46	0x47	'F'	'G'	Flat Pattern level (Green) adjustment	Numeric	Yes	✓	✓
0x46	0x42	'F'	'B'	Flat Pattern level (Blue) adjustment	Numeric	Yes	✓	✓
0x49	0x54	'I'	'T'	Internal Temperature reference	Numeric	No	–	✓
0x45	0x54	'E'	'T'	Outside Temperature reference	Numeric	No	–	✓
0x53	0x56	'S'	'V'	Adjustment Data save	Special3	No	–	✓
0x4C	0x44	'L'	'D'	Adjustment Data load	Special3	No	✓	–
0x53	0x4E	'S'	'N'	Serial Number	Special4	Yes	✓	✓
0x4D	0x52	'M'	'R'	Mute (Red)(*1)	Special5	Yes	✓	✓
0x4D	0x47	'M'	'G'	Mute (Green)(*1)	Special5	Yes	✓	✓
0x4D	0x42	'M'	'B'	Mute (Blue)(*1)	Special5	Yes	✓	✓

- ♦ It consists of "Sub command" + "Setting". Sub command consists of ASCII character 2 bytes.

(*1) Do not change muting status other than specified color.

For example, keep the red mute On if you set the green mute to On when the red mute is On.

Parameter2

Parameter2 is data depending on Sub command.

Data length: Depending on Sub command as follow.

Data type	Data length	Note
Numeric	4 bytes	ASCII Character
Special1	1 byte (Reset)/6 bytes (Reference)	ASCII Character
Special2	2 bytes	ASCII Character
Special3	256 bytes	Binary Data Current Adjustment Data (except Gamma)
Special4	18 bytes	ASCII Character (Same as "Calibrator Information")
Special5	1 byte	ASCII Character

Special1 Data

<Reset>

Table 4-94 TIMER RESET

HEX	ASCII	Operation
0x31	'1'	Reset

<Reference>

Each time information is returned in data length 6 when it is referred. (unit: minutes)

Special2 Data

Table 4-95 TEST PATTERN DATA

HEX		ASCII		Operation
0x30	0x30	'0'	'0'	OFF
0x30	0x31	'0'	'1'	Color Cross Hatch
0x30	0x32	'0'	'2'	Cross Hatch (W)
0x30	0x33	'0'	'3'	ANSI Contrast
0x30	0x34	'0'	'4'	Ramp (W)
0x30	0x35	'0'	'5'	Ramp (R)
0x30	0x36	'0'	'6'	Ramp (G)
0x30	0x37	'0'	'7'	Ramp (B)
0x30	0x38	'0'	'8'	Raster (W 100%)
0x30	0x39	'0'	'9'	Raster (W 50%)
0x30	0x41	'0'	'A'	Raster (W 0%)
0x30	0x42	'0'	'B'	Raster (Red 100%)
0x30	0x43	'0'	'C'	Raster (Green 100%)
0x30	0x44	'0'	'D'	Raster (Blue 100%)
0x30	0x45	'0'	'E'	Raster (Cyan 100%)
0x30	0x46	'0'	'F'	Raster (Magenta 100%)
0x31	0x30	'1'	'0'	Raster (Yellow 100%)
0x31	0x31	'1'	'1'	Dark Level
0x31	0x32	'1'	'2'	Bright Level
0x31	0x33	'1'	'3'	Test A
0x31	0x34	'1'	'4'	Test B
0x31	0x35	'1'	'5'	Circle Matrix 1
0x31	0x36	'1'	'6'	Circle Matrix 2
0x31	0x37	'1'	'7'	Test C
0x31	0x38	'1'	'8'	Color Bar
0x31	0x39	'1'	'9'	Color Palette

Special3 Data

Table 4-96 CURRENT ADJUSTMENT DATA FOR SAVE/LOAD

Function	Model		
	X30/XC388/RS45	RS4800	X70/XC788/RS55/ X90/XC988/RS65
Picture Mode switch	✓	✓	✓
Color Profile switch	-	-	✓
Color Temperature Table switch	✓	✓	✓
Color Temperature Correction switch	✓	✓	✓
Color Temperature Gain (Red) adjustment	✓	✓	✓
Color Temperature Gain (Green) adjustment	✓	✓	✓
Color Temperature Gain (Blue) adjustment	✓	✓	✓
Color Temperature Offset (Red) adjustment	✓	✓	✓
Color Temperature Offset (Green) adjustment	✓	✓	✓
Color Temperature Offset (Blue) adjustment	✓	✓	✓
Gamma Table switch	✓	✓	✓
Gamma Correction switch	✓	✓	✓
Tone (White) adjustment	-	-	✓
Tone (Red) adjustment	-	-	✓
Tone (Green) adjustment	-	-	✓
Tone (Blue) adjustment	-	-	✓
Contrast adjustment	✓	✓	✓
Brightness adjustment	✓	✓	✓
Color adjustment	✓	✓	✓
Tint adjustment	✓	✓	✓
Sharpness adjustment	✓	✓	✓
Detail Enhancement adjustment	✓	✓	✓
RNR adjustment	✓	✓	✓
MNR adjustment	✓	✓	✓
BNR adjustment	✓	✓	✓
Bright Level adjustment	-	-	✓
Dark Level adjustment	-	-	✓
Color Management Table switch	-	-	✓
Adjust Area (Red) adjustment	-	-	✓
Adjust Area (Orange) adjustment	-	-	✓
Adjust Area (Yellow) adjustment	-	-	✓
Adjust Area (Green) adjustment	-	-	✓
Adjust Area (Cyan) adjustment	-	-	✓
Adjust Area (Blue) adjustment	-	-	✓
Adjust Area (Magenta) adjustment	-	-	✓
HUE (Red) adjustment	-	-	✓
HUE (Orange) adjustment	-	-	✓
HUE (Yellow) adjustment	-	-	✓
HUE (Green) adjustment	-	-	✓
HUE (Cyan) adjustment	-	-	✓
HUE (Blue) adjustment	-	-	✓
HUE (Magenta) adjustment	-	-	✓
SATURATION (Red) adjustment	-	-	✓
SATURATION (Orange) adjustment	-	-	✓
SATURATION (Yellow) adjustment	-	-	✓
SATURATION (Green) adjustment	-	-	✓
SATURATION (Cyan) adjustment	-	-	✓
SATURATION (Blue) adjustment	-	-	✓
SATURATION (Magenta) adjustment	-	-	✓
BRIGHTNESS (Red) adjustment	-	-	✓
BRIGHTNESS (Orange) adjustment	-	-	✓

Function	Model		
	X30/XC388/RS45	RS4800	X70/XC788/RS55/ X90/XC988/RS65
BRIGHTNESS (Yellow) adjustment	-	-	✓
BRIGHTNESS (Green) adjustment	-	-	✓
BRIGHTNESS (Cyan) adjustment	-	-	✓
BRIGHTNESS (Blue) adjustment	-	-	✓
BRIGHTNESS (Magenta) adjustment	-	-	✓
Clear Motion Drive switch	✓	✓	✓
Lens Aperture adjustment	✓	✓	✓
Lamp Power switch	✓	✓	✓
Color Space switch	✓	✓	✓
MPC Level switch	-	-	✓
HDMI Input Level switch	✓	✓	✓
HDMI Color Space switch	✓	✓	✓
HDMI CEC switch	✓	✓	✓
HDMI 2D/3D switch	✓	✓	✓
HDMI 3D Phase adjustment	✓	✓	✓
COMP. Color Space switch	✓	✓	✓
PC Tracking adjustment	-	-	✓
PC Phase adjustment	-	-	✓
Horizontal position adjustment	✓	✓	✓
Vertical position adjustment	✓	✓	✓
Aspect switch	✓	✓	✓
Mask switch	✓	✓	✓
Mask (Left) adjustment	✓	✓	✓
Mask (Right) adjustment	✓	✓	✓
Mask (Top) adjustment	✓	✓	✓
Mask (Bottom) adjustment	✓	✓	✓
Film Mode switch	✓	✓	✓
3D conversion switch	✓	✓	✓
3D Intensity switch	✓	✓	✓
3D Parallax switch	✓	✓	✓
3D Sub title adjustment switch	✓	✓	✓
Crosstalk Cancel (White) Adjust	✓	✓	✓
Crosstalk Cancel (Red) Adjust	✓	✓	✓
Crosstalk Cancel (Green) Adjust	✓	✓	✓
Crosstalk Cancel (Blue) Adjust	✓	✓	✓
Lens Cover switch	-	-	✓
Image Pattern switch	✓	✓	✓
Lens Lock switch	✓	✓	✓
Pixel Adjust (Horizontal Red) adjustment	✓	✓	✓
Pixel Adjustment (Horizontal Blue) adjustment	✓	✓	✓
Pixel Adjust (Vertical Red) adjustment	✓	✓	✓
Pixel Adjust (Vertical Blue) adjustment	✓	✓	✓
Installation Style switch	✓	✓	✓
Keystone (Horizontal) adjustment	✓	✓	✓
Keystone (Vertical) adjustment	✓	✓	✓
Anamorphic switch	✓	✓	✓
Screen Adjust switch	-	-	✓
Screen Adjust switch	✓	✓	-
Black Level adjustment	✓	✓	✓
Panel Alignment switch	-	-	✓
Back Color switch	✓	✓	✓
Menu Position switch	✓	✓	✓
Menu Display switch	✓	✓	✓
Line Display switch	✓	✓	✓
Source Display switch	✓	✓	✓

Function	Model		
	X30/XC388/RS45	RS4800	X70/XC788/RS55/ X90/XC988/RS65
Logo switch	✓	✓	✓
Language switch	✓	✓	✓
Trigger switch	✓	✓	✓
Off Timer switch	✓	✓	✓
RS-232C / LAN switch (Communication Terminal)	✓	✓	-
DHCP Client setting	✓	✓	-
IP Address setting	✓	✓	✓
Subnet Mask setting	✓	✓	✓
Default Gateway setting	✓	✓	✓
Port setting (Communication Port)	✓	✓	✓
IR Code Switch	✓	✓	✓

Special5 Data

Table 4-97 MUTE DATA

HEX	ASCII	Operation
0x30	'0'	Off
0x31	'1'	On

4.15.1 Operation

Use the command as shown in the following examples.

(Example1) Test pattern switch

Purpose: To switch Test pattern to Cross Hatch (W).

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →									
0x21	0x89	0x01	0x53	0x53	0x54	0x50	0x30	0x32	0x0A
'!(Operation)	PJ	Individual : 1	'S'	'S'	'T'	'P'	'0'	'2'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector sets the test pattern to Raster (W 100%) and the green flat pattern level to 255.

(Example2) Flat pattern level (red) adjustment

Purpose: To set the flat pattern level (red) to 255 (max).

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →											
0x21	0x89	0x01	0x53	0x53	0x46	0x47	0x30	0x30	0x46	0x46	0x0A
'!(Operation)	PJ	Individual : 1	'S'	'S'	'F'	'G'	'0'	'0'	'F'	'F'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector sets the test pattern to Raster (W 100%) and the red flat pattern level to 255.

(Example3) Lamp time reset

Purpose: To reset the lamp time.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →								
0x21	0x89	0x01	0x53	0x53	0x4C	0x54	0x31	0x0A
'!(Operation)	PJ	Individual : 1	'S'	'S'	'L'	'T'	Reset	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector reset the lamp time to 0 hour 00 minute.

(Example4) Adjustment data transmission

Purpose: To transmit the data saved in the external controller (except Gamma) to the projector.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x21	0x89	0x01	0x53	0x53	0x4C	0x44	0x0A
'!(Operation)	PJ	Individual : 1	'S'	'S'	'L'	'D'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The external controller transmits 256 bytes binary data to the projector.

3: External controller →	
256 byte	
Data parameter	

(4) If the projector receives the data (3) above and the command receipt is normal, an ACK is returned from the projector as follows.

4: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(5) The projector sets the picture setting data on the projector.

(Example5) Red muting

Purpose: To mute the red signal.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →								
0x21	0x89	0x01	0x53	0x53	0x4D	0x52	0x31	0x0A
!(Operation)	PJ	Individual : 1	'S'	'S'	'M'	'R'	On	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ←Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector mutes the red signal.

4.15.2 Reference

Use the command as shown in the following examples.

(Example1) Internal temperature confirmation

Purpose: To confirm the internal temperature.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x53	0x53	0x49	0x54	0x0A
'?(Reference)	PJ	Individual : 1	'S'	'S'	'I'	'T'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector transmits the internal temperature of 30□ to the external controller.

3: ← Projector									
0x40	0x89	0x01	0x53	0x53	0x46	0x46	0x31	0x45	0x0A
'@(Response)	PJ	Individual : 1	'S'	'S'	'0'	'0'	'1'	'E'	End

By the above exchange, it can be confirmed that the internal temperature is 30°C.

(Example2) Lamp accumulated time confirmation

Purpose: To confirm the lamp accumulated time.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x53	0x53	0x4C	0x53	0x0A
'?(Reference)	PJ	Individual : 1	'S'	'S'	'L'	'S'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector transmits the lamp accumulated time of 10,000 hours (=600,000 minutes) to the external controller.

3: ← Projector											
0x40	0x89	0x01	0x53	0x53	0x30	0x39	0x32	0x37	0x43	0x30	0x0A
'@(Response)	PJ	Individual : 1	'S'	'S'	600,000 minutes (=0x0927C0)					End	

By the above exchange, it can be confirmed that the lamp accumulated time is 10,000 hours.

(Example3) Picture setting data transmission

Purpose: To receive the current picture setting data (except Gamma) from the projector.

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x53	0x53	0x53	0x56	0x0A
'?(Reference)	PJ	Individual : 1	'S'	'S'	'S'	'V'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector transmits 512 bytes binary data to the external controller.

(Example4) Green mute status confirmation

Purpose: To confirm the status of green signal mute. (Current green mute setting: On)

(1) Transmit the data from the external controller to the projector as follows.

1: External controller →							
0x3F	0x89	0x01	0x53	0x53	0x4D	0x47	0x0A
'?(Reference)	PJ	Individual : 1	'S'	'S'	'M'	'G'	End

(2) If the projector receives the data (1) above and the command receipt is normal, an ACK is returned from the projector as follows.

2: ← Projector					
0x06	0x89	0x01	0x53	0x53	0x0A
ACK	PJ	Individual : 1	'S'	'S'	End

(3) The projector transmits the picture mode to the external controller.

3: ← Projector						
0x40	0x89	0x01	0x53	0x53	0x31	0x0A
'@(Response)	PJ	Individual : 1	'S'	'S'	On	End

By the above exchange, it can be confirmed that the green mute is On.

5 Additional Information for isf Adjustment

5.1 State Transition Diagram

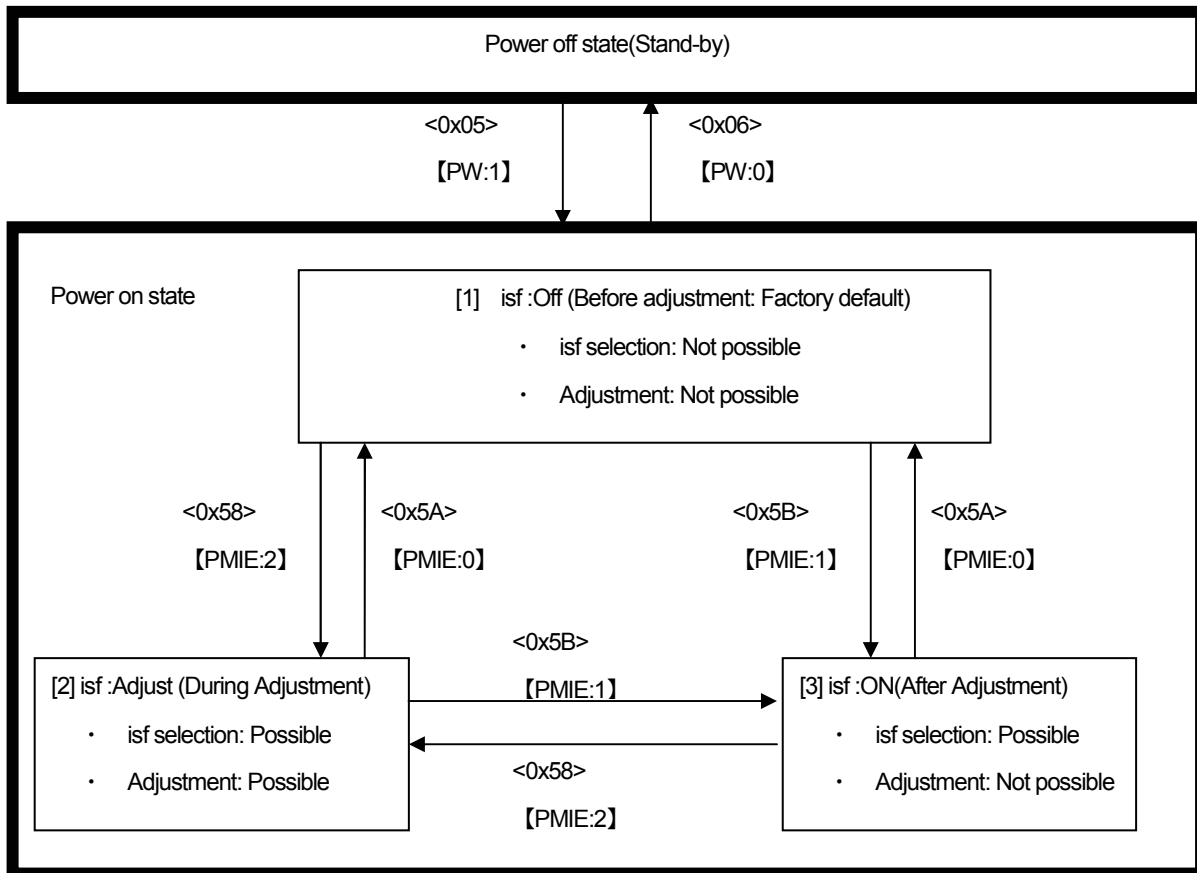


Fig.5-1 State transition chart

- <>: Remote Control code
- 【】 : RS232C Command
- When power goes off during “Adjust(During Adjustment)”, State moves to “ON(After Adjustment)” automatically.
- No Link with THX Adjustment.(THX Adjustment is possible regardless of isf Adjustment mode.)

5.2 Remote Control code

Remote control code relating to isf adjustment is as follows.

Table 5-1 Remote control code relating to isf

No	Remote control code	Meaning	Comments
1	0x05	Power On	Power on when PJ is in stand-by state.
2	0x06	Power Off	Power off when PJ is in power-on state.
3	0x58	isf Adjust State	Move to isf Adjustment state.
4	0x5A	isf Off	Move to isf Off state (Factory default)
5	0x5B	isf On	Move to isf After Adjustment state

6 Additional Information for THX Adjustment

6.1 State Transition Diagram

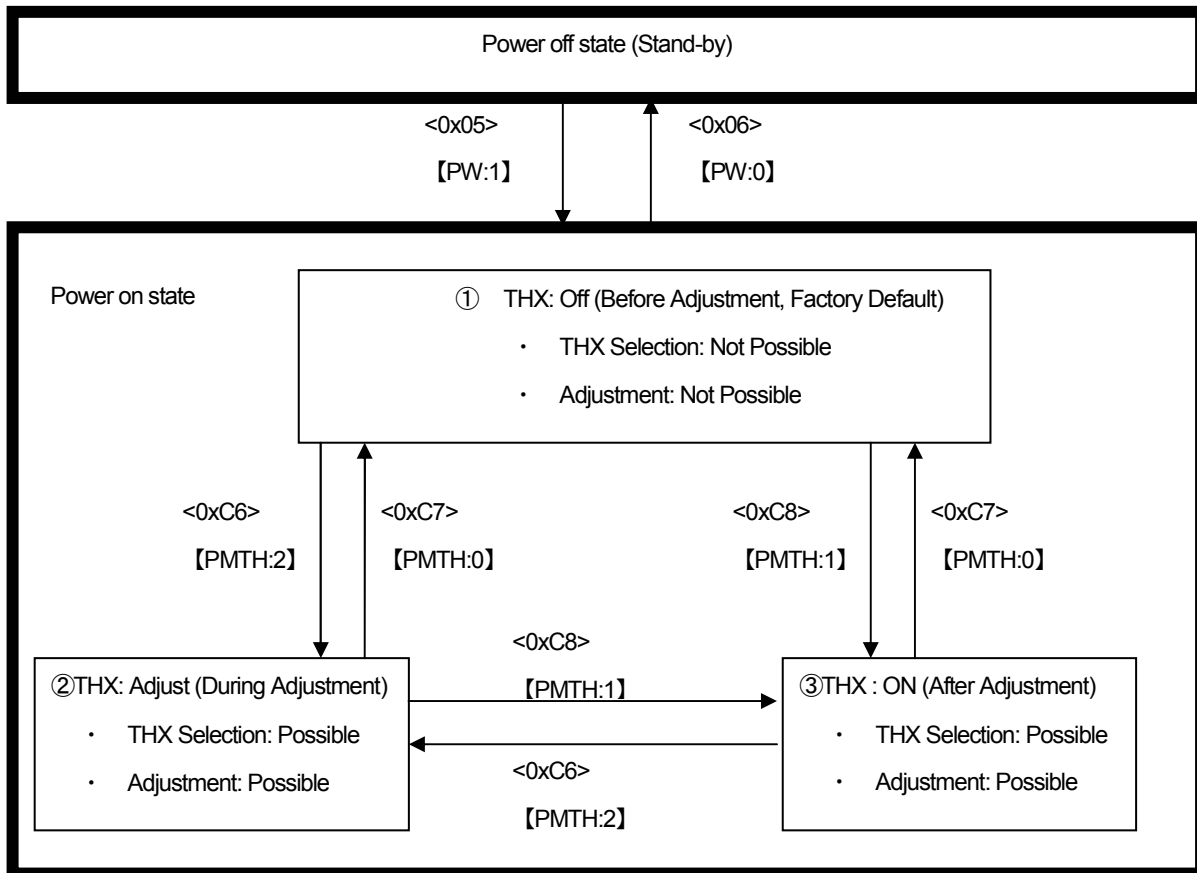


Fig.6-1 State transition chart

- <>: Remote Control code
- 【】: RS232C Command
- When power goes off during "Adjust(During Adjustment)", State moves to "ON(After Adjustment)" automatically.
- No Link with isf Adjustment.(isf Adjustment is possible regardless of THX Adjustment mode.)

6.2 Remote Control Code

Remote control code relating to THX adjustment is as follows.

Table 6-1 Remote Control code relating to THX

No	Remote control code	Meaning	Comments
1	0x05	Power On	Power on when PJ is in stand-by state.
2	0x06	Power Off	Power off when PJ is in power-on state.
3	0xC6	THX Adjustment State	Move to THX Adjustment state.
4	0xC7	THX Off	Move to THX Off state (Factory default)
5	0xC8	THX On	Move to THX After Adjustment state

End of specification